


Digiplex Control Panel (DGP-848) - V4.1

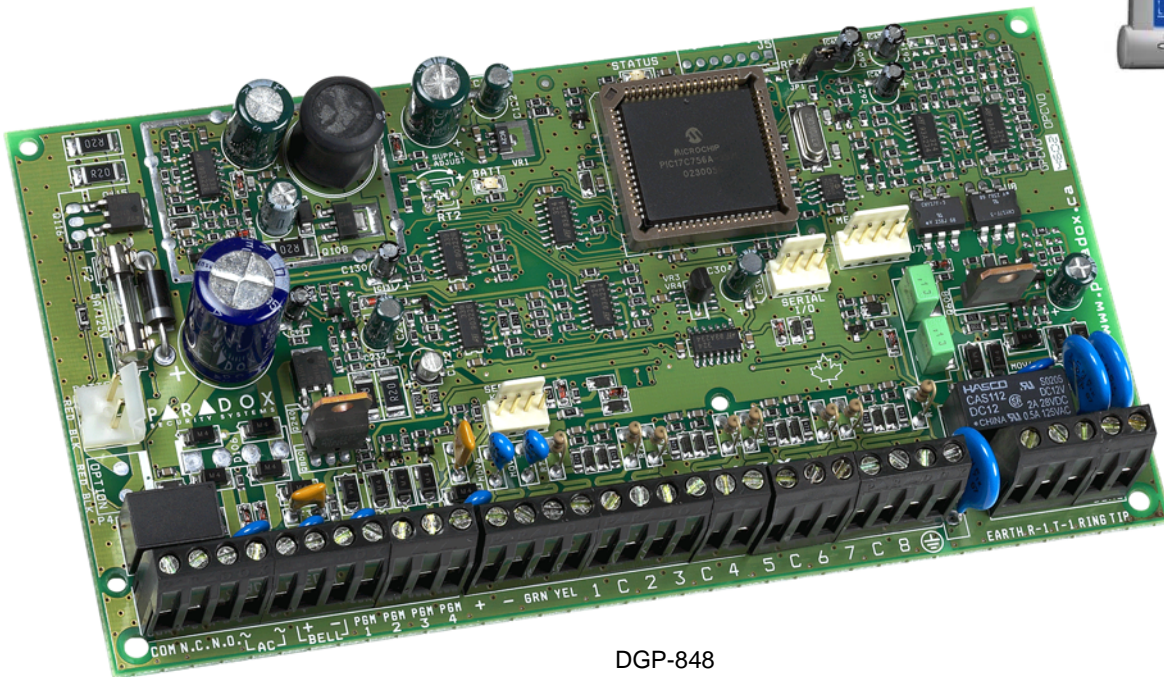

DGP-848

Reference and Installation Manual

Includes DGP2-641BL/RB Installation Instructions

Table of Contents

Introduction	1	Ring-back.....	21
Features.....	1	Switch To Stay Arming.....	21
Specifications.....	1	Always Force Arm When Regular Arming.....	21
Installation	2	Alarm Options	22
Location & Mounting.....	2	Bell/Alarm Output.....	22
Earth Ground.....	2	Bell Cut-off Timer.....	22
AC Power.....	2	Wireless Transmitter Supervision Options.....	22
Backup Battery.....	2	Tamper Recognition Options.....	22
Auxiliary Power Terminals.....	2	Keypad Panic Options.....	23
Telephone Line Connection.....	2	Event Reporting	24
Bell/Siren Output.....	2	Reporting Enabled.....	25
Calculating Power Requirements.....	4	Report Codes.....	25
Programmable Outputs.....	6	Monitoring Station Phone Number.....	27
Combus Connections.....	6	Partition Account #.....	27
Single Zone Connections.....	6	Reporting Formats.....	27
Double Zone Connections.....	7	Event Call Direction.....	27
Keypad Zone Connections.....	7	Recent Close Delay.....	28
Keyswitch Connections.....	7	Auto Test Report.....	28
Fire Circuits.....	7	Power Fail Report Delay.....	28
Programming Methods	9	Disarm Reporting Options.....	28
Panel Programming Mode.....	9	Zone Restore Report Options.....	28
Module Programming Mode.....	9	Pager Delay.....	28
Feature Select Programming.....	9	Auto Report Code Programming.....	28
Decimal Programming.....	9	Closing Delinquency.....	29
Hexadecimal Programming.....	9	Dialer Options	29
Level Programming.....	10	Telephone Line Monitoring.....	29
Paradox Memory Key.....	10	Tone/pulse Dialing.....	29
Zone Programming	11	Pulse Ratio.....	29
Zone Numbering.....	12	Busy Tone Detection.....	30
Zone Definitions.....	12	Switch To Pulse.....	30
Zone Partition Assignment.....	13	Bell On Communication Fail.....	30
Zone Options.....	13	Dial Tone Delay.....	30
Zone Labels.....	14	Programmable Outputs	30
Input Speed.....	16	PGM Activation Event.....	30
EOL Zones.....	16	PGM Deactivation Event.....	31
Zone Doubling (ATZ).....	16	PGM Deactivation Option.....	31
Keyswitch Programming	17	PGM1 Is Smoke Input.....	31
Keyswitch Numbering.....	17	PGM Programming Table	32
Keyswitch Definitions.....	18	System Settings & Commands	35
Keyswitch Partition Assignment.....	18	Hardware Reset.....	35
Keyswitch Options.....	18	Software Reset.....	35
Arming & Disarming Options	19	Battery Charge Current.....	35
Arming Follows Partition.....	19	Installer Code Lock.....	36
Restrict Arming On Battery/AC Failure.....	19	Partitioning.....	36
No Arming On Tamper.....	19	Installer Function Keys.....	36
No Arming On Supervision Loss.....	19	System Date & Time.....	36
Timed Auto-Arming.....	19	Shabbat Feature.....	36
No Movement Auto-Arming.....	20	Module Reset.....	36
Auto-Arming Options.....	20	Locate Module.....	36
One-Touch Features.....	20	Module Programming.....	37
Exit Delay.....	20	Module Broadcast.....	37
Keypad Lock-out Feature.....	20	Remove Module.....	37
Maximum Bypass Entries.....	21	Serial Number Viewing.....	37
Display "Bypass" If Armed.....	21		
Bell Squawk.....	21		

Power Save Mode	37	PC Password.....	44
Auto Trouble Shutdown	37	PC Telephone Number.....	44
No AC Fail Display.....	37	Call WinLoad.....	44
Access Codes	38	Answer WinLoad	44
Installer Code.....	38	Event Buffer Transmission	44
Access Code Length.....	38	Call Back Feature.....	45
System Master Code	38	User Features.....	45
Programming Access Codes	38	Arming and Disarming Features.....	45
User Options.....	39	Bypass Programming	46
User Partition Assignment	39	Chime Zones	46
Access Control.....	39	Access Codes	46
Multiple Action Feature	40	Normal and Confidential Modes	46
Access Control	41	Keypad Settings	47
Programming Access Control Overview	41	Trouble Display	47
Common Access Control Terms.....	41	Trouble Latch	48
Enable Access Control	41	Clear Bell Limit Trouble	48
Assigning The Module To A Door.....	41	Event Record Display.....	49
Door Access Mode	41	Appendix 1: DGP2-641BL/RB Installation	
Access Levels.....	42	Instructions	50
Schedules	42	Index	58
Holiday Programming	42	Warnings	62
Logging Access Control Events.....	42	Warranty	63
Global Access Door Features.....	43		
WinLoad Software	44		
Answering Machine Override.....	44		
Ring Counter.....	44		
Panel Identifier.....	44		

Introduction

Paradox Security Systems has once again redefined the boundaries of the security industry and is proud to introduce the Digiplex control panel. A new generation in control panel technology, the Digiplex control panel uses a quad-wire combus that provides power and two-way communication for up to 95 modules (keypads, motion detectors, expansion modules, etc.). This, combined with four true partitions, event call direction and the zone numbering feature, simplifies the task of installing or making changes to your security system. The innovative new programming method makes programming the control panel logical and much simpler to execute. This new generation of control panels offers increased capabilities with countless new features without compromising its user-friendliness. If anything, these new control panels are easier to use and easier to install, making the Digiplex control panel the ultimate in reliable security protection.

CTR-21 APPROVAL

The Digiplex DGP-848 control panel meets the European Union Common Technical Requirement CTR-21. The CTR-21 requirement is an electrical standard that defines the analogue interface for all two-wire telecommunications equipment (i.e. DECT, PABXs, etc.) intended for connection to the Public Switched Telephone Network. This allows the Digiplex control panel to be used in as many as 19 countries such as Belgium, Germany, Greece, Portugal, Sweden and Switzerland. Uploading or downloading with the WinLoad Security System Management Software is up to 30% faster due to some of the changes required for CTR-21 approval.

1.1 Features

- Digital multiplexed system
- Digital, four-wire combus:
 - ◆ Provides power and two-way communication to all modules connected to the combus.
 - ◆ one combus for up to 95 modules
 - ◆ All modules have Plug and Play capability
 - ◆ Connect modules up to 3000ft (914m) from the panel.
 - ◆ Full supervision and sabotage-proof technology without additional wiring
- Up to 48 addressable zones
- 8 independent keyswitch zones (does not use any of the 48 zones)
- 8 on-board hardwired input terminals
- 4 True Partitions:

Most features and options in the Digiplex System can be independently set for each partition such as event reporting, entry/exit delay, bell squawk, quick arming, panics and many more. All zones, keyswitches, user codes and keypads are

assigned to specific partitions, making this a true partitioned system.

- 95 User Codes, 1 Installer Code and 1 System Master Code
- Up to 5 fully programmable outputs (PGMs) are available. (PGM1 can be set as a two-wire smoke detector input. PGM5 is an optional 5A relay.)
- Simple, direct and logical programming
- Event Call Direction:

The Digiplex control panel events are divided into three event groups for each partition and two system event groups. Each event group can be programmed with a separate dialing sequence for each partition.
- 4 Monitoring station telephone numbers
- SIA, Contact ID, Pager Format and many more Communicator Formats
- Remote and local programming of all modules
- Upload/download capability using new WinLoad Security System Management software for Windows®.
- Addressable PIRs and door contacts
- And much, much, more

1.2 Specifications

Control Panel

- AC Power: 16Vac, 20/40VA, 50-60Hz
- Battery: 12Vdc, 4Ah minimum
- Aux. Power: 12Vdc 600mA typical, 700mA maximum, fuseless shutdown at 1.1A
- Bell Output: 1A, fuseless shutdown @ 3A
- PGM Output: PGM1 (100mA), PGM2 - PGM4 (50mA) and PGM5 (5A optional relay)
- Event Buffer: 1024 events
- All control panel outputs are rated to operate between 10.8Vdc and 12.1Vdc

GENERAL NOTE

When programming with the Grafica keypad (DNE-K07), the steps may differ. If not indicated, please refer to Grafica's complete user manual available on our website at paradox.com.


Installation

2.1 Location & Mounting

Before mounting the cabinet, push the five white nylon mounting studs into the back of the cabinet. Pull all cables into the cabinet and prepare them for connection before mounting the circuit board into the back of the cabinet. Select an installation site that is not easily accessible to intruders and leave at least 2" around the panel box to permit adequate ventilation and heat dissipation. The installation site should be dry and close to an AC source, ground connection and telephone line connection.


2.2 Earth Ground

Connect the zone and dialer ground terminals from the control panel to the cabinet and cold water pipe or grounding rod as per local electrical codes.

 **For maximum lightning protection, use separate earth grounds for the zone and dialer grounds as shown in Figure 3 on page 3.**

2.3 AC Power

Use a 16.5Vac (50/60Hz) transformer with a minimum 20VA rating to provide sufficient AC power. For increased power you can use a transformer with a 40VA rating. *For UL Listed systems, use the Universal transformer model #UB1640W.* Do not use any switch-controlled outlets to power the transformer. Connect the transformer as shown in Figure 3 on page 3.

 **During power up, the control panel will begin a module scan (see section 12.6 on page 36) that will last between 30 and 120 seconds.**

 **Do not connect the transformer or the backup battery until all wiring is completed.**

2.4 Backup Battery

In order to provide power during power loss, connect a 12Vdc 4Ah/7Ah rechargeable acid/lead or gel cell backup battery (YUASA model #NP7-12 recommended) as shown in Figure 3 on page 3. Connect the backup battery after applying AC power. When installing, verify proper polarity, as reversed connections will blow the battery fuse. For information on how to set the Battery Charge Current to either 350mA or 850mA, please refer to section 12.3 on page 35.

2.4.1 Battery Test

The control panel conducts a dynamic battery test under load every 64 seconds. If the battery is disconnected, if its capacity is too low or if the battery voltage drops to 10.5 volts or less when there is no AC, the "Battery Trouble" message will appear in the Trouble Display. At 8.5 volts, the panel shuts down and all outputs close.

2.5 Auxiliary Power Terminals


You can use the auxiliary power supply to power the motion detectors, keypads and other accessories in your security system. A fuseless circuit protects the auxiliary output against current overload and automatically shuts down if the current exceeds 1.1A.

Auxiliary power will resume once the overload condition has restored. For details on available output power, please refer to Figure 3 on page 3. For more information on how to calculate system consumption, refer to *Calculating Power Requirements* on page 4.

2.6 Telephone Line Connection

Connect the incoming telephone company wires into the TIP and RING connections of the control panel. Then run the wires from T1 and R1 to the telephone system as shown in Figure 1.

Figure 1: Telephone Line Connections

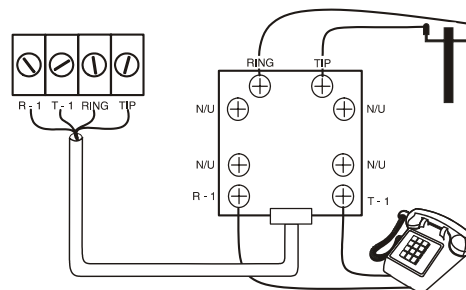

2.7 Bell/Siren Output

The BELL+ and BELL- terminals power bells and/or other warning devices that require a steady voltage output during an alarm. The bell output supplies 12Vdc upon alarm and can support two 20-watt sirens or one 30-watt siren. The bell output uses a fuseless circuit and will automatically shut down if the current exceeds 3A. If the load on the BELL terminals returns to normal ($\leq 3A$), the control panel will re-instate power to the BELL terminals. When connecting sirens, please verify correct polarity as shown in Figure 2. Please note that PGM5 is rated at 5A and can be used to power bells and/or other warning devices (see Figure 2 on page 2) by programming it as a bell/siren output. Please refer to Programmable Outputs in section 10 on page 30.


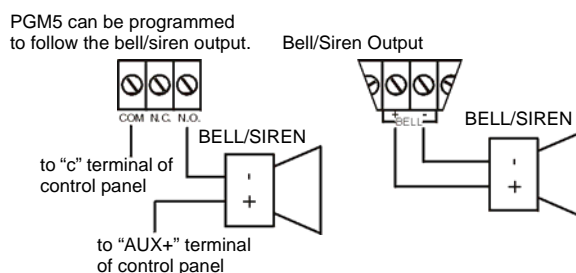
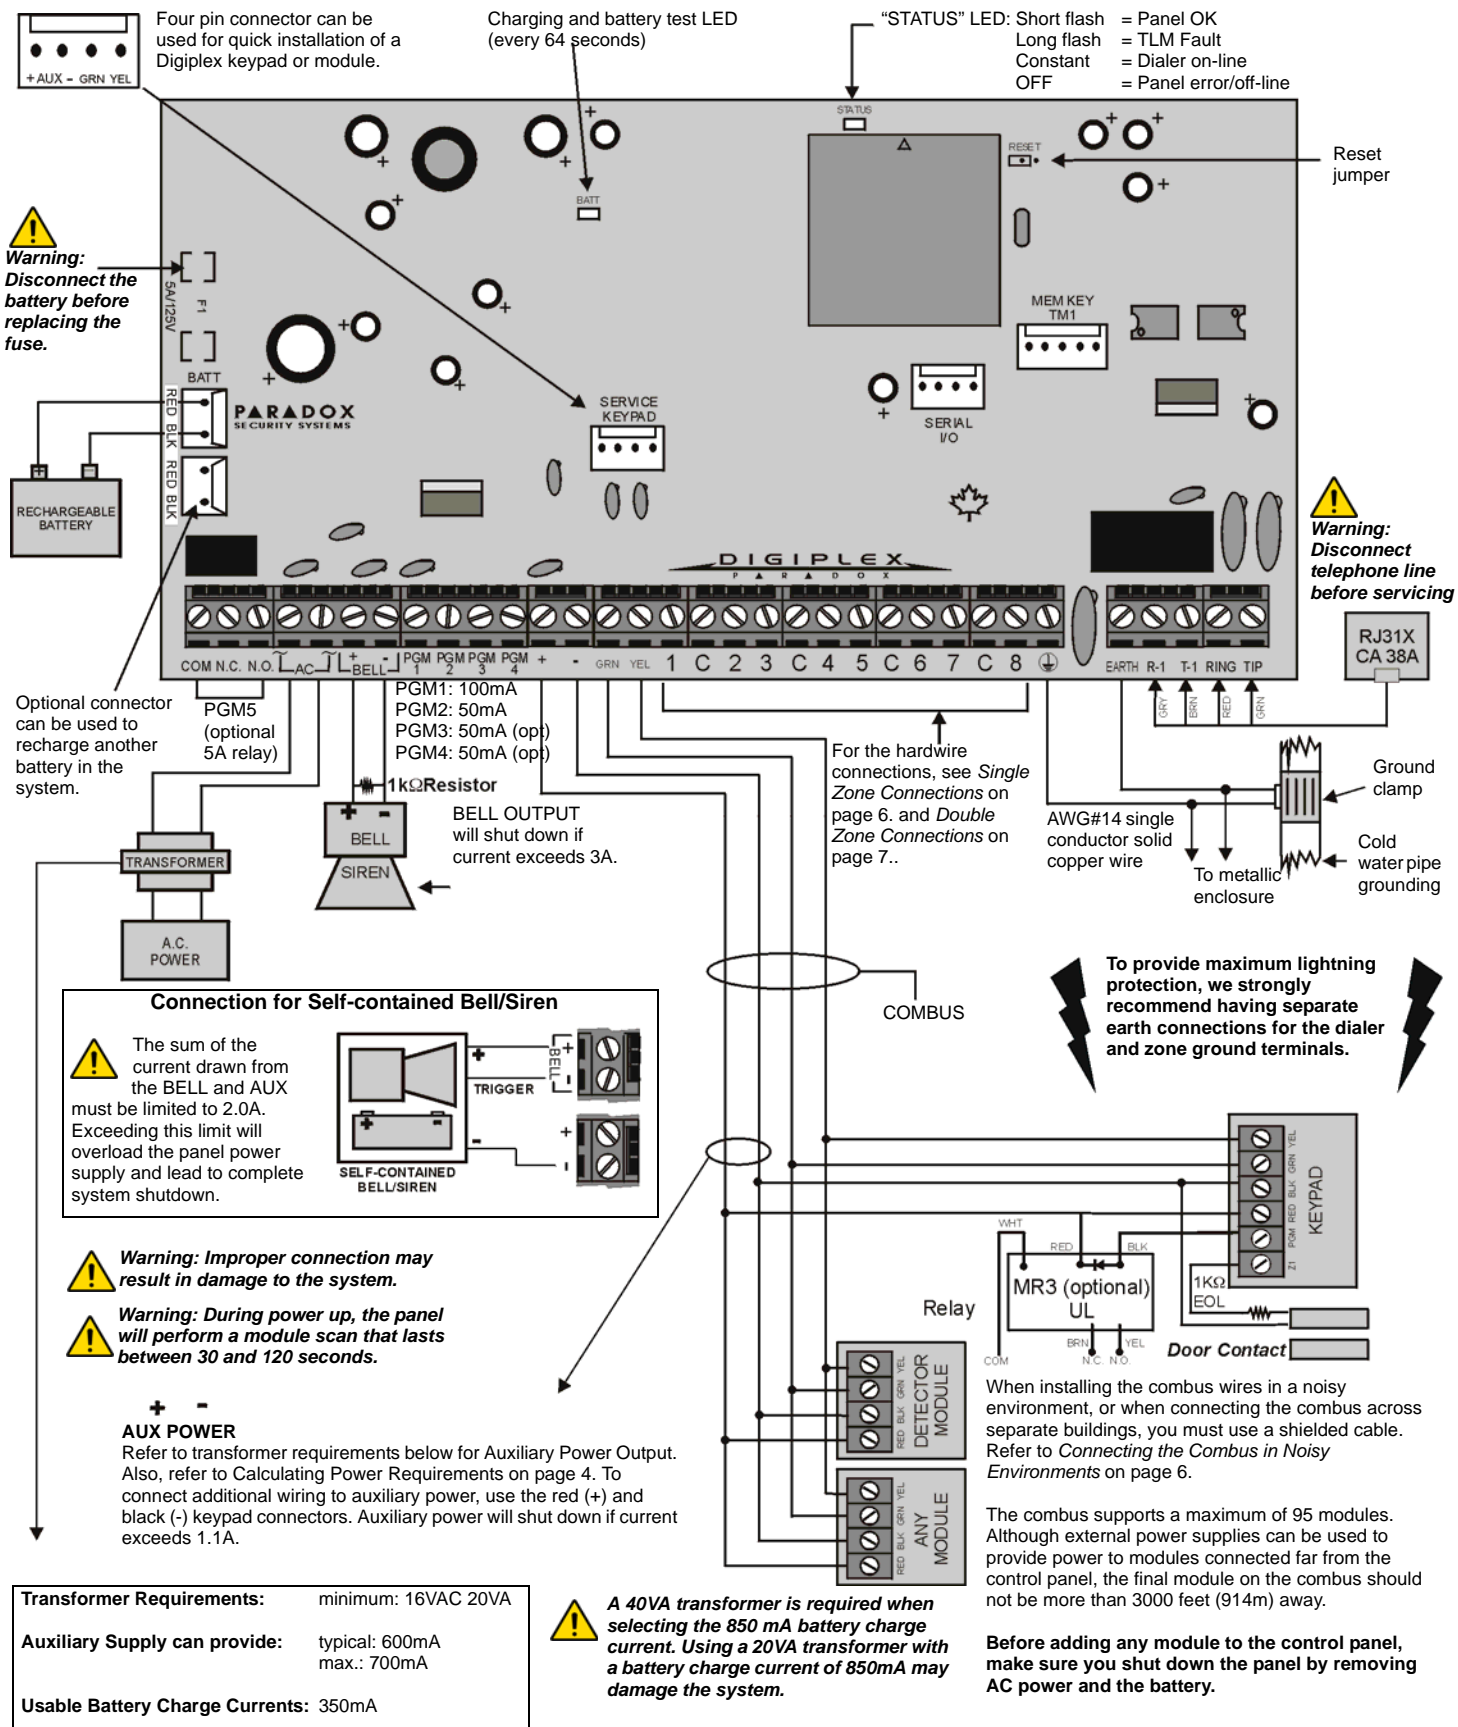
 **When the bell/siren output is not used, the "Bell Absent" message will appear in the Trouble Display. To avoid this, connect a 1k Ω resistor across the bell output.**

Figure 2: Bell/Siren



For connection of self-contained bell/siren, see Figure 3.

Figure 3: Digiplex Control Panel PCB Layout



Warning: For UL/C-UL warnings and requirements, see Warnings on page 60.

2.8 Calculating Power Requirements

Table 1: Milliamp Consumption Table

Description	QTY.	mA used by each	Total mA
Grafica Graphic LCD Keypads (DNE-K07):	_____	X 130mA =	_____ mA
LCD Keypads (DGP2-641BL):	_____	X 110mA =	_____ mA
LCD Keypads with Built-in Reader (DGP2-641RB):	_____	X 120mA =	_____ mA
Icon LCD Keypads (DGP2-640):	_____	X 95mA =	_____ mA
LED Keypads (DGP2-648BL):	_____	X 110mA =	_____ mA
Motion Detector Modules (DGP2-50/60/70, DG85W):	_____	X 30mA =	_____ mA
Door Contact Modules(DGP2-ZC1):	_____	X 30mA =	_____ mA
1-Zone Expansion Modules (DGP2-ZX1):	_____	X 30mA =	_____ mA
4-Zone Expansion Modules (APR3-ZX4):	_____	X 30mA =	_____ mA
8-Zone Expansion Modules (APR3-ZX8):	_____	X 30mA =	_____ mA
Magellan Wireless Expansion Modules (MG-RCV3):	_____	X 35mA =	_____ mA
4-PGM Expansion Modules (APR3-PGM4):	_____	X 150mA =	_____ mA
Printer Modules (APR3-PRT1):	_____	X 40mA =	_____ mA
InTouch Voice-Assisted Arm/Disarm Modules (APR3-ADM2):	_____	X 105mA =	_____ mA
DVACS Module (DGP2-DVAC):	_____	X 40mA =	_____ mA
Annunciator Module (DGP2-ANC1B)	_____	X 20mA =	_____ mA
Access Control Module (DGP-ACM11)	_____	X 120mA =	_____ mA
Note: The DGP-ACM11 consumes 130mA from its own power supply or 120 mA when connected to the combus for power.			
Maximum available power units = 700mA	GRAND TOTAL		_____ mA

- STEP 1:** Using Table 1, calculate the total number of milliamps (mA) required by each device, module, and accessory in the system. Please take into account devices connected to the control panel's PGM outputs. Since the BELL output has its own power supply, do not include the sirens connected to it in the calculation.
- STEP 2:** If the Grand Total is less than 700mA, go to step 3. If the value is greater, you will require an external power supply (see Figure 5 on page 5) to provide the additional power needed. Proceed with step 3 and refer to the example in Figure 4 on page 5.
- STEP 3:** Due to the degradation of a power signal over long distances, **EACH** length or run of wire in the system can support only a specific number of milliamps (mA). Using Table 2, determine how many milliamps each length of wire can support. Please note that the total number of milliamps (mA) can never surpass 700mA.


Table 2: Milliamp Limitations For Each Run of Wire

Gauge: 18AWG, Surface: 0.823mm²	
Length of each run of wire	Available Milliamps (mA)
30m(100ft.)	700
61m(200ft.)	700
91m(300ft.)	700
122m(400ft.)	700
152m(500ft.)	690
183m(600ft.)	575
213m(700ft.)	493
244m(800ft.)	431
274m(900ft.)	383
305m(1000ft.)	345
457m(1500ft.)	230
610m(2000ft.)	172
762m(2500ft.)	138
914m(3000ft.)	115

Gauge: 22AWG, Surface: 0.326mm²	
Length of each run of wire	Available Milliamps (mA)
30m(100ft.)	700
61m(200ft.)	682
91m(300ft.)	454
122m(400ft.)	341
152m(500ft.)	273
183m(600ft.)	227
213m(700ft.)	195
244m(800ft.)	170
274m(900ft.)	151
305m(1000ft.)	136

Gauge: 24AWG, Surface: 0.205mm²	
Length of each run of wire	Available Milliamps (mA)
30m(100ft.)	700
61m(200ft.)	429
91m(300ft.)	286
122m(400ft.)	214
152m(500ft.)	171
183m(600ft.)	143


Figure 4: Sample Power Requirement Calculations

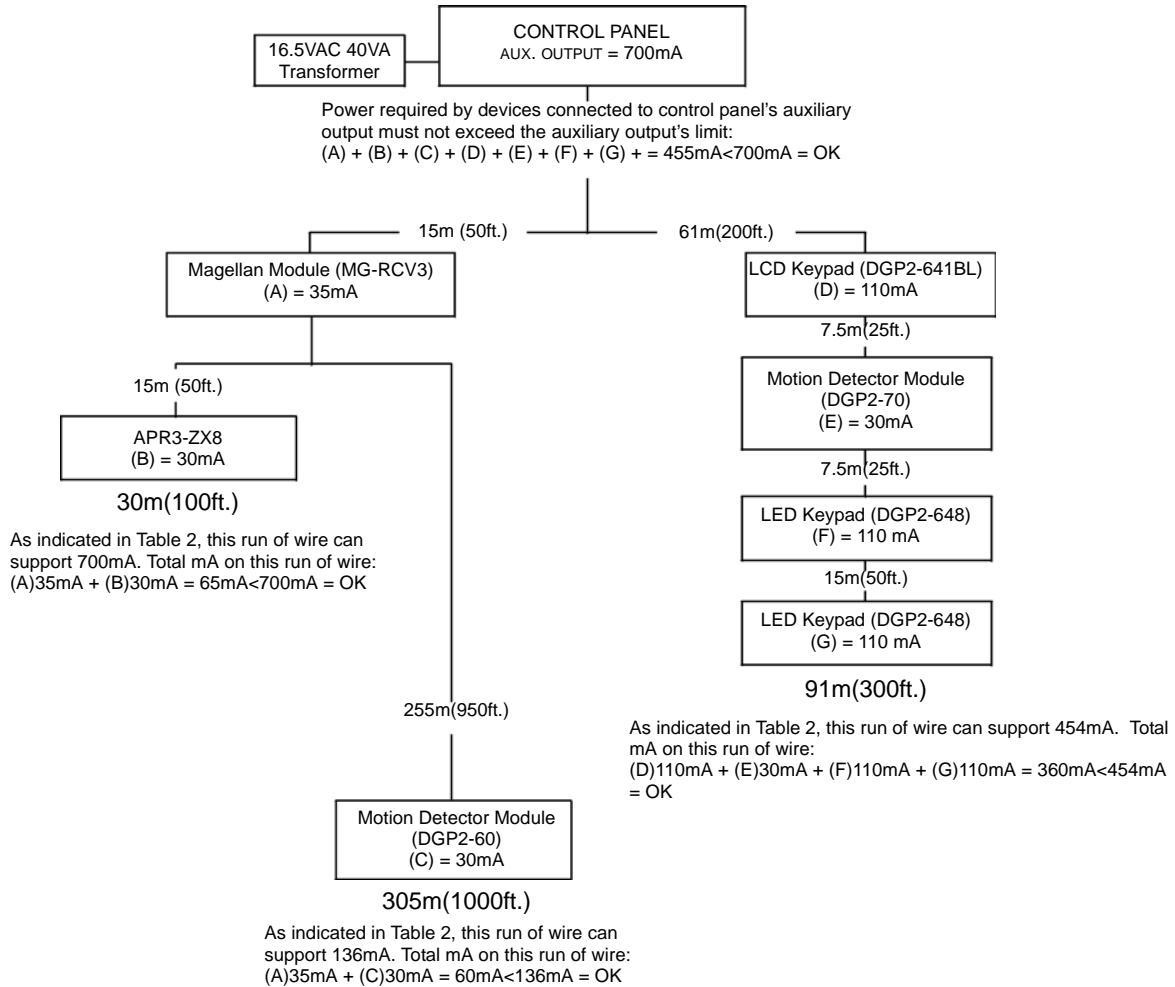

If in the above example you were to add an LCD Keypad (110mA) to the 30m (100ft), you would not exceed the wire's limit. But adding the LCD Keypad to the 305m (1,000ft) wire or 91m (300ft) wire would exceed the wire's limits, thereby causing devices to function at decreased capacity.

Figure 5: External Power Supply Connections

Milliamps required by devices connected to a power supply do not draw power from the control panel's auxiliary output.

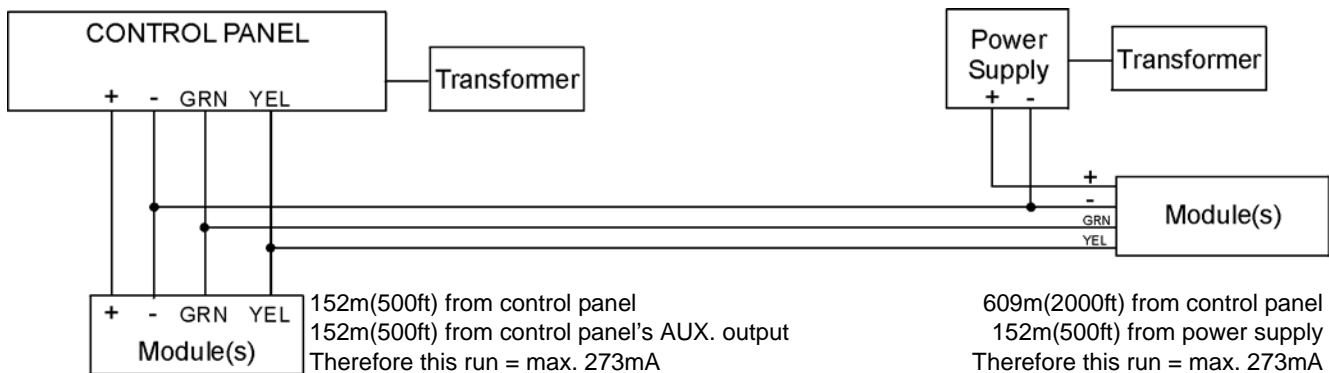


⚠ Do not use the same transformer for the control panel and the external power supplies. Modules should never be installed more than 914m (3,000 ft) from the control panel.

2.9 Programmable Outputs

The Digiplex control panel comes standard with PGM1 and PGM2. PGM3 to PGM5 are optional. When a specific event or condition occurs in the system, a PGM can be programmed to reset smoke detectors, activate strobe lights, open/close garage doors and much more. For details on how to program the PGMs, refer to section 10 on page 30.

PGM1 provides a maximum 100mA output, PGM2 to PGM4 provide a maximum 50mA output and PGM5 is a relay output that provides a maximum of 5A. If the current draw on the PGM is to exceed the current output, we recommend the use of a relay as shown in Figure 6. PGM1 to PGM4 are normally open outputs and PGM5 is a normally open or normally closed 5A relay. Also, note that PGM1 can be programmed as a 2-wire smoke detector input. For more information, refer to section 2.15.1 on page 7 and section 10.4 on page 31 of this manual.

Figure 6: PGM Relay Output

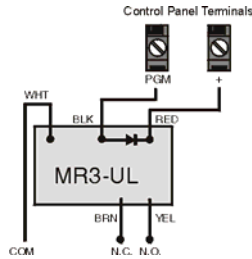

2.10 Combust Connections

The combus is a 4-wire combus that provides power and two-way communication between the control panel and all modules connected to it. All addressable detection devices, keypads and Digiplex modules are connected to the combus, which can support up to 95 modules. Connect the four terminals labeled RED, BLK, GRN and YEL of each detector, keypad or module to the corresponding terminals of the control panel as shown in Figure 3 on page 3. Please note that all modules can be connected in a star and/or daisy chain configuration. The final device on the combus should not be more than 914m (3000ft) from the control panel. The total run of every wire in the system must not exceed 914m (3000ft). For example, if 10 runs of wire are each 305m (1000ft), the total would exceed the system's capacity. For information on how to assign a detection device to a zone in the control panel, please refer to *Zone Programming* on page 11.



Before connecting a module to the control panel, shutdown the control panel by removing AC and battery power.

2.10.1 Connecting the Combust in Noisy Environments

When installing the combus wires in proximity to high electrical interference such as neon lights, motors, high-voltage wiring, transformers, or when connecting the combus across separate buildings, you must use shielded cables. Connect the shielded cable as detailed below:

Within the Same Building: Strip the outer jacket at one end of the shielded cable to expose the shield and connect the shield to the control panel ground (not the dialer ground), while leaving the shield at the other end of the cable open (floating).


Across Separate Buildings: Strip the outer jacket at one end of the shielded cable to expose the shield. In the same building that

houses the control panel, connect the exposed shield to a cold water pipe or any other earth ground available, while leaving the shield at the other end of the cable open (floating). The same configuration applies for any subsequent building.

2.11 Single Zone Connections

In addition to the combus, the Digiplex control panel includes eight hardwired input terminals for use with traditional hardwired door contacts, smoke detectors and/or motion detectors. One to eight-Zone Expansion Modules that connect to the combus are also available. Devices connected to hardwired input terminals must be assigned to a zone and the zone's parameters must be defined. Please refer to *Zone Programming* on page 11. for more information. Figure 7 demonstrates single zone (ATZ disabled) hardwire input terminal connections recognized by the Digiplex system. For UL listed installations, use EOL resistor part #2011002000.


Figure 7: Single Zone Input Connections

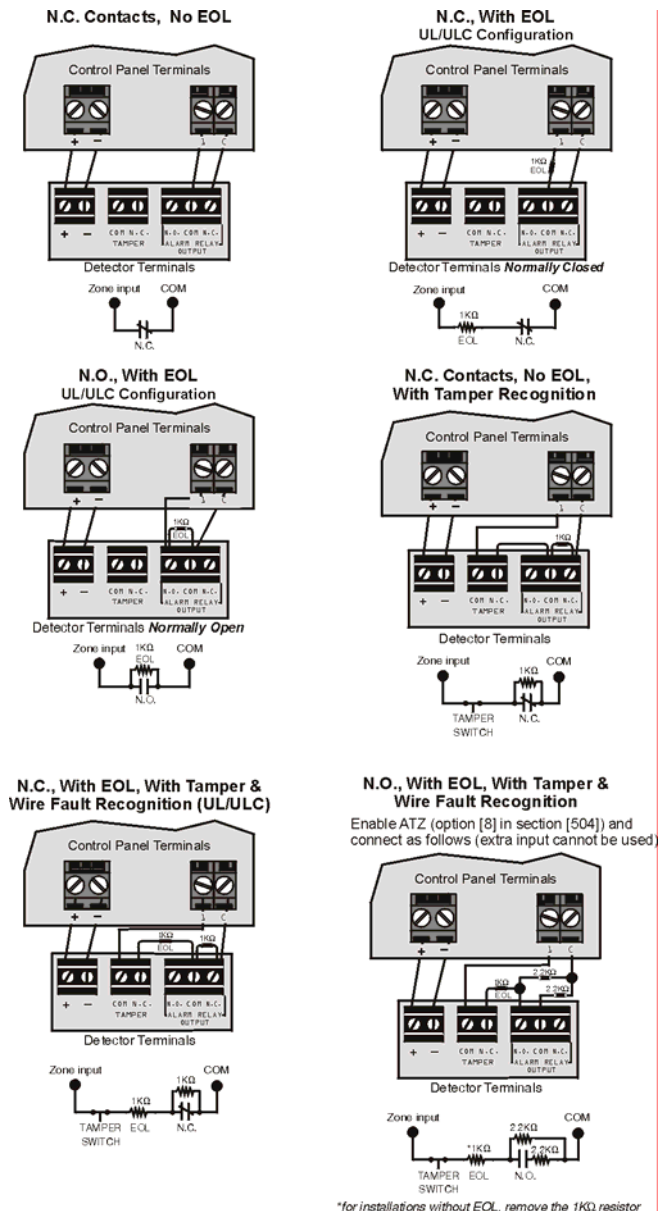

2.12 Double Zone Connections

Enabling the ATZ feature (see section 4.8 on page 16) allows you to install two detection devices per input terminal. The ATZ feature is a software oriented feature. Simply connect the devices as shown in Figure 8. Devices connected to input terminals must be assigned to a zone and the zone's parameters must be defined. Please refer to *Zone Programming* on page 11. for more information. For UL listed installations, use EOL resistor part #2011002000.

Figure 8: Double Zone Connections

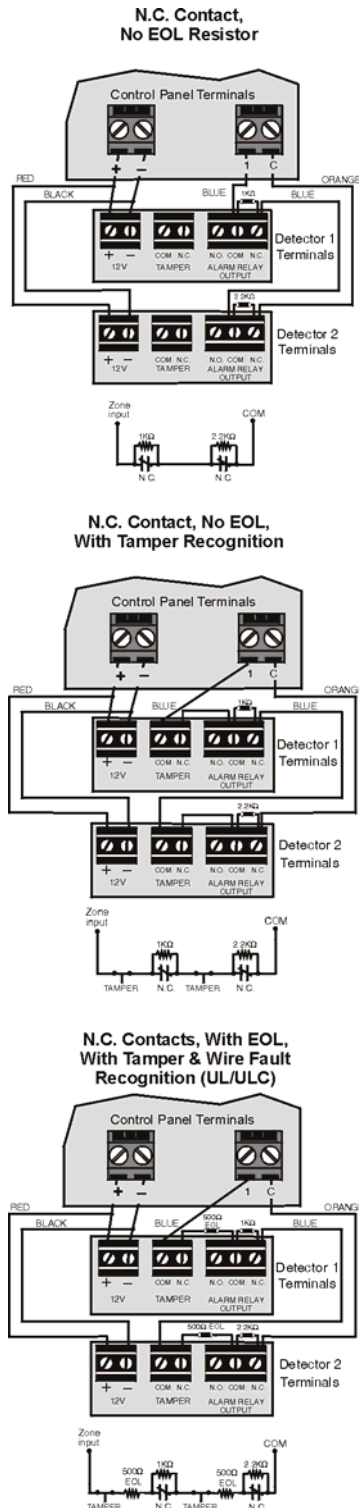

2.13 Keypad Zone Connections

Each LED and LCD keypad has one hardwired input terminal allowing you to connect a detector or door contact directly to the keypad. For example, a door contact located at the entry point of an establishment can be wired directly to the input terminal of the entry point keypad instead of all the way to the control panel.


⚠ Even with the ATZ feature enabled in the control panel, only one device can be connected to the keypad's hardwired input terminal. Tamper is not recognized on keypad zones. The keypad zone follows the control panel's EOL definition.

A device connected to the keypad's input terminal must be assigned to a zone in the control panel and the zone's parameters must be defined (see *Zone Programming* on page 11.). The keypad will communicate the status of the zone to the control panel via the combus. The detection device is connected as shown in Figure 3 on page 3.

2.14 Keyswitch Connections

Connect the keyswitches to the keypad, control panel, or Zone Expansion Module's hardwired input terminals as shown in Figure 9. Once a keyswitch is connected, it must be assigned a keyswitch zone and its parameters must be defined as described in *Keyswitch Programming* on page 17.

Figure 9: Keyswitch Connections

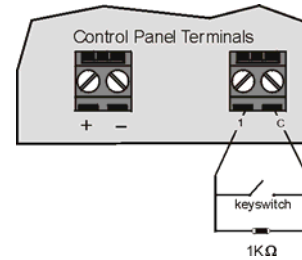

2.15 Fire Circuits

Connect the smoke detectors used in the security system using any of the following methods. Smoke detectors connected to the control panel or zone expansion input terminals must be assigned to a zone in the control panel and the zone's parameters must be defined as a Fire Zone. For more details, refer to *Zone Programming* on page 11.

2.15.1 Smoke Detector Installation (2-Wire)


PGM1 can be defined as a 2-wire smoke detector input (see section 10.4 on page 31) enabling smoke detectors to be connected as shown in Figure 10 on page 8. Fire Zones must use a 1kΩ EOL resistor. If there is a line short or if the smoke detector becomes active, whether the system is armed or disarmed, the control panel will generate an alarm. If the line is open, the "Zone Fault" trouble indication will appear in the Trouble Display and will transmit the appropriate report code to the monitoring station (if programmed).

2.15.2 ESL CleanMe™ Installation

The DigiPlex control panel supports the use of ESL smoke detectors that have the CleanMe™ feature. The ESL smoke detectors are connected exactly like standard smoke detectors as shown in Figure 10 on page 8. Please note that you should avoid connecting more than 20 ESL smoke detectors. When an ESL

smoke detector sends a CleanMe™ signal, the control panel will generate a Zone Fault trouble and if programmed will transmit the Fire Loop report code to the monitoring station. The trouble will be cleared if there is no CleanMe™ signal for 255 seconds. If an alarm occurs, the trouble will be cleared until it is detected again.

Figure 10: PGM1 2-wire Smoke Detector Input

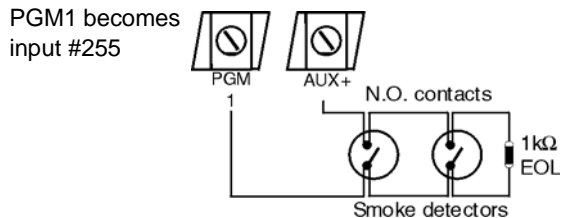

When using ESL smoke detectors with the CleanME™ feature, do not connect more than 20 detectors in parallel.


2.15.3 Smoke Detector Installation (4-Wire)

Connect the 4-wire smoke detectors and a relay as shown in Figure 11. Recommended: The System Sensor model 2112/24D smoke detectors. To comply with UL955, the 4-wire smoke detectors must be installed using 18 gauge wire. In the event power is interrupted, the relay will cause the control panel to transmit the Fire Loop Trouble report if programmed in section [707]. To reset (unlatch) the smoke detector after an alarm, verify that the negative (-) of the smoke detector is connected to a PGM as shown in Figure 11. Then program the PGM with the “Smoke Reset” activation event (see section 10.1 on page 30) to interrupt power to the smoke detector for four seconds when the [CLEAR] and [ENTER] (LCD keypads) or [*] and [#] (Grafica keypads) keys are pressed and held for two seconds.

Figure 11: Fire Zones

UL/ULC INSTALLATION

CONTROL PANEL TERMINALS

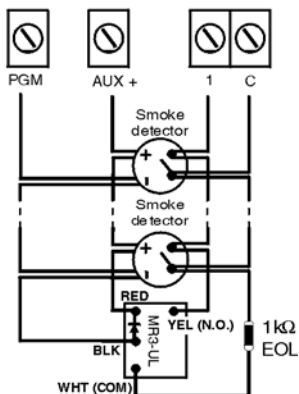

Single Fire Zone Connections Only

If the ATZ feature is enabled, do not use the extra input (i.e. in the above example, input 009 cannot be used as a zone).



It is recommended that all 2-wire and 4-wire smoke detectors be connected in a daisy chain configuration.

Programming Methods

The Digiplex control panel can be programmed using the WinLoad software, the Paradox Memory Key, or manually by using an LCD (DGP2-641BL) or Grafica (DNE-K07) keypad. We highly recommend programming the control panel with WinLoad as it greatly simplifies the process and reduces potential data errors. Please refer to *WinLoad Software* on page 44. for details on how to set up the control panel to function with WinLoad.

You can also copy the programmed contents of one Digiplex control panel into as many Digiplex control panels as you need by using the Paradox Memory Key (see section 3.7 on page 10). Each control panel is programmed in less than 5 seconds.

Keypads and other modules can also be programmed easily by using Module Broadcast (see section 12.12 on page 37). Once a module is programmed, its sections can be sent to other similar modules through the combus.

3.1 Panel Programming Mode

Use the *Programming Guide* to keep track of which sections were programmed and how. In order to program anything in the Digiplex control panel you must enter panel programming mode.

TO PROGRAM IN PANEL PROGRAMMING MODE:

- 1) Press and hold the **[0]** key.
- 2) Enter the **[INSTALLER CODE]** (Default is 000000).
- 3) Enter the 3-digit **[SECTION]**.
Every feature and/or option is programmed in a three-digit section starting at **[001]**.
- 4) Enter the required **[DATA]**.
The type of data required will be detailed in the *Programming Guide* and/or explained in the appropriate sections of this manual.

For LCD keypads:

After entering the required data, either the control panel will automatically save the data and advance to the next section, or you must press the **[ENTER]** key to save the data and advance to the next section. Press the **[CLEAR]** key to revert to the preceding step or to erase the current data.

For Grafica keypads:

After entering the required data, press Grafica's center action key (**Save**) to save the data and advance to the next section. Press the right action key (**Exit**) to revert to the preceding step or press the left action key (**Clear**) to erase the current data.

3.2 Module Programming Mode

All modules connected to the combus are programmed through an LCD (DGP2-641BL) or Grafica (DNE-K07) keypad in the system. To do so, simply enter *Module Programming Mode* as shown below.

TO PROGRAM IN MODULE PROGRAMMING MODE:

- 1) Press & hold the **[0]** key.
- 2) Enter the **[INSTALLER CODE]** (Default is 000000).
- 3) Enter section **[953]**.
- 4) Enter the 8-digit **[SERIAL NUMBER]** of the module you wish to program.
- 5) Enter the 3-digit **[SECTION]** and required **[DATA]**.
Refer to the *Module's Programming Guide* or the module's Installation manual for details.

The control panel will redirect all programming to the selected module. To exit Module Programming Mode, press the **[CLEAR]** key on LCD keypads, or the right action key (**Exit**) on Grafica keypads, as many times as needed to return to the desired screen. Please note that a module's serial number can be located on the module's PC board or it may already be recorded in the module's Installation Guide.

3.3 Feature Select Programming

Most of the Digiplex control panel options are programmed using the Feature Select Method.

For LCD keypads:

Each number from 1 to 8 corresponds to a specific feature or option. Set these options by turning the number corresponding to the feature ON or OFF. The option is considered ON when the number appears within the brackets. Turn options ON and OFF by pressing the corresponding keys on the keypad. Press the keys as many times as you need to select the desired options and then press **[ENTER]** to save.

For Grafica keypads:

Select or clear the check boxes pertaining to the options or features that you wish to enable or disable. You can also set the options by pressing the corresponding keys on the keypad. The feature is considered ON when its check box is selected. To save the settings, press Grafica's center action key (**Save**).

3.4 Decimal Programming

Certain sections may require the entry of a 3-digit decimal value from 000 to 255.

3.5 Hexadecimal Programming

Certain sections may require the entry of one or more Hexadecimal values from 0 to F.

For LCD keypads:

[0] to **[9]** = values 0 to 9 respectively **[DISARM]** = D
[STAY] = A **[BYP]** = E
[FORCE] = B **[MEM]** = F
[ARM] = C

For Grafica keypads:

[0] to **[9]** = values 0 to 9 respectively
[#] = A to F (press the key until the desired letter appears)

3.6 Level Programming

In the sections requiring Level Programming, only one option can be selected.

For LCD keypads:

To select the option, use the [▲] and [▼] keys until the desired option is visible and then press [ENTER] to save.

For Grafica keypads:


To select the option, use Grafica's scroll keys until the desired option is visible and then press Grafica's center action key (**Save**) to save.

3.7 Paradox Memory Key

 **The Paradox Memory Key is not verified by UL.**


Copy the programmed contents of one Digiplex control panel into the Paradox Memory Key. Then copy the contents of the Paradox Memory Key into as many Digiplex control panels as you need. This saves you a lot of time. All you have to do is program one Digiplex control panel, then download the programmed contents to other control panels in less than 5 seconds.

Figure 12: Using the Memory Key

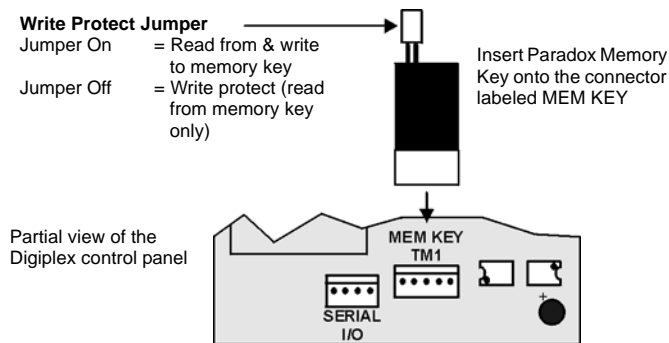

Copy to Memory Key from SOURCE Control Panel:


- 1) Remove the AC and battery power from the control panel.
- 2) Place Memory Key on the connector labeled MEM KEY of the control panel that you want to copy. Make sure that the write protect jumper is on.
- 3) Enter section:

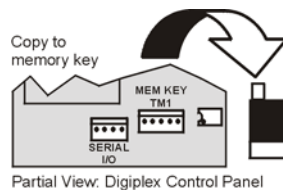

- 3) Enter section:
[965] to copy the contents of the panel **except sections [001] to [048] (device serial numbers) and [049] to [056] (keyswitch serial numbers)** to the key.
[966] to copy all of the contents including **sections [001] to [048] and [049] to [056]** from the panel to the key.
- 4) When the keypad emits a Confirmation Beep, wait 10 seconds before removing the Memory Key. Remove the jumper if you do not wish to accidentally overwrite the contents of the Memory Key.

Download to DESTINATION Control Panel:

- 1) Remove the AC and battery power from the control panel.
- 2) Place the Memory Key on the connector labeled MEM KEY of the control panel that is to receive the contents of the Memory Key.

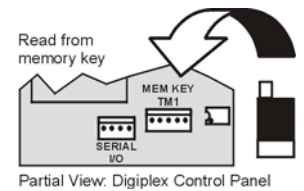

- 3) Enter section:
[961] to download the contents **except sections [001] to [048] (device serial numbers) and [049] to [056] (keyswitch serial numbers)** from the key to the panel.
[962] to download all of the contents including **sections [001] to [048] and [049] to [056]** from the key to the panel.
- 4) When the keypad emits a Confirmation Beep, wait 10 seconds before removing the Memory Key.

Zone Programming

All detection devices connected to the control panel, keypads and zone expansion modules must be assigned to a zone and that zone must be defined as described in this section:

Zone Numbering [001] to [048]:


- Serial number of the device/module
- Input number of the device/module

Zone Parameters [101] to [148]:

- Zone Definition
- Zone Partition Assignment
- Zone Options

The Zone Numbering feature is used to individually assign each detection device to any desired zone in the Digiplex system (see section 4.1 on page 12). The Zone Parameters define the type of zone, the zone's partition assignment and how the control panel will react when an alarm condition occurs on that zone (see section 4.2 on page 12 to section 4.4 on page 13). For more information on the installation of devices and modules, please refer to Figure 3 on page 3 or to their respective Installation Guides.

Figure 13: Zone Programming

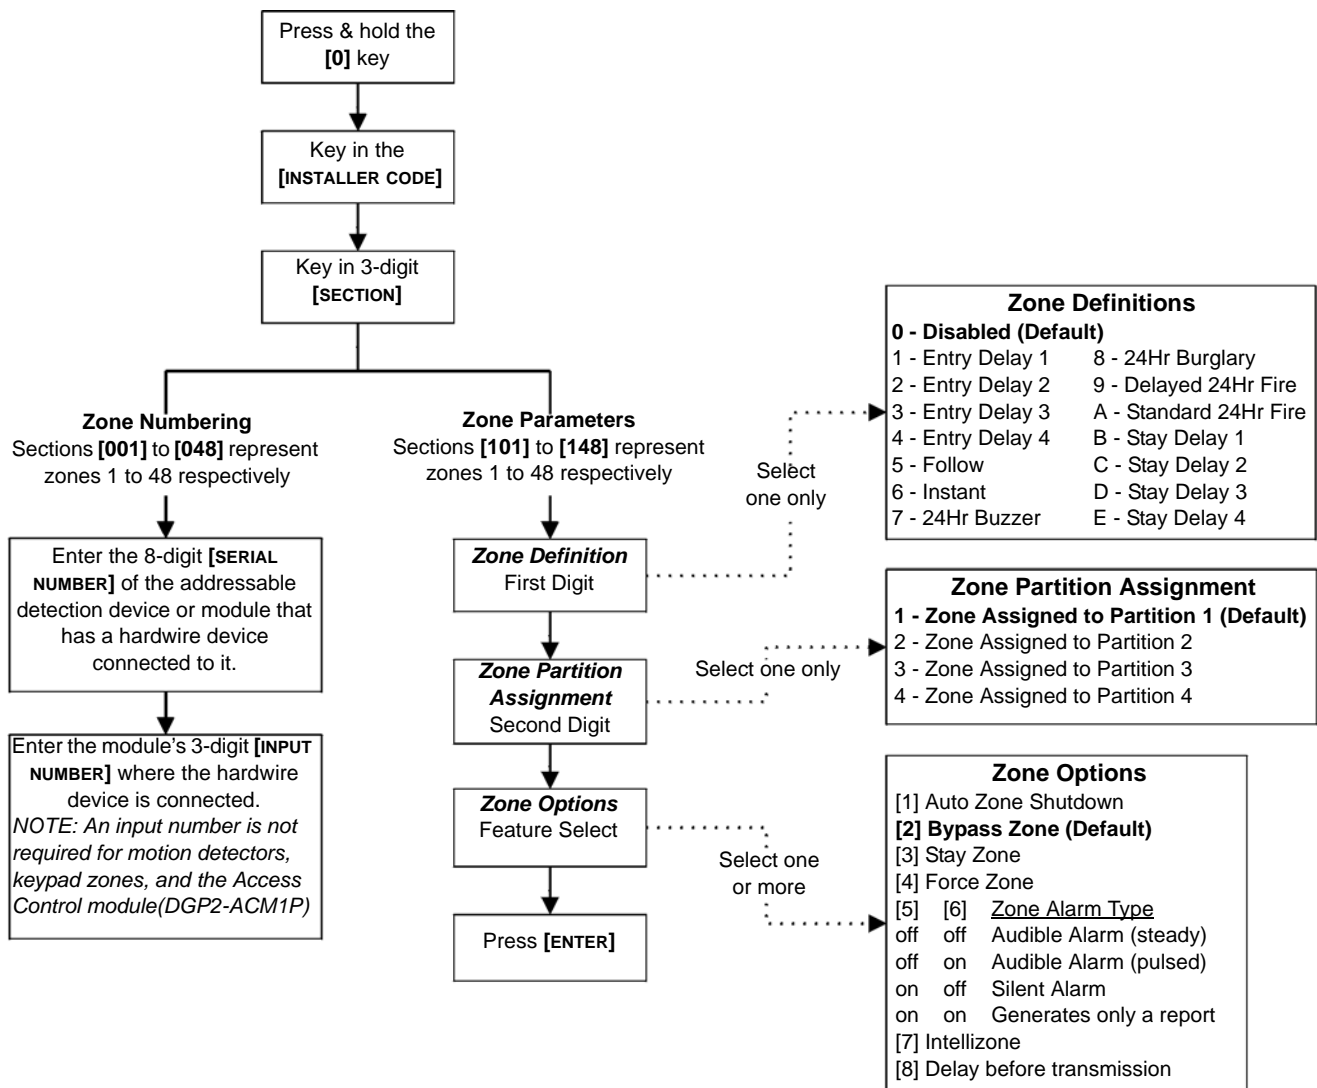

4.1 Zone Numbering

SECTIONS [001] TO [048]

The Zone Numbering feature allows you to assign any detection device in the system to any of the 48 zones. This feature tells the control panel where the device is connected and which of the 48 zones is assigned to that device (Figure 14 on page 12).

- To assign an addressable detection device connected to the combus, program the detector's serial number into the section corresponding to the desired zone (i.e. program zone 34 in section [034]).
- To assign a detection device connected to a module or control panel's hardwired input terminal, program the module's or control panel's serial number and the input number where the device is connected into the section corresponding to the desired zone. Refer to the appropriate module's Installation Guide for details of its input numbers. Note: An input number is not required for motion detectors, keypad zones, and the Access Control Module (DGP2-ACM1P).


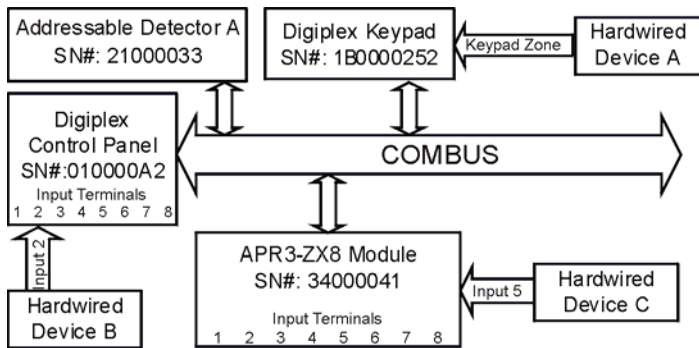
 **If PGM1 is defined as a smoke detector input (see section 10.4 on page 31), the control panel will recognize it as input # 255.**

Figure 14: Zone Numbering



	Zone#	Section#	Serial#	Input#
Addressable Detector A:	1 =	[001]	21000033	N/A
Hardwired Device A:	2 =	[002]	1B000252	N/A
Hardwired Device B:	3 =	[003]	010000A2	002
Hardwired Device C:	4 =	[004]	34000041	005

4.1.1 Clearing a Zone's Numbering

For LCD keypads:

- Enter a section number between [001] and [048].
- Press [0] and then [ENTER] to save and exit.

For Grafica keypads:

- Enter a section number between [001] and [048].
- Press [0] to clear the serial number.
- Using Grafica's scroll keys, highlight the input number and then press [0] to clear the data.
- Press Grafica's center action key (Save) to save and exit.

4.2 Zone Definitions

Select one of the 15 available zone definitions described below (also refer to Figure 13 on page 11).

4.2.1 Zone Disabled

SECTIONS [101] TO [148]: FIRST DIGIT = 0

Disables the corresponding zone. All zones are disabled by default.

4.2.2 Entry Delays 1 to 4

SECTIONS [101] TO [148]: FIRST DIGIT = 1 TO 4

When an armed zone defined as an Entry Delay opens, the control panel will not generate an alarm until the programmed Entry Delay Timer has elapsed. A zone can be defined with one of four Entry Delays. Each Entry Delay is associated with an Entry Delay Timer. To program the Entry Delay Timer, key in the desired 3-digit delay value (000 to 255 seconds) into the corresponding section:

- Entry Delay 1 Timer: [230]
- Entry Delay 2 Timer: [231]
- Entry Delay 3 Timer: [232]
- Entry Delay 4 Timer: [233]

Please note these are the same timers used for Stay Delay zones (see section 4.2.9 on page 13). Entry Delay zones are commonly used at the entry/exit points of the protected area (i.e. front/back door or garage). Using different Entry Delays is useful when, for example, one entry point requires a longer delay than the other entry point or in a partitioned system where each partition may require a different Entry Delay.

4.2.3 Follow Zones

SECTIONS [101] TO [148]: FIRST DIGIT = 5

If an armed Follow zone opens, the control panel will immediately generate an alarm. If an armed Entry Delay zone (see section 4.2.2) opens before the Follow zone, the control panel will wait until the end of the Entry Delay before generating an alarm. If more than one Entry Delay zone opens before the Follow zone, the control panel will wait until the end of the first Entry Delay before generating an alarm.

4.2.4 Instant Zones


SECTIONS [101] TO [148]: FIRST DIGIT = 6

When an armed Instant zone opens, the control panel immediately generates an alarm. Instant zones are commonly used for windows, patio doors, skylights and other perimeter type zones.

4.2.5 24Hr Buzzer Zones

SECTIONS [101] TO [148]: FIRST DIGIT = 7

Whenever a 24Hr Buzzer zone opens, whether the zone is armed or disarmed, the control panel will activate the keypad buzzer to indicate that the zone was breached. The control panel will report the alarm, but will not enable the bell/siren output. Enter any valid access code on the keypad to stop the buzzer.

 **The keypads must be assigned to the same partition as the 24Hr Buzzer zone. Otherwise, the buzzer will not activate.**

4.2.6 24Hr Burglary Zones

SECTIONS [101] TO [148]: FIRST DIGIT = 8

Whenever a 24Hr Burglary zone opens, whether the system is armed or disarmed, the control panel will immediately generate an alarm.


4.2.7 Delayed 24Hr Fire Zone

SECTIONS [101] TO [148]: FIRST DIGIT = 9

The Delayed 24Hr Fire Zone definition described in Figure 15 on page 13 is commonly used in residential homes where a smoke detector often generates false alarms (i.e. cigarette smoke, burning bread, etc.). When a zone is programmed as a Fire zone, the zone becomes normally open and requires an EOL resistor. The zone will not function as normally closed.

 **The keypads must be assigned to the same partition as the Delayed 24Hr Fire zone for the buzzer to activate.**

Figure 15: Delayed 24-hr. Fire Zone

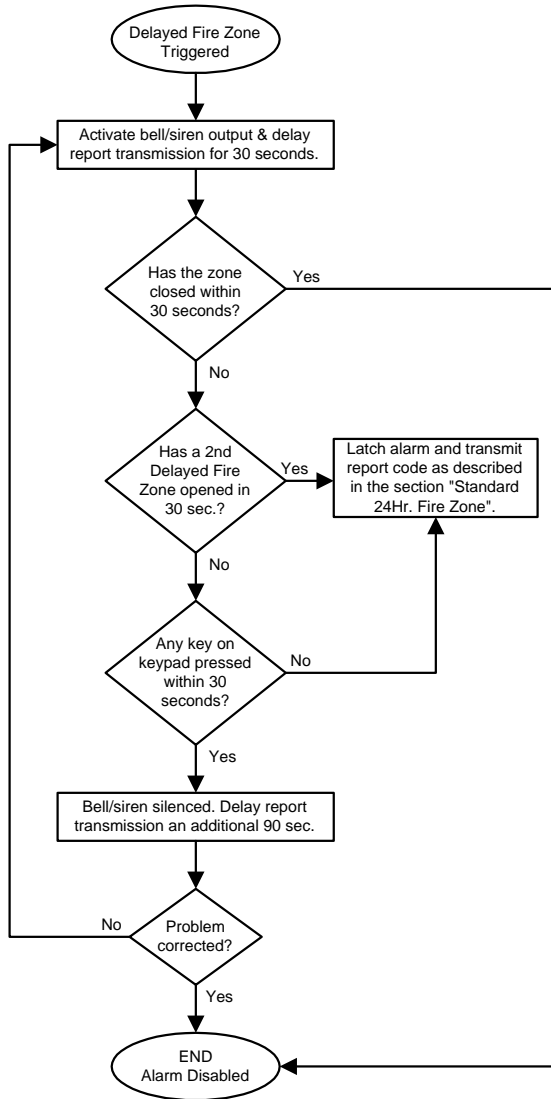


4.2.8 Standard 24Hr Fire Zone

SECTIONS [101] TO [148]: FIRST DIGIT = A

For details how to connect smoke detectors to the control panel, refer to Fire Circuits in section 2.15 on page 7. When a zone is programmed as a Fire zone, the zone becomes normally open and requires an EOL resistor. The zone will not function as normally closed. Whenever a Standard 24Hr Fire Zone is triggered, whether it is armed or disarmed, the control panel can:

- send a *Zone Alarm* report code (see section 8.2.5 on page 25).
- send a *Fire Loop Trouble Report* (see section 8.2.11 on page 26) if a tamper/wiring fault occurs on a Fire Zone. A “Zone Fault Trouble” will also appear in the keypad’s Trouble Display.
- generate a Fire alarm, which is always audible, regardless of other settings. Fire alarms will generate an intermittent bell/siren output signal as demonstrated in Figure 16.

Figure 16: Bell/Siren Output During Fire Alarm

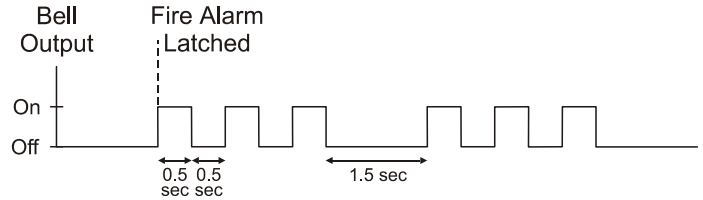

4.2.9 Stay Delay Zone

SECTIONS [101] TO [148]: FIRST DIGIT = B TO E

When a Stay Delay zone is armed using the Regular or Force arming methods, the control panel will process the zone as an Instant zone (see section 4.2.4 on page 12). When a Stay Delay zone is armed using the Stay or Instant arming methods and the zone is triggered, the control panel will not generate an alarm until the programmed Stay Delay has elapsed. A zone can be defined with one of four Stay Delays. Each Stay Delay is associated with an Entry Delay Timer. To program the Entry Delay Timer, key in the desired 3-digit delay value (000 to 255 seconds) into the corresponding section:

- Stay Delay 1 = Entry Delay 1 Timer in section [230]
- Stay Delay 2 = Entry Delay 2 Timer in section [231]
- Stay Delay 3 = Entry Delay 3 Timer in section [232]
- Stay Delay 4 = Entry Delay 4 Timer in section [233]



Please note that the Entry Delay Timers are the same timers used for Entry Delay zones.

4.3 Zone Partition Assignment

SECTIONS [101] TO [148]: SECOND DIGIT = 1 TO 4

The control panel provides the option of partitioning the security system into two, three, or four completely independent systems. Therefore, each zone must be assigned to one partition as described in Figure 13 on page 11. For more information on Partitioning, refer to section 12.5 on page 36.

4.4 Zone Options

Each zone can be programmed with one or more of the options described below. Program the zone options as described in Figure 13 on page 11.

4.4.1 Auto Zone Shutdown

SECTIONS [101] TO [148]: OPTION [1]

When option [1] is disabled and an armed zone is breached, the control panel generates an alarm: it may send an alarm report (see section 8.11 on page 28), activate the bell output, etc. If the same zone re-opens during the same alarm, another alarm report may be sent, the bell output may re-activate and so on. When option [1] is enabled on a zone, the control panel will stop generating an alarm when the Auto Zone Shutdown Limit is reached during one armed period. The control panel will ignore zones with the Auto Zone Shutdown option that have surpassed the programmed limit. To program the Auto Zone Shutdown Limit, key in the desired 3-digit counter (000 to 015) into section [217]. Entering 000 disables this feature. The Auto Zone Shutdown Limit resets every time the partition that is assigned to the corresponding zone is armed.

4.4.2 Bypass Zones

SECTIONS [101] TO [148]: OPTION [2]

Only zones with option [2] enabled can be Manually Bypassed (see section 13.5.3 on page 39). Fire Zones cannot be bypassed. All zones are set as Bypass Zones by default.

4.4.3 Stay Zones

SECTIONS [101] TO [148]: OPTION [3]

Only zones with option [3] enabled will be bypassed when the system is Stay or Instant armed (see section 16.1.2 on page 45). All other zones will remain activated. Fire Zones cannot be set as Stay Zones.

4.4.4 Force Zones

SECTIONS [101] TO [148]: OPTION [4]

Only zones with option [4] enabled can be bypassed when the system is Force armed (see section 16.1.6 on page 45). Fire Zones cannot be set as Force Zones.

4.4.5 Alarm Types

SECTIONS [101] TO [148]: OPTIONS [5] & [6]

[5]	[6]	Zone Alarm Type
Off	Off	Steady Audible Alarm
Off	On	Pulsed Audible Alarm
On	Off	Silent Alarm
On	On	Generates a report only

- A *Steady Audible Alarm* transmits the appropriate report code (if programmed) and generates an alarm providing a steady output for any bells or sirens connected to the control panel.
- A *Pulsed Audible Alarm* transmits the appropriate report code and generates an alarm providing a pulsed output (see Figure 16 on page 13) for any bells or sirens connected to the panel.
- A *Silent Alarm* transmits the appropriate report code and generates an alarm without activating any bells or sirens (e.g. keypad indicates an alarm and the system must be disarmed).
- A *Report Only* sends the report code to the monitoring station. Unlike a silent alarm, no access codes are required to cancel the alarm. Fire Zones cannot be set to *Report Only*.

4.4.6 Intellizone

SECTIONS [101] TO [148]: OPTION [7]

If an alarm condition occurs on a zone with option [7] enabled, the control panel will trigger the Intellizone Delay and will seek confirmation of the alarm before generating an alarm. An alarm will only be generated if one of the following conditions occurs during the Intellizone Delay:

- 1) An alarm condition occurs on any other Intellizone during the Intellizone Delay.
- 2) The zone in alarm has restored and re-occurred during the Intellizone Delay.
- 3) The zone in alarm remains in alarm for the entire Intellizone Delay.

To program the Intellizone Delay, key in the desired 3-digit delay value (010 to 255 seconds) into section [200]. Fire Zones cannot be set as Intellizones.

4.4.7 Delay Alarm Transmission

SECTIONS [101] TO [148]: OPTION [8]

When an alarm condition occurs on a zone with option [8] enabled, the control panel will generate an alarm, but will not report the

alarm to the monitoring station until the end of the Alarm Transmission Delay. During this period, disarming the system will cancel any report originating from this zone. To program the Alarm Transmission Delay, key in the desired 3-digit delay value (001 to 255 seconds, 000 = instant) into section [256]. This feature is commonly used with Entry Delay zones in order to reduce the occurrence of false alarms created by new users who may not disarm the system in time.

4.5 Zone Labels

SECTIONS [451] TO [498]

The existing zone labels that are displayed on an LCD (DGP2-641BL) or Grafica (DNE-K07) keypad's screen can be modified to suit the installation's needs. When zone labels are modified, the label is changed throughout the system. Each label can contain a maximum of 16 characters. To modify the zone labels, enter the desired section and then enter the label. For instructions on how to enter letters and special characters, refer to Tables 3 to 9 for LCD keypads, or Grafica's Online Manual for Grafica keypads. A complete Grafica user manual is available on our website at www.paradox.ca.

Zone Labels: Sections [451] to [498] represent Zones 01 to 48.

Table 3: Keys

Press	Feature	Description
[STAY]	Insert Space	Inserts a blank space in the cursor's position
[FORCE]	Delete	Deletes the character or blank space found at the cursor's position
[ARM]	Delete Until the End	Deletes all characters and spaces to the right of the cursor and at the cursor's position
[DISARM]	Numeric or Alphanumeric	Toggles from numeric keys to alphanumeric keys and vice versa (see Table 4 on page 14, Table 5 on page 15 or Table 6 on page 15)
[BYP]	Lower or Upper Case	Toggles the case setting from lower to upper case and vice versa
[MEM]	Special Characters	The cursor will turn into a flashing black square. Enter the 3-digit number that represents the desired symbol (see Table 7 on page 15, Table 8 on page 15 or Table 9 on page 15)

Table 4: Numeric and Alphanumeric Keys

Key	Numeric	Alphanumeric		
	Press key one time	Press key one time	Press key two times	Press key three times
[0]	0	---	---	---
[1]	1	A	B	C
[2]	2	D	E	F
[3]	3	G	H	I
[4]	4	J	K	L
[5]	5	M	N	O
[6]	6	P	Q	R
[7]	7	S	T	U
[8]	8	V	W	X
[9]	9	Y	Z	

Table 5: Hebrew Keypad Letter Assignment

Key	Press key once	Press key twice	Press key three times
[1]	א	ב	ג
[2]	ד	ה	ו
[3]	ז	ח	ט
[4]	י	כ	ל
[5]	מ	נ	ס
[6]	ע	פ	צ
[8]	ק	ש	ת
[9]	ך	שׁ	תׁ

Table 6: Russian Keypad Letter Assignment

Key	Press key once	Press key twice	Press key three times	Press key four times
[1]	А	Б	В	Г
[2]	Д	Е	Ё	Ж
[3]	З	И	Й	К
[4]	Л	М	Н	О
[5]	П	Р	С	Т
[6]	У	Ф	Х	Ц
[7]	Ч	Ш	Щ	Ъ
[8]	Ы	Ь	Э	Ю
[9]	Я			

Table 7: Special Characters Catalogue

032	048	064	080	096	112	128	144	160	176	192	208
033	049	065	081	097	113	129	145	161	177	193	209
034	050	066	082	098	114	130	146	162	178	194	210
035	051	067	083	099	115	131	147	163	179	195	211
036	052	068	084	100	116	132	148	164	180	196	212
037	053	069	085	101	117	133	149	165	181	197	213
038	054	070	086	102	118	134	150	166	182	198	214
039	055	071	087	103	119	135	151	167	183	199	215
040	056	072	088	104	120	136	152	168	184	200	216
041	057	073	089	105	121	137	153	169	185	201	217
042	058	074	090	106	122	138	154	170	186	202	218
043	059	075	091	107	123	139	155	171	187	203	219
044	060	076	092	108	124	140	156	172	188	204	220
045	061	077	093	109	125	141	157	173	189	205	221
046	062	078	094	110	126	142	158	174	190	206	222
047	063	079	095	111	127	143	159	175	191	207	223

Table 8: Hebrew Special Characters Catalogue

032	048	064	080	096	112	128	144	160	176	192	208
033	049	065	081	097	113	129	145	161	177	193	209
034	050	066	082	098	114	130	146	162	178	194	210
035	051	067	083	099	116	131	147	163	179	195	211
036	052	068	084	100	116	132	148	164	180	196	212
037	053	069	085	101	117	133	149	165	181	197	213
038	054	070	086	102	118	134	150	166	182	198	214
039	055	071	087	103	119	135	151	167	183	199	215
040	056	072	088	104	120	136	152	168	184	200	216
041	057	073	089	105	121	137	153	169	185	201	217
042	058	074	090	106	122	138	154	170	186	202	218
043	059	075	091	107	123	139	155	171	187	203	219
044	060	076	092	108	124	140	156	172	188	204	220
045	061	077	093	109	125	141	157	173	189	205	221
046	062	078	094	110	126	142	158	174	190	206	222
047	063	079	095	111	127	143	159	175	191	207	223

Table 9: Russian Special Characters Catalogue

032	048	064	080	096	112	128	144	160	176	192	208	224	240
033	049	065	081	097	113	129	145	161	177	193	209	225	241
034	050	066	082	098	114	130	146	162	178	194	210	226	242
035	051	067	083	099	115	131	147	163	179	195	211	227	243
036	052	068	084	100	116	132	148	164	180	196	212	228	244
037	053	069	085	101	117	133	149	165	181	197	213	229	245
038	054	070	086	102	118	134	150	166	182	198	214	230	246
039	055	071	087	103	119	135	151	167	183	199	215	231	247
040	056	072	088	104	120	136	152	168	184	200	216	232	248
041	057	073	089	105	121	137	153	169	185	201	217	233	249
042	058	074	090	106	122	138	154	170	186	202	218	234	250
043	059	075	091	107	123	139	155	171	187	203	219	235	251
044	060	076	092	108	124	140	156	172	188	204	220	236	252
045	061	077	093	109	125	141	157	173	189	205	221	237	253
046	062	078	094	110	126	142	158	174	190	206	222	238	254
047	063	079	095	111	127	143	159	175	191	207	223	239	255

4.6 Input Speed

SECTIONS [201] TO [216]


(000 to 255 X 20msec, default: 600ms) The Input Speed defines how quickly the control panel will respond to an open zone detected on any hardwired input terminal. The control panel will not display and/or respond to an open zone until the programmed Input Speed elapses to prevent glitches from causing an alarm or unnecessary reporting. All other zone definitions and options do not come into effect until the Input Speed has elapsed. The Input Speed does not apply to addressable detection devices. The Input Speed for each input terminal can be set from 20ms to 5.1s, by programming the desired value (001 to 255 X 20ms) into the appropriate section.

Example:

The system is armed and the zone speed is set for 600ms. A zone opens and closes in less than 600ms, the control panel will not respond (i.e. no reporting, no alarm and no display on the keypad).

- [201] Panel Terminal 1 / Input 001 speed
- [202] Panel Terminal 2 / Input 002 speed
- [203] Panel Terminal 3 / Input 003 speed
- [204] Panel Terminal 4 / Input 004 speed
- [205] Panel Terminal 5 / Input 005 speed
- [206] Panel Terminal 6 / Input 006 speed
- [207] Panel Terminal 7 / Input 007 speed
- [208] Panel Terminal 8 / Input 008 speed
- [209] Panel Doubler 1 / Input 009 speed
- [210] Panel Doubler 2 / Input 010 speed
- [211] Panel Doubler 3 / Input 011 speed
- [212] Panel Doubler 4 / Input 012 speed
- [213] Panel Doubler 5 / Input 013 speed
- [214] Panel Doubler 6 / Input 014 speed
- [215] Panel Doubler 7 / Input 015 speed
- [216] Panel Doubler 8 / Input 016 speed

Figure 17: ATZ Input Terminal Recognition

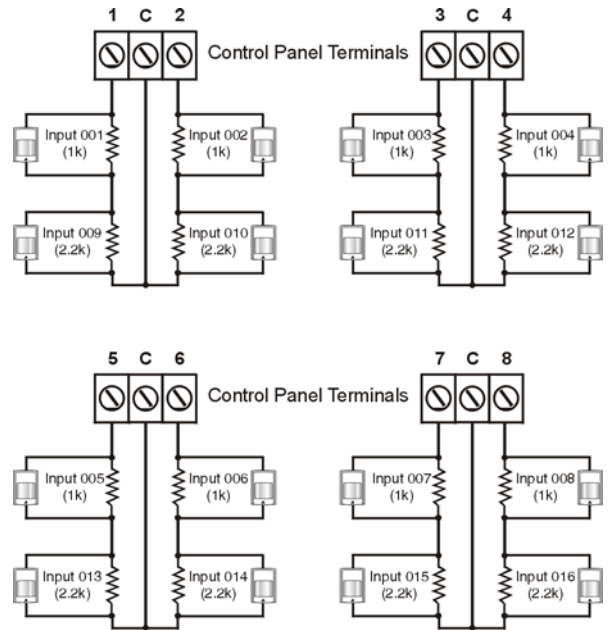

4.7 EOL Zones

SECTION [504]: OPTION [7]

If detection devices connected to hardwired input terminals use 1kΩ end of line resistors, enable option [7] in section [504]. For more information on the use of EOL resistors, refer to Zone Connections in section 2.11 on page 6 & section 2.12 on page 7.

4.8 Zone Doubling (ATZ)

SECTION [504]: OPTION [8]

Enabling the ATZ feature allows you to install two detection devices per hardwired input terminal. Each detection device will have its own zone, display its zone status on the keypad and send separate alarm codes for each zone. The extra zones are recognized as described in Figure 17. For information on how to connect the detection devices, please refer to Double Zone Connections in section 2.12 on page 7. Fire Zones cannot be doubled.

Keyswitch Programming

The Digiplex control panel can support up to 8 keyswitch zones in addition to the 48 standard zones. A keyswitch allows a user to arm or disarm a system by pressing a key or by toggling a keyswitch. The keyswitches are connected to the hardwired input terminals of either the Digiplex control panel, zone expansion modules or the keypad. For more information on the installation of keyswitches, please refer to section 2.14 on page 7. Keyswitches must be assigned to a keyswitch zone and that zone must be defined as described in this section:

Keyswitch Numbering [049] to [056]:


- Serial # of the Module
- Input # of the Module

Keyswitch Parameters [149] to [156]:

- Keyswitch Definitions
- Keyswitch Partition Assignment
- Keyswitch Options

The Keyswitch Numbering feature enables you to individually assign each input to any keyswitch zone in the Digiplex system. Please refer to section 5.1 for details. The Keyswitch Parameters define the keyswitch's partition assignment and its arming method (see section 5.2 to section 5.4 on page 18).

Figure 18: Keyswitch Programming

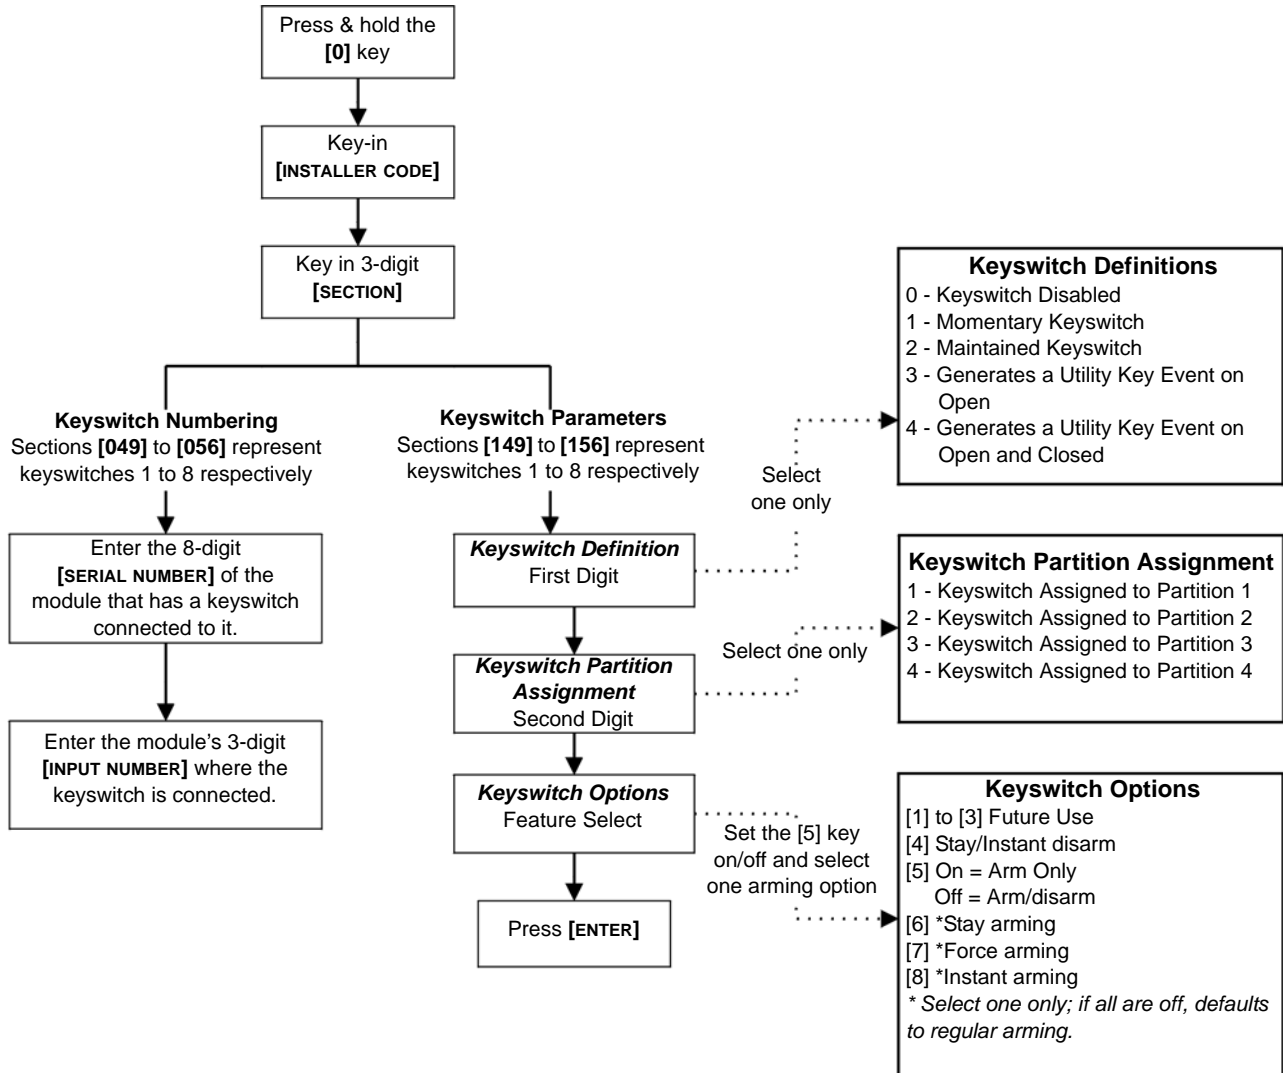


5.1 Keyswitch Numbering

SECTIONS [049] TO [056]

The Keyswitch Numbering feature allows you to assign any hardwired input in the system to any of the 8 keyswitch zones in the Digiplex control panel. This feature tells the control panel where the keyswitch is connected and which of the 8 keyswitch zones is

assigned to that keyswitch. To assign a keyswitch connected to a hardwired input terminal, program the module's serial number and the number of the input where the keyswitch is connected into the section corresponding to the desired keyswitch zone (see Figure 19 on page 18).

Figure 19: Example of Keyswitch Numbering

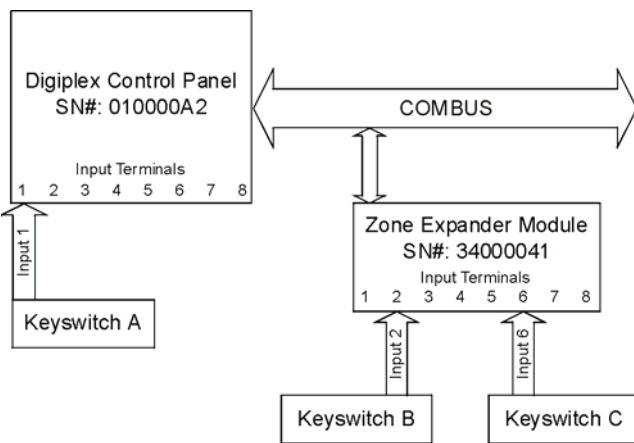

Keyswitch	Zone #	Section	Serial#	Input#
Keyswitch A:	1 =	[049]	010000A2	001
Keyswitch B:	2 =	[050]	34000041	002
Keyswitch C:	3 =	[051]	34000041	006

5.2 Keyswitch Definitions

Select one of the keyswitch definitions (also see Figure 18 on page 17):

5.2.1 Keyswitch Disabled

SECTIONS [149] TO [156]: FIRST DIGIT = 0
Disables keyswitch input.

5.2.2 Momentary Keyswitch

SECTIONS [149] TO [156]: FIRST DIGIT = 1
To arm a partition using the Momentary Keyswitch, turn on the keyswitch for approximately three seconds then turn it off. Repeating this sequence will disarm the system. The selected Keyswitch Option (see section 5.4) determines the type of arming.

5.2.3 Maintained Keyswitch

SECTIONS [149] TO [156]: FIRST DIGIT = 2
To arm a partition using the Maintained Keyswitch, turn the switch from the ON to the OFF position. To disarm a partition set the keyswitch in the ON position. In the case of an *Arm Only* option, the control panel will not perform any action when the switch is in the ON position. The selected Keyswitch Option (see section 5.4) determines the type of arming.

5.2.4 Generates a Utility Key Event on Open

SECTIONS [149] TO [156]: SECOND DIGIT = 3
When option [3] is enabled, a Utility Key Event will be generated whenever the keyswitch input is opened (see Table 12 on page 35). This option can be used to activate or deactivate one or more of Digiplex's PGM outputs. When a keyswitch is defined with the Generate a Utility Key Event on Open option, the Keyswitch Partition Assignment and Keyswitch Options are disabled. To program a Keyswitch to generate a Utility Key Event:

- 1) Program the Activation Event of a PGM output with the Utility Key Event corresponding to the desired keyswitch (see PGM Programming Table in the Programming Guide).
- 2) Enable option [3] in the section corresponding to the desired keyswitch.

5.2.5 Generates a Utility Key Event on Open and Close

SECTIONS [149] TO [156]: SECOND DIGIT = 4
When option [4] is enabled, a Utility Key Event will be generated whenever the keyswitch input is opened or closed. As a result, the Utility Key Events increase from 32 to 64 events when option [4] is enabled; one event for each state (open and closed). See Table 12 on page 35. This option can be used to activate or deactivate one or more of DGP-848's PGM outputs. When a keyswitch is defined with the Generate a Utility Key Event on Open and Close option, the Keyswitch Partition Assignment and Keyswitch Options are disabled. To program a Keyswitch to generate a Utility Key Event:

- 1) Program the Activation Event of a PGM output with the Utility Key Event corresponding to the desired keyswitch (see PGM Programming Table in the Programming Guide).
- 2) Enable option [4] in the section corresponding to the desired keyswitch.

5.3 Keyswitch Partition Assignment

SECTIONS [149] TO [156]: SECOND DIGIT = 1 TO 4
The control panel provides the option of partitioning the security system into two, three, or four completely independent systems. Therefore, each keyswitch must be assigned to one partition as described in Figure 18 on page 17. For more information on Partitioning, refer to section 12.5 on page 36.

5.4 Keyswitch Options

Each keyswitch zone can be programmed with one or more of the options (also see Figure 18 on page 17):

5.4.1 Stay/Instant Disarm (Keyswitch)

SECTIONS [149] TO [156]: OPTION [4]
When option [4] is enabled, the keyswitch can only disarm assigned Stay or Instant armed partitions. The Arm Only Option (see section 5.4.2) must be disabled for this feature to function. When option [4] is disabled, the keyswitch can disarm partitions armed using any arming method.

5.4.2 Arm/Disarm (Keyswitch)

SECTIONS [149] TO [156]:
Option [5] ON = Arm Only
Option [5] OFF = Arm & Disarm



Only one of the arming options (Stay, Force, Instant and Regular) can be selected.

5.4.3 Stay Arming (Keyswitch)

SECTIONS [149] TO [156]: OPTION [6]
Activating the keyswitch will bypass any zones defined as Stay Zones (see section 4.4.3 on page 14) in the selected partition. All other zones will remain activated. For more information on Stay arming, refer to section 16.1.2 on page 45.

5.4.4 Force Arming (Keyswitch)

SECTIONS [149] TO [156]: OPTION [7]
Activating the keyswitch will arm the selected partition bypassing any open zones defined as Force Zones (see section 4.4.4 on page 14) at the time of arming. For more information on Force arming, refer to section 16.1.6 on page 45.

5.4.5 Instant Arming (Keyswitch)

SECTIONS [149] TO [156]: OPTION [8]

This option is identical to Stay arming except that all armed zones will become Instant Zones (see section 4.2.4 on page 12). For more information on Instant arming, refer to section 16.1.4 on page 45.

5.4.6 Regular Arming (Keyswitch)

SECTIONS [149] TO [156]: OPTION [6] TO [8]

When options [6] to [8] are off, the keyswitch arming option will default to Regular arming (see section 16.1.1 on page 45).

Arming & Disarming Options

6.1 Arming Follows Partition

SECTIONS [505], [509], [513], [517]: OPTIONS [1] TO [4]

A partition can be set to follow the arming and disarming status of one or more partitions. If a partition is set to follow more than one partition, the partition will arm when all selected partitions are armed. However, the partition will disarm as soon as one of the selected partitions is disarmed. For more details on how these options are programmed, please refer to the *Programming Guide*.

Example:

If options [2] and [3] are on in section [505], Partition 1 will automatically arm whenever partitions 2 and 3 are armed. Partition 1 will disarm when either partition 2 or partition 3 is disarmed.

[505] Partition 1:

Option [2] = Partition 1 arms and disarms with Partition 2
Option [3] = Partition 1 arms and disarms with Partition 3
Option [4] = Partition 1 arms and disarms with Partition 4

[509] Partition 2:

Option [1] = Partition 2 arms and disarms with Partition 1
Option [3] = Partition 2 arms and disarms with Partition 3
Option [4] = Partition 2 arms and disarms with Partition 4

[513] Partition 3:

Option [1] = Partition 3 arms and disarms with Partition 1
Option [2] = Partition 3 arms and disarms with Partition 2
Option [4] = Partition 3 arms and disarms with Partition 4

[517] Partition 4:

Option [1] = Partition 4 arms and disarms with Partition 1
Option [2] = Partition 4 arms and disarms with Partition 2
Option [3] = Partition 4 arms and disarms with Partition 3

When Regular, Stay, or Instant arming a partition, its lobbied partition(s) will Regular arm. When Force arming a partition, its lobbied partition(s) will Force arm. A lobbied partition is a partition that is set to follow the arming and disarming of another partition.

6.2 Restrict Arming On Battery/AC Failure

SECTION [503]: OPTION [8]

With option [8] on in section [503], the control panel can restrict arming if the control panel detects an AC failure, battery loss or if the battery voltage is less than 10.5V. The control panel will not arm any partition until all battery/AC trouble conditions are rectified.

6.3 No Arming On Tamper

SECTION [501]: OPTION [8]

With option [8] on in section [501], the control panel can restrict arming if the control panel detects a tamper on a zone or module (see section 7.4 on page 22). The control panel will not arm any

partition until all tamper trouble conditions are rectified and the Installer Code has been entered to clear the troubles.

6.4 No Arming On Supervision Loss

SECTION [501]: OPTION [4]

With option [4] on in section [501], the control panel can restrict arming if the control panel receives a supervision loss signal from a wireless module (see section 7.3 on page 22). The control panel will not arm any partition until all supervision loss trouble conditions are rectified.

6.5 Timed Auto-Arming

SECTIONS [505], [509], [513], [517]: OPTION [5]

With this option enabled, the control panel will arm the selected partition every day at the time specified by the Auto-arm Timer (see section 6.5.1). When the partition is automatically armed, the control panel will transmit the Auto-arming report code programmed in section [626]. Any open zones detected when a partition is Auto-armed will be bypassed regardless of their definition. The type of arming is determined by the Auto-arming *Option* (see section 6.7 on page 20). Regardless whether the partition was successfully armed or not, the control panel will always transmit the *Late to Close* report code programmed in section [626]. Please note that the control panel will enter a 60-second Exit Delay period before arming the system. At this point, Auto-arming can be cancelled by entering a valid access code. Since the control panel can enable this feature for each individual partition, select the section that corresponds to the desired partition and turn on option [5].

[505] = Partition 1 [513] = Partition 3
[509] = Partition 2 [517] = Partition 4

6.5.1 Auto-Arm Timer

SECTIONS [271] TO [274]

If Timed Auto-arming is enabled (see section 6.5), the control panel will send the *Late to Close* report code and attempt to arm the system at the time specified by the Auto-arm Timer.

Sections [271] to [274] represent timers for partitions 1 through 4 respectively. Select the section corresponding to the partition and program the time you wish the control panel to arm the selected partition and/or send the *Late to Close* report code. Please note that the control panel will enter a 60-second Exit Delay period before arming the system. At this point, Auto-arming can be cancelled by entering a valid access code.

Example:

A user would like to automatically arm partition 2 everyday at 6:15PM. To do so, enable "Timed Auto-arming" for partition 2 by turning on option [5] in section [509]. Then enter 18:15 in section [272].

6.6 No Movement Auto-Arming

SECTIONS [505], [509], [513], [517]: OPTION [6]

If no movement occurs in a partition's protected area for the period specified by the No Movement Timer (see section 6.6.1), the control panel will automatically arm that partition. The control panel will transmit the *No Movement* report code programmed in section [626] upon arming. The type of arming is determined by the Auto-arming Option (see section 6.7). Regardless whether the partition was successfully armed or not, the control panel will always transmit the *Late to Close* report code (see section 8.2.2 on page 25).

As the control panel can enable this feature for each individual partition, select the section that corresponds to the desired partition and turn on option [6].

[505] = Partition 1 [513] = Partition 3
[509] = Partition 2 [517] = Partition 4

6.6.1 No Movement Timer

SECTIONS [222] TO [225]

(001 to 255 X 15min.) If No Movement Auto-arming is enabled (see section 6.6), the control panel can send the *No Movement* report code and attempt to arm the system if no movement has occurred for the period specified by the No Movement Timer.

If No Movement Auto-arming is disabled, the control panel can still send the No Movement report code.

Sections [222] to [225] represent timers for partitions 1 through 4 respectively. Select the section corresponding to the desired partition and program the time (001 to 255 x15 minutes, 000 = disabled) without movement you wish the control panel to wait before arming and/or sending the *No Movement* report code.

Example:

A user would like to arm partition 1 whenever there is no movement for a period of 4 hours. First, enable the Auto-arm on No Movement feature for partition 1 by turning on option [6] in section [505]. Then in section [222] enter 016 (16x15min. = 240min. = 4 hours).

6.7 Auto-Arming Options

SECTION [505], [509], [513], [517]: OPTION [7]

When using the Auto-arming Features (see section 6.5 and section 6.6 on page 20), the control panel can Force arm or Stay arm the selected partition. In the section corresponding to the desired partition set option [7]:

Option [7] ON = Stay arming (see section 16.1.2 on page 45)
Option [7] OFF = Force arming (see section 16.1.6 on page 45)

6.8 One-Touch Features

[508], [512], [516], [520]: OPTIONS [1] TO [7]

The instructions that follow pertain to LCD and LED keypads. For instructions regarding the Grafica keypad, a complete Grafica user manual is available on our website at www.paradox.ca. One-Touch Features allow users to perform actions without having to enter access codes. If the keypad is assigned to more than one partition, the option must be enabled in all the corresponding partitions. Select the section that corresponds to the desired partition and turn the desired One-Touch options on or off.

Regular Arm: Option [1]

Press and hold the [ARM] key for 2 seconds to Regular arm (see section 16.1.1 on page 45).

Stay Arm: Option [2]

Press and hold the [STAY] key for 2 seconds to Stay arm (see section 16.1.2 on page 45).

Instant Arm: Option [3]

Press and hold the [5] key for 2 seconds to Instant arm (see section 16.1.4 on page 45).

Force Arm: Option [4]

Press and hold the [FORCE] key for 2 seconds to Force arm (see section 16.1.6 on page 45).

Disarm: Option [5]

Press and hold the [DISARM] key for 2 seconds to disarm a Stay or Instant armed partition (see section 16.1.8 on page 45).

Bypass Programming: Option [6]

Press and hold the [BYP] key for 2 seconds to perform Bypass Programming (see section 16.2 on page 46).

Event Record Display: Option [7]

Press and hold the [7] key for 2 seconds to access the Event Record Display (see section 16.8 on page 48).

6.9 Exit Delay

SECTIONS [226] TO [229]: 001-255 SECONDS

The Exit Delay determines the amount of time a user has to leave the protected area before the control panel arms the partition. Program the Exit Delay from 001 to 255 seconds, where sections [226] to [229] represent partitions 1 through 4 respectively. The Exit Delay applies to all zones in the selected partition except 24Hr. Zones.

6.9.1 Exit Delay Termination

SECTIONS [505], [509], [513], [517]: OPTION [8]

The control panel can reduce the Exit Delay to 5 seconds when an Entry Delay zone (see section 4.2.2 on page 12) is opened and closed during the Exit Delay. Since the control panel can enable this feature for each individual partition, select the section that corresponds to the desired partition and turn on option [8].

Example:

A user arms a partition with an Exit Delay of 45 seconds. After 15 seconds, the user leaves the protected area through the front door (Entry Delay zone). When the door closes, the control panel reduces the remaining Exit Delay from 30 seconds to 5 seconds.

6.9.2 No Exit Delay on Remote Arm

SECTIONS [508], [512], [516], [520]: OPTION [8]

When a user arms by using a remote control from a wireless module (MG-RCV3), the control panel will cancel the Exit Delay and immediately arm the system.

6.9.3 Skip Exit Delay when Arming with Access Card

See section 14.10.2 on page 43.

6.10 Keypad Lock-out Feature

SECTIONS [220] AND [221]

If a consecutive number of invalid codes are entered into the keypad, the control panel can be set to lockout access from that keypad for a specified period. Program the number of consecutive invalid codes from 001 to 255 (000 = disabled) into section [220]. Program the duration of the keypad lockout from 001 to 255 minutes into section [221]. Although programming 000 into section

[221] will not lockout the keypad, the control panel will transmit the *Keypad Lockout* report code programmed in section [705].

6.11 Maximum Bypass Entries

SECTIONS [238] TO [241]

Sections [238] to [241] represent Maximum Bypass Entries for partitions 1 through 4 respectively. Select the section corresponding to the desired partition and enter any value between 001 and 255 (000 = no limit) to determine the maximum number of zones that can be bypassed in a selected partition.

Example:

Section [238] is programmed with 010. When in Bypass Programming (see section 16.2 on page 46), the control panel will not let the user bypass more than 10 zones in partition 1.

6.12 Display “Bypass” If Armed

SECTION [504]: OPTION [5]

When option [5] is enabled, the keypad will not display that there are bypassed zones when the system is armed.

6.13 Bell Squawk

SECTIONS [507], [511], [515], & [519]: OPTIONS [1] TO [6]

Sections [507], [511], [515], and [519] represent partitions 1 through 4 respectively. Since the control panel can enable the Bell Squawk features for each individual partition, select the section that corresponds to the desired partition and turn on the desired option (when the option is off, the feature is disabled):

Bell Squawk Upon Disarming

Option [1] ON

The bell or siren will emit two squawks upon disarming.

Bell Squawk Upon Arming

Option [2] ON

The bell or siren will squawk once upon arming.

Bell Squawk On Auto-arm

Option [3] ON

The bell or siren will squawk at 1-second intervals during the 60 seconds before a partition automatically arms itself. During the final 10 seconds of the 60-second period, the bell or siren will emit three squawks at 1-second intervals.

Bell Squawk During Exit Delay

Option [4] ON

The bell or siren will squawk at 1-second intervals during the Exit Delay. During the final 10 seconds of the Exit Delay, the bell or siren will emit three squawks at 1-second intervals.

Bell Squawk On Entry Delay

Option [5] ON

The bell or siren will squawk at 1-second intervals during the Entry Delay.

Bell Squawk On Remote Arming

Option [6] ON

When using a wireless module (MG-RCV3), the bell or siren will squawk once upon arming or disarming with a remote control.

6.14 Ring-back

SECTIONS [507], [511], [515], [519]: OPTIONS [7] AND [8]

After disarming the system, the control panel can warn the user that there was an alarm and that it may be dangerous to enter by having the keypad beep 10 times and/or by squawking the bell 10 times. The user should leave immediately and contact the monitoring station from a secure location. Sections [507], [511], [515], and [519] represent partitions 1 through 4 respectively. Since the control panel can enable the *Ring-Back* features for each individual partition, select the section that corresponds to the desired partition and turn on the desired option:

Option [7] ON = Bell Squawk Ring-Back Enabled

Option [8] ON = Keypad Ring-Back Enabled

6.15 Switch To Stay Arming

If no Entry Delay zones are opened and closed during the Exit Delay after Regular arming a partition, the control panel can switch from Regular arming to Stay arming (see section 16.1 on page 45). Since the control panel can enable *Switch to Stay arming* for each individual partition, select the section that corresponds to the desired partition and turn on the corresponding option as listed below.

Section [505] = Partition 1 = Option [1]

Section [509] = Partition 2 = Option [2]

Section [513] = Partition 3 = Option [3]

Section [517] = Partition 4 = Option [4]

6.16 Always Force Arm When Regular Arming

SECTIONS [506], [510], [514], [518]: OPTION [8]

(Default = disabled) When option [8] is enabled for a particular partition, the system will Force arm that partition whenever Regular or Force arming is activated.



Stay and Instant arming are not affected by this option.

Alarm Options

7.1 Bell/Alarm Output

SECTION [500]: OPTIONS [5] TO [8]

When a partition generates an alarm, the control panel can toggle the on-board BELL/ALARM output enabling any bells or sirens connected to it. Since the control panel can enable this feature for each individual partition, in section [500] turn on the option that corresponds to the desired partition, where options [5] to [8] represent partitions 1 through 4 respectively.

7.2 Bell Cut-off Timer

SECTIONS [234] TO [237]

After an audible alarm, the bell or siren will stop once the partition is disarmed or when the Bell Cut-Off Timer has elapsed. Sections [234] to [237] represent partitions 1 through 4 respectively. Since the control panel can set a Bell Cut-Off Timer for each individual partition, select the section corresponding to the desired partition and enter any value between 001 and 255 minutes (000 = 4 minutes).

7.2.1 No Bell Cut-Off on Fire Alarm

SECTION [502]: OPTION [8]

The control panel can disable the Bell Cut-Off Timer when alarms are generated from zones defined as Standard or Delayed Fire Zones (see section 4.2 on page 12). The bell/siren output will remain enabled until a user disarms the partition in alarm.

7.2.2 Recycle Alarm Rate

SECTIONS [246] TO [249]

Once an alarm has occurred, the control panel will re-verify the zone status at a programmed rate once the Bell Cut-Off Timer and the Recycle Delay have elapsed. If any open zones remain, the control panel will regenerate the alarm. The number of times in one armed period that the control panel will re-verify the zone status after the Bell Cut-off occurs is programmed in sections [246] to [249], which represent partitions 1 through 4. Enter rate from 001 to 255 (000 = no limit).

7.2.3 Recycle Delay

SECTIONS [242] TO [245]

The Recycle Delay is the amount of time the control panel will wait after the Bell Cut-off occurs before re-verifying the zone status. In the section corresponding to the desired partition, program the Recycle Delay from 001 to 255 minutes (000 = disabled). Sections [242] to [245] represent partitions 1 through 4.

7.3 Wireless Transmitter Supervision Options

SECTION [501]: OPTIONS [1] AND [2]

The Supervision feature must be enabled in a wireless module in order for this feature to function. When the control panel receives a Supervision Loss message (wireless receiver no longer receiving signals from a wireless transmitter) in an armed partition, the control panel will generate an alarm unless the Wireless Transmitter Supervision Options have been disabled. Alarms will be silent or audible depending on individual zone settings. If a supervision loss occurs in a disarmed partition, the control panel will follow the programmed settings:

Trouble Only

Disabled

[1] OFF and [2] OFF

When a supervision loss occurs, the control panel will display the zone as open in the keypad display, but will not generate an alarm or a trouble. *This option is not permitted on UL systems.*

Trouble Only

[1] OFF and [2] ON

Regardless of whether the partition is armed or disarmed

when a supervision loss occurs, the *Zone Fault* trouble will appear in the keypad's Trouble Display and the control panel will transmit the appropriate report code (see section 8.2 on page 25).

Follow Zone's Alarm Type

[1] ON and [2] OFF

If a partition is armed, the control panel will generate a standard alarm when a supervision loss occurs. **If the partition is disarmed** when a supervision loss occurs, the *Zone Fault* trouble will appear in the keypad's Trouble Display and the control panel will transmit the appropriate report code (see section 8.2 on page 25).

Audible Alarm

[1] ON and [2] ON

If a partition is armed, the control panel will generate a standard alarm when a supervision loss occurs. **If the partition is disarmed** when a supervision loss occurs, the *Zone Fault* trouble will appear in the keypad's Trouble Display, the control panel will transmit the appropriate report code (see section 8.2 on page 25), and it will also generate an audible alarm.

7.3.1 Supervision Bypass Options

SECTION [501]: OPTION [3]

With option [3] enabled in section [501], the Wireless Transmitter Supervision Options will follow the zone's bypass definition. This means that the control panel will not perform any action if a supervision loss occurs on a bypassed zone. With option [3] disabled, the control panel will ignore the bypass definition and will follow the option set in section 7.3 if a supervision loss occurs on a bypassed zone.

7.4 Tamper Recognition Options

SECTION [501]: OPTIONS [5] AND [6]

Regardless of the Tamper Recognition Options, if a tamper or wire fault occurs on a zone or on an expansion module in an **armed** partition, the control panel will **always** generate an alarm unless Tamper Recognition has been disabled. Alarms will be silent or audible depending on individual zone settings.

If a tamper or wire fault occurs on a zone or on an expansion module in a **disarmed** partition, the control panel will follow the programmed settings:

Tamper Recognition Disabled

[5] OFF and [6] OFF

If a partition is armed, the control panel will generate a standard alarm when a tamper or wire fault occurs. **If the partition is disarmed**, the control panel will display the zone as open in the keypad display, but will not generate an alarm or a trouble. *This option is not permitted on UL systems.*

[5] ON and [6] OFF

Regardless of whether the partition is armed or disarmed when a tamper or wire fault occurs, the *Zone Fault* trouble will appear in the keypad's Trouble Display and the control panel will transmit the appropriate report code (see section 8.2 on page 25).

Follow Zone's Alarm Type

[5] OFF and [6] ON

If a partition is armed, the control panel will generate a standard alarm when a tamper or wire fault occurs. **If the partition is disarmed** when a tamper or wire fault occurs, the *Zone Fault* trouble will appear in the keypad's Trouble Display and the control panel will transmit the appropriate report code (see section 8.2 on page 25).

Audible Alarm

[5] ON and [6] ON

If a partition is armed, the control panel will generate a standard alarm when a tamper or wire fault occurs. **If the partition is disarmed** when a tamper or wiring failure occurs, the appropriate trouble will appear in the keypad's Trouble Display, the control panel will transmit the appropriate report code (see section 8.2 on page 25), and it will generate an audible alarm.

7.4.1 Tamper Bypass Options

SECTION [501]: OPTION [7]

With option [7] enabled in section [501], Tamper Recognition follows the zone bypass definition. This means that the control panel will not perform any action if a tamper or wire fault occurs on a bypassed zone. With option [7] disabled, the control panel will ignore the zone's bypass definition and will follow the option set in section 7.4 if a tamper or wire fault occurs on a bypassed zone.

7.5 Keypad Panic Options

SECTIONS [506], [510], [514], [518]: OPTIONS [1] TO [6]

Since the control panel can enable Keypad Panic Options for each partition, select the section that corresponds to the desired partition and set options [1] through [6] on/off to obtain the desired options. Sections [506], [510], [514], and [518] represent partitions 1 to 4 respectively.


Panic 1:

Option [1] ON/OFF= Enabled/Disabled

Option [4] ON = Panic 1 is Audible

Option [4] OFF = Panic 1 is Silent

For LCD keypads: Press and hold keys [1] and [3] simultaneously on the LCD keypad for 2 seconds to generate a Panic 1 alarm.

For Grafica keypads: Press and hold the  key on the Grafica keypad for 2 seconds to generate a Panic 1 (Medical) alarm.


Panic 2:

Option [2] ON/OFF= Enabled/Disabled

Option [5] ON = Panic 2 is Audible

Option [5] OFF = Panic 2 is Silent

For LCD keypads: Press and hold keys [4] and [6] simultaneously on the LCD keypad for 2 seconds to generate a Panic 2 alarm.

For Grafica keypads: Press and hold the  key on the Grafica keypad for 2 seconds to generate a Panic 2 (Auxiliary) alarm.


Panic 3:

Option [3] ON/OFF= Enabled/Disabled

Option [6] ON = Panic 3 is Pulsed (Fire)

Option [6] OFF = Panic 3 is Silent

For LCD keypads: Press and hold keys [7] and [9] simultaneously on the LCD keypad for 2 seconds to generate a Panic 3 alarm.

For Grafica keypads: Press and hold the  key on the Grafica keypad for 2 seconds to generate a Panic 3 (Fire) alarm.

Silent Operation

The control panel emits a single Confirmation Beep and transmits the appropriate report code (see section 8.2.5 on page 25) to the monitoring station.

Audible Operation


The alarm output (bell/siren) activates until a user cancels the alarm with a valid user access code or when the Bell Cut-Off Timer elapses (see section 7.2).

Fire Operation

Same as audible operation, except that the bell/siren output will be pulsed as shown in Figure 16 on page 13.

Event Reporting

Figure 20: Event Reporting

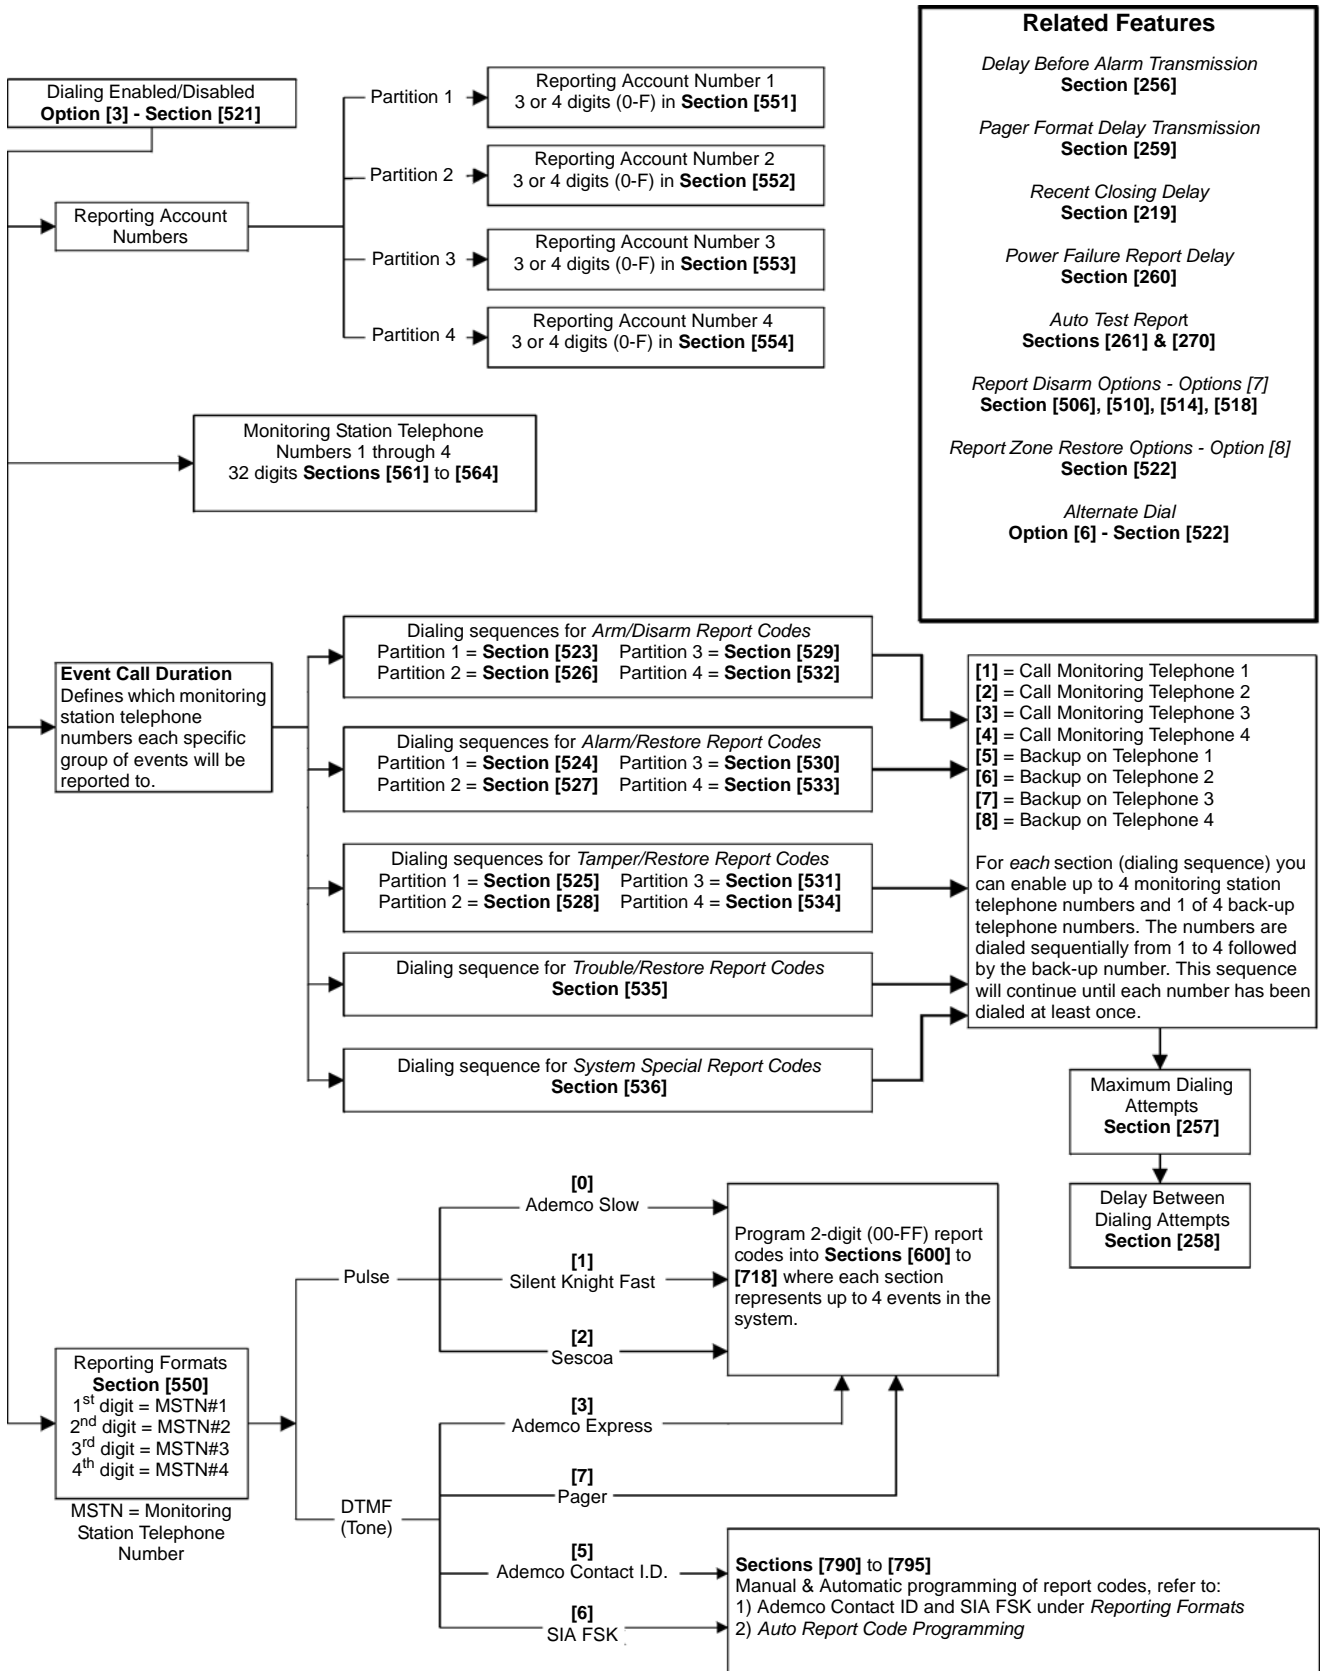

8.1 Reporting Enabled

SECTION [521]: OPTION [3]

This option will either enable or disable event reporting. With option [3] on in section [521], Event Reporting will be enabled. When an event (e.g. zone in alarm) occurs in the system, the control panel verifies if a report code was programmed in the section corresponding to the event. If a report code is programmed, the control panel will dial the monitoring station telephone number defined by the Event Call Direction feature. When the monitoring station answers, the control panel will transmit the system account code, followed by the programmed report code.

8.2 Report Codes

A report code is a 2-digit or 1-digit hexadecimal value, consisting of digits from 0 to F. Each section from [600] to [718] represents a set of four specific events. Each of these events can be programmed with a 1-digit or 2-digit report code. For a comprehensive list of the events and their relevant sections, please refer to the *Digiplex Programming Guide*. Please note that only the Ademco Slow, Silent Knight, Sescoa and Pager Formats support 1-digit report codes.

When a specific event occurs, the control panel will send the programmed report code to the monitoring station. The method of report code transmission is defined by the following two items: **Reporting Formats** (see section 8.5 on page 27) and **Event Call Direction** (see section 8.6 on page 27). These two items define how and where the report codes are transmitted. If you are using the Ademco CID or SIA formats, an Auto Report Code Programming feature is available. Using this feature, sections [600] to [718] do not have to be manually programmed (see section 8.13 on page 28). The following sub-sections provide a brief description of the events that the control panel can report:

8.2.1 Arming Report Codes

SECTIONS [600] TO [625]

A report code can be programmed for each of the 96 user access codes and 8 keyswitch zones. When using an access code or keyswitch to arm one or more partitions, the control panel can send the appropriate report code to the monitoring station identifying which access code or keyswitch zone was used to arm the partition(s).

8.2.2 Special Arming Report Codes

SECTIONS [626] TO [627]

Whenever the system is armed using one of the special arming features, the control panel can send the appropriate report code to the monitoring station identifying how the system was armed.

Section [626]

- Auto-arming (see section 6.5 on page 19)
- PC/Remote arming: system armed using WinLoad (see section 15 on page 44) or remote-armed using InTouch
- Late to Close (see section 6.5 on page 19)
- No Movement (see section 6.6 on page 20)

Section [627]

- Partial arming: when partitions are Stay armed, Instant armed or armed with bypassed zones
- Quick arming: partitions armed using any of the One-Touch arming features (see section 6.8 on page 20)
- Closing Delinquency: partitions not armed within a specific amount of time (see section 8.14 on page 29)

8.2.3 Disarming Report Codes

SECTIONS [628] TO [653]

A report code can be programmed for each of the 96 user access codes and 8 keyswitch zones. Whenever an access code or keyswitch is used to disarm one or more partitions, the control panel can send the appropriate report code to the monitoring station identifying which access code or keyswitch was used to disarm the partition(s). The control panel can transmit the report codes every time a partition is disarmed or only when disarmed following an alarm. Please refer to *Disarm Reporting Options* in section 8.10 on page 28.

8.2.4 Special Disarming Report Codes

SECTION [654]

Whenever using one of the special disarming features listed below, the control panel can send the report code to the monitoring station identifying how the system was disarmed. The control panel can transmit the report codes every time a partition is disarmed or only when disarmed following an alarm. Please refer to *Disarm Reporting Options* in section 8.10 on page 28.

Section [654]

- Cancel Auto-arm: if a user disarms the partition during the Auto-arm 60-second delay
- Quick Disarm: partitions disarmed using the One-Touch Disarming feature (see section 6.8 on page 20)
- PC/Remote Disarm: when WinLoad is used to disarm the system or remote-disarmed using InTouch
- Cancel Alarm: every time an alarm is cancelled within the system

8.2.5 Zone Alarm Report Codes

SECTIONS [655] TO [666]

A report code can be programmed for each of the 48 available zones. Whenever a zone generates an alarm, the control panel can send the appropriate report code to the monitoring station identifying which zone generated an alarm.

8.2.6 Zone Restore Report Codes

SECTIONS [667] TO [678]

A report code can be programmed for each of the 48 available zones. The control panel can transmit these report codes to the monitoring station when the zone closes after generating an alarm or once the bell has cut-off after alarm generation (see section 7.2 on page 22). Please refer to *Zone Restore Report Options* in section 8.11 on page 28.

8.2.7 Special Alarm Report Codes

SECTIONS [679] TO [680]

Whenever the system generates an alarm due to one of the conditions listed below, the control panel can send the appropriate report code to the monitoring station identifying the type of alarm.

Section [679]

- Emergency Panic (Panic 1): if Panic 1 has been activated (see section 7.5 on page 23)
- Auxiliary Panic (Panic 2): if Panic 2 has been activated (see section 7.5 on page 23)
- Fire Panic (Panic 3): if Panic 3 has been activated (see section 7.5 on page 23)
- Recent Closing: if after having armed the system, an alarm is generated within the *Recent Close Delay* (see section 8.7 on page 28)

Section [680]

- Auto Zone Shutdown: a zone communicates more than the programmed number of transmissions in a single armed period (see section 4.4.1 on page 13)
- Duress: a Duress enabled access code is keyed in (see section 13.5.2 on page 39).

8.2.8 Zone Tamper Report Codes

SECTION [681] TO [692]

A report code can be programmed for each of the 48 available zones. Whenever a tamper or wire fault occurs on a zone, the control panel can send the appropriate report code to the monitoring station identifying which zone was tampered. If the Tamper Recognition Options (see section 7.4 on page 22) are disabled, the control panel will not report the occurrence of any tampers or wire faults.

8.2.9 Zone Tamper Restore Codes

SECTIONS [693] TO [704]

A report code can be programmed for each of the 48 available zones. Whenever a tampered zone is restored, the control panel can send the appropriate report code to the monitoring station identifying which zone has been restored.

8.2.10 Special Tamper Report Codes

SECTION [705]

- Keypad Lockout: (see section 6.10 on page 20)

8.2.11 System Trouble Codes

SECTIONS [706] TO [711]

Section [706]

- AC Failure: no AC input detected on the control panel. The control panel can delay reporting this event, please refer to Power Fail Report Delay in section 8.9 on page 28.
- Battery Failure: the back up battery is disconnected or the battery voltage is less than or equal to 10.5V
- Auxiliary Supply: the auxiliary power supply's current is greater than or equal to 1.1A.

Section [707]

- Bell Output: the bell/siren output is disconnected or the current is greater than or equal to 3A
- Clock Loss: the control panel detects a loss in panel time (see section 12.7 on page 36)
- Fire Loop Trouble: a tamper has been detected on a fire zone (see section 4.2 on page 12)
- N/A

Section [708]

- Combust Fault: a module has been removed from the combust.
- Module Tamper: a tamper or wire fault is detected on a module other than a motion detector connected to the combust
- ROM Check Error: problem with on-board Read-Only Memory
- Module TLM: TLM failure detected on voice dialer connected to the combust


Section [709]

- Module Fail to Communicate: a module has failed to communicate with the monitoring station
- Printer Fault: the Printer Module connected to the combust has detected an error (see the Printer Module Manual for details).
- Module AC Failure: no AC power detected on a module connected to the combust
- Module Battery Failure: the backup battery on a module is disconnected or the battery voltage is low

Section [710]

- Module Auxiliary Failure: the auxiliary output of a module connected to the combust has exceeded current limits
- Wireless Transmitter Low Battery
- Wireless Module Supervision Failure: This report code is global unless using the Contact ID or SIA reporting formats.

Section [711]

- Phone Number 1 Fail to Communicate
 - Phone Number 2 Fail to Communicate
 - Phone Number 3 Fail to Communicate
 - Phone Number 4 Fail to Communicate
-  Please note: there is no Fail to Communicate for Pager telephone numbers.

8.2.12 System Trouble Restore Codes

SECTION [712] TO [716]

Section [712]

- TLM: a TLM failure has restored.



If the Telephone Line Monitoring (see section 9.1 on page 29) is disabled, the control panel will not transmit the TLM report code.

- AC Failure Restored
- Battery Failure Restored
- Auxiliary Supply Restored

Section [713]

- Bell Output Restored
- Time programmed
- Fire Loop Trouble Restored
- N/A

Section [714]

- Combust Fault Restored
- Module Tamper Restored
- ROM Check Error Restored
- Module TLM Restored

Section [715]

- N/A
- Printer Fault Restored
- Module AC Failure Restored
- Module Battery Failure Restored

Section [716]

- Module Auxiliary Failure Restored
- Wireless Transmitter Low Battery Restored
- Wireless Module Supervision Restored: This report code is global unless using the Contact ID or SIA Reporting formats.

8.2.13 Special Reporting Codes

SECTION [717] AND [718]

Whenever the system generates one of the following instances, the control panel can send the appropriate report code to the monitoring station identifying the type of system occurrence:

Section [717]

- Cold Start: the control panel was completely shutdown (total power loss) and the control panel was re-started
- Warm Start: the control panel performs a reset due to any sudden problem other than power loss
- Test Report: report generated automatically (see section 8.8 on page 28)

Section [718]

- WinLoad Access: the panel ended communication with WinLoad
- Installer In: installer has entered the programming mode
- Installer Out: installer has exited the programming mode

8.3 Monitoring Station Phone Number

SECTIONS [561] TO [564]

The Digiplex control panel can dial up to 4 different monitoring station telephone numbers. Sections [561] to [564] represent monitoring station telephone numbers 1 to 4 respectively. You can enter any digit from 0 to 9 and any special-function key (see Table 10, *Special Telephone Number Keys*) up to a maximum of 32 digits. Refer to Event Call Direction in section 8.6 and Reporting Formats in section 8.5 for details on how these telephone numbers are used.



For North American installations using either SIA or Contact ID reporting formats (see section 8.5), enter *70 and then either P (4-second pause) or W (wait for second dial tone) before the phone number to disable call-waiting.

Table 10: Special Telephone Number Keys

Function	LCD	Grafica
*	[STAY]	[#] (press key until desired letter/symbol appears)
#	[FORCE]	
Switch to Tone Dialing (T)	[ARM]	
Wait for second dial tone (W)	[DISARM]	
4-second pause (P)	[BYP]	
Clear	[CLEAR]	Left action key (Clear)
Delete	[TRBL]	—
Delete from cursor to the end	[ACC]	—
Insert space	[MEM]	—

8.4 Partition Account

SECTIONS [551] TO [554]

All report codes are preceded by a 4-digit or 3-digit Partition Account Number to ensure correct identification of active zones in a partitioned system. Sections [551] to [554] represent the Partition Account Codes for partitions 1 through 4. Partition account numbers can be any hexa-digit from 0 to F.

Example:

If a zone generates an alarm in Partition 1, the control panel will send Partition Account Number 1 followed by the report code.



Only SIA formats support the “0” digit in its account numbers. For account numbers that use another reporting format, you must replace the “0” with an “A”. To enter an “A”, press the [STAY] key on LCD keypads or the [#] key on Grafica keypads. When using the SIA Format, the control panel will only use Partition Account Number 1 programmed in section [551], but the report code will include the partition number.

8.5 Reporting Formats

SECTION [550]

The Digiplex control panel can use a number of different reporting formats and each of the four Monitoring Station Phone Numbers (see section 8.3) should be programmed with the same reporting format unless it is combined with a Pager format. The first digit entered into section [550] represents the reporting format (see

Table 11, *Reporting Formats*) used to communicate with Monitoring Station Telephone Number 1, the second digit represents Monitoring Station Telephone Number 2 and so forth.

Table 11: Reporting Formats

0 = Ademco slow (1400Hz, 1900Hz, 10BPS)
1 = Silent Knight fast (1400Hz, 1900Hz, 20BPS)
2 = Sescoa (2300Hz, 1800Hz, 20BPS)
3 = Ademco Express (DTMF 4+2)
4 = Reserved for future use
5 = Ademco Contact ID
6 = SIA FSK
7 = Pager

8.5.1 Standard Pulse Formats

The Digiplex control panel can use the Ademco slow, Silent Knight fast and Sescoa standard pulse reporting formats (see Table 11, *Reporting Formats*).

8.5.2 Ademco Express

The Ademco Express is a high-speed reporting format that communicates 2-digit (00 to FF) report codes programmed into sections [600] to [718]. Unlike other Ademco formats, the Ademco Express does not use the Contact ID Report Codes.

8.5.3 Ademco Contact ID

Ademco Contact ID is a fast communicator format that uses tone reporting instead of pulse reporting. This communicator format also uses a pre-defined list of industry standard messages and report codes that will suit most of your basic installation needs. To manually program the report codes, key in the 2-digit hexadecimal values from the *Contact ID Report Codes List* in the *Programming Guide* into the desired report codes in sections [600] to [718] (see section 8.2 on page 25). You can also enter 00 to disable reporting or FF to use the default report code from the *Automatic Report Code List* in the *Programming Guide*. To automatically program a set of default Contact ID codes, refer to section 8.13 on page 28.

8.5.4 SIA FSK

SIA FSK is a fast communicator format that uses tone reporting instead of pulse reporting. This communicator format uses a pre-defined list of industry standard messages and report codes that will suit most of your basic installation needs. To manually program the report codes, enter 00 to disable reporting or any other value to use the default report code from the *Automatic Report Code List* in the *Programming Guide*. To automatically program a set of default SIA FSK codes, refer to section 8.13 on page 28.

8.5.5 Pager Reporting Format

Using this format allows the control panel to transmit report codes to a pager. A pound symbol “#” is automatically generated after the report code. Please refer to Pager Delay in section 8.12 on page 28.

8.6 Event Call Direction

SECTIONS [522] TO [536]

As shown in Figure 20 on page 24, the control panel events are divided into three event groups for each partition and two global event groups. Each event group can be programmed to dial up to four monitoring station telephone numbers and to use one of the four telephone numbers as a backup. The numbers are dialed sequentially starting from 1, skipping any disabled numbers and stopping once all selected telephone numbers have been reached.

If the control panel still fails to report to a monitoring station telephone number after reaching the Maximum Dialing Attempts (see section 8.6.1), the control panel will dial the selected backup telephone number unless the Alternate Backup Option is enabled (see section 8.6.3). When the Alternate Backup Option is enabled, the control panel will dial the backup number after every failed attempt.

8.6.1 Maximum Dialing Attempts

SECTION [257]

The number (001 to 255) programmed into section [257] determines how many times the control panel will dial the same monitoring station telephone number before proceeding to the next number. Also refer to section 8.6.3.

8.6.2 Delay Between Dialing Attempts

SECTION [258]

This delay will determine the amount of time the control panel will wait between dialing attempts. This delay can be set from 001 to 255 seconds.

8.6.3 Alternate Backup Option

SECTION [522]: OPTION [6]

With option [6] enabled in section [522], the control panel will dial the selected backup telephone number after every failed attempt to contact a monitoring station telephone number. Otherwise (option [6] off), the control panel will only dial the backup telephone number after the Maximum Dialing Attempts (see section 8.6.1) to one monitoring station telephone number have failed.

8.7 Recent Close Delay

SECTION [219]

If after having armed the system, an alarm is generated within the period programmed into section [219] (000 to 255 seconds), the control panel will transmit the *Recent Close* report code programmed into section [679].

8.8 Auto Test Report

SECTIONS [261] AND [270]

The control panel will transmit the test report code programmed into section [717] after the number of days (000 to 255) programmed into section [261] has elapsed and at the time (00:00 to 23:59) programmed into section [270].

8.8.1 Hourly Test Transmission

SECTION [522]: OPTION [3]

Alternatively, the control panel can transmit the test report code programmed into section [717] every hour. Turn off option [3] to disable this feature. Program the minute of each hour (00:00 to 00:59) it sends the test report into section [270].

8.9 Power Fail Report Delay

SECTION [260]

The control panel will delay transmission of the *AC Failure* report code programmed into section [712] by the period programmed into section [260] (000 to 255 minutes).

8.10 Disarm Reporting Options

SECTIONS [506], [510], [514], [518]: OPTION [7]

Since the control panel can enable the Disarm Reporting Options for each individual partition, select the section that corresponds to

the desired partition and turn option [7] on or off as desired. Sections [506], [510], [514], [518] represent partitions 1 to 4 respectively.

Report On Disarm After Alarm Only

Option [7] ON

The Digiplex control panel will send Disarming Report Codes (see section 8.2.3 on page 25) to the monitoring station only when the system is disarmed following an alarm.

REPORT ON DISARM

Option [7] OFF

The Digiplex control panel will send the Disarming Report Codes (see section 8.2.3 on page 25) to the monitoring station whenever a partition is disarmed.

8.11 Zone Restore Report Options

SECTION [522]: OPTION [8]

Report On Zone Closure

Option [8] ON

The control panel will send the *Zone Alarm Restore* report codes (see section 8.2.6 on page 25) to the monitoring station as soon as the zone returns to normal (zone closure) or upon disarming

Report On Bell Cut-off

Option [8] OFF

The control panel will send the *Zone Alarm Restore* report codes (see section 8.2.6 on page 25) to the monitoring station when the Bell Cut-Off Timer has elapsed or when the alarm has been disarmed (see section 7.2 on page 22).

8.12 Pager Delay

SECTION [259]

When using the Pager Reporting Format (see section 8.5.5 on page 27), the control panel will wait for the delay period programmed into section [259] (001 to 060 seconds) before uploading the report codes to the pager. This is to allow time for the pager system to provide a dial tone or to bypass the welcome message before sending data.

8.13 Auto Report Code Programming

SECTIONS [790] TO [795]

When using either the Contact ID or SIA Reporting Formats (see section 8.5 on page 27), the Digiplex system can automatically program a set of default report codes. From programming mode (see section 3.1 on page 9) enter any of the following sections to set the indicated report codes:

All Codes

Section [790]

Sets all report codes in sections [600] to [718] with the default values from the *Automatic Report Codes List* in the *Programming Guide*.

Arming & Disarming Codes

Section [791]

Sets all report codes in sections [600] to [654] with the default values from the *Automatic Report Codes List* in the *Programming Guide*.

Alarm Restore Codes

Section [792]

Sets all report codes in sections [655] to [680] with the default values from the *Automatic Report Codes List* in the *Programming Guide*.

Tamper & Tamper Restore Codes

Section [793]

Sets all report codes in sections [681] to [705] with the default values from the *Automatic Report Codes List* in the *Programming Guide*.

Trouble Restore Codes

Section [794]

Sets all report codes in sections [706] to [716] with the default values from the *Automatic Report Codes List* in the *Programming Guide*.

Special Codes

Section [795]

Sets all report codes in sections [717] to [718] with the default values from the *Automatic Report Codes List* in the *Programming Guide*.

Please note that even after automatic report codes have been set, you can still use the manual programming method (see section

8.5.3 & section 8.5.4 on page 27) to program remaining report codes or change some of the defaults.

8.14 Closing Delinquency

SECTIONS [262] TO [265]

When a partition in the system is disarmed, the control panel will start the corresponding partition's Closing Delinquency Timer, which is programmed for each partition. If the Closing Delinquency Timer elapses before the partition is armed again, the control panel will transmit a "Closing Delinquency" report code to the monitoring station. Enter a value from 001 to 255 days into the appropriate section:

- Closing Delinquency Timer Partition 1: Section [262]
- Closing Delinquency Timer Partition 2: Section [263]
- Closing Delinquency Timer Partition 3: Section [264]
- Closing Delinquency Timer Partition 4: Section [265]

Enter 000 (default) to disable.

For example, the Closing Delinquency Timer for Partition 1 is programmed for 005 days. When the system is disarmed, DGP-848 will begin the Closing Delinquency Timer for Partition 1. If the partition has not been armed within five days, DGP-848 will transmit a "Closing Delinquency" report code to the monitoring station.

Dialer Options

9.1 Telephone Line Monitoring

SECTION [521]: OPTIONS [1] AND [2]

When enabled, the system verifies the existence of a telephone line once every second. A line test failure occurs when the TLM detects less than 3 volts for the period defined by the TLM Fail Timer (see section 9.1.1). If the line test fails, the panel will generate one or more conditions as defined by the TLM settings below, until the control panel detects the telephone line again. Please note that when the dialer detects a telephone ring, the TLM test stops for 1 minute.

TLM Disabled

[1] OFF and [2] OFF

Trouble Only

[1] ON and [2] OFF

Upon line test failure, the *Communicator* trouble will appear in the keypad's Trouble Display.

Alarm if System Armed

[1] OFF and [2] ON

Upon line test failure, the *Communicator* trouble will appear in the keypad's Trouble Display and the control panel will generate an alarm if the system is armed.

Silent Alarm Becomes Audible

[1] ON and [2] ON

Upon line test failure, the *Communicator* trouble will appear in the keypad's Trouble Display and cause a *Silent Alarm* zone or *Silent* panic alarm to switch to an audible alarm.

9.1.1 TLM Fail Timer

SECTION [255]

If the TLM does not detect the existence of a telephone line for the time programmed in this section, the control panel will generate the condition(s) defined by the TLM options (see section 9.1). Enter any value between 016 and 255 (value is X2 seconds) into section [255]. Entering a value between 000 and 016 will set the TLM Fail Timer to 32 seconds.

9.2 Tone/pulse Dialing

SECTION [521]: OPTION [4]

Option [4] ON = the control panel can dial using the tone/DTMF format.

Option [4] OFF = the control panel will use the pulse dialing format. Refer to section 9.3 for setting the pulse ratio.

9.3 Pulse Ratio

SECTION [521]: OPTION [5]

When using Pulse dialing (see section 9.2), you can select one of two Pulse Ratios. Although most European countries use the 1:2 pulse ratio, the 1:1.5 ratio may provide better results in some cases. The same applies for North American countries. If the 1:1.5 pulse ratio is not providing the desired results, the 1:2 ratio may be used.

Option [5] ON = North American pulse ratio of 1:1.5

Option [5] OFF = European pulse ratio of 1:2

9.4 Busy Tone Detection

SECTION [521]: OPTION [6]

Option [6] ON = the control panel can immediately hang up if it receives a busy signal when dialing an outside number.

Option [6] OFF = feature disabled

9.5 Switch To Pulse

SECTION [521]: OPTION [7]

Option [7] ON = When reporting events to the monitoring station, the control panel can switch from tone dialing to pulse dialing on the fifth attempt. The control panel continues to use pulse dialing until it establishes communication. If switching to another monitoring station telephone number, the control panel will return to tone dialing and will switch back to pulse dialing on the fifth attempt.

Option [7] OFF = Feature disabled

9.6 Bell On Communication Fail

SECTION [521]: OPTION [8]

Option [8] ON = If the control panel fails to communicate with the monitoring station when the system is armed, the control panel can enable the BELL output, which will set off any bells or sirens connected to the output.

Option [8] OFF = Feature disabled

9.7 Dial Tone Delay

SECTION [522]: OPTION [7]

Option [7] ON = Dialer will hang up if no dial tone is present after 32 seconds

Option [7] OFF = Dialer will continue to dial if no dial tone is present after 3 seconds. If more time is required, you can insert a 4-second pause into the desired telephone number sequence (see section 8.3 on page 27).

Programmable Outputs

A PGM is a programmable output that toggles to its opposite state (i.e. a normally open PGM will close) when a specific event has occurred in the system.

For example, a PGM can be used to reset smoke detectors, activate strobe lights, open/close garage doors and much more.

When a PGM closes, the control panel supplies a ground to the PGM activating any device or relay connected to it. When a PGM opens, the circuit opens from ground therefore not providing any power to devices connected to it. The control panel provides a maximum of 100mA to PGM1 and 50mA to PGMs 2, 3 and 4. PGM1 to PGM4 are normally open outputs and PGM5 is a normally open or normally closed 5A relay. For information on how to connect a relay to a PGM, please refer to section 2.9 on page 6.

10.1 PGM Activation Event

SECTIONS [400], [402], [404], [406], AND [408]

The PGM Activation Event will activate the selected PGM when a specific event or events occur in the system. The control panel can set separate activation events for each PGM.

For example, the control panel can be programmed to activate PGM2 whenever the system is Force armed.

To program a PGM activation event:

- 1) Enter the section that represents the desired PGM.
PGM1 = [400] PGM4 = [406]
PGM2 = [402] PGM5 = [408]
PGM3 = [404]

- 2) Enter the first digit (see *PGM Programming Table* on page 32) where each digit from 0 to F represents a specific group of events.
- 3) Enter the second digit, which can be any digit from 0 to F depending on the first digit.
- 4) After entering the second digit, use the Feature Select method (enable/disable options [1] to [8]) to select up to eight specific events as detailed in the *PGM Programming Table*.

If you select a group and set all options to OFF, all users/zones/selections of that group will be enabled (result is "ANY" of that group).


For example, if you select A0, and set all 8 options to OFF, the PGM will activate whenever a user between 1 and 8 arms the system.

For details on the available activation events please refer to the *PGM Programming Table* on page 32. Below you will find brief details on just a few of the available activation events:

Smoke Reset: Deactivates the PGM for a period of 4 seconds every time the [CLEAR] and [ENTER] (LCD keypad) or [*] and [#] (Grafica keypad) keys are pressed simultaneously and held for 2 seconds. Please refer to section 2.15.3 on page 8 for instructions on connecting the PGM in order to perform a smoke detector reset. Program First Digit = [4], Second Digit = [1], then [5] on.

Ground Start: Just before the control panel attempts to dial an outside line when using ground start telephone equipment, the PGM will activate for the period defined by the PGM Delay (see section 10.3.1 on page 31). Please note that the PGM Deactivation Option must be set to Timed (see section 10.3 on page 31). Program First Digit = [4], Second Digit = [1], then [6] on.

Figure 21: Ground Start Circuit

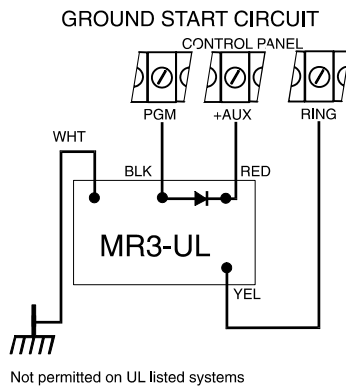

Kissoff: After receiving a handshake from the monitoring station, the control panel activates the PGM for the period defined by the PGM Delay (see section 10.3.1). This can be used to latch the monitoring station connection to another device such as a microphone/speaker module. Please note that the PGM Deactivation Option must be set to Timed (see section 10.3). Program First Digit = **[4]**, Second Digit = **[1]**, then **[7]** on.

Strobe: Activates the PGM whenever the system is in alarm. The PGM will remain activated even after Bell Cut-off and will wait until the alarm is cancelled before deactivating the PGM. Program First Digit = **[1]**, Second Digit = choose **[PARTITION]** (0 = all enabled partitions, 8 = any enabled partition), then **[5]** on.

10.2 PGM Deactivation Event

SECTIONS [401], [403], [405], [407], AND [409]

If the PGM Deactivation Option is set to Follow (see section 10.3), the PGM will deactivate when the programmed event occurs unless the first digit of the PGM Activation Event is 1 to 7. To program a PGM Deactivation Event:

- 1) Enter the section that represents the desired PGM.
 PGM1 = **[401]** PGM4 = **[407]**
 PGM2 = **[403]** PGM5 = **[409]**
 PGM3 = **[405]**
- 2) Enter the first digit (see *PGM Programming Table* on page 32) where each digit from 0 to F represents a specific group of events.
- 3) Enter the second digit, which can be any digit from 0 to F depending on the first digit.
- 4) After entering the second digit, use the Feature Select method (enable/disable options [1] to [8]) to select up to eight specific events as detailed in the *PGM Programming Table*.

If you select a group and set all options to OFF, all users/zones/selections of that group will be enabled (result is "ANY" of that group).

For example, if you select A0, and set all 8 options to OFF, the PGM will deactivate whenever a user between 1 and 8 arms the system.

If the PGM Deactivation Option is set for Timed (see section 10.3), the PGM will ignore the PGM Deactivation Event.

10.3 PGM Deactivation Option

SECTION [502]: OPTIONS [1] TO [5]

Once the PGMs are activated (see section 10.1) they will deactivate according to the options programmed in section **[502]**. Options **[1]** to **[5]** represent PGMs 1 to 5 respectively. Each PGM can be set to Follow or Timed by turning the option representing the PGM on or off:

For example, if option [1] is on in section [502], then PGM1 is set to Timed.

Follow

Option OFF

- 1) If the first digit of the PGM Activation Event is set at 1, 2, 3, 4 or 7, the PGM will remain activated until the PGM Activation Event has ended. It will ignore the PGM Deactivation Event.
- 2) If the first digit of the PGM Activation Event is set at 8, 9, A, B, C, D, E, or F, the PGM will remain activated until the PGM Deactivation Event occurs.

Timed

Option ON

After activating the PGM, the control panel will start the PGM Delay Timer (see section 10.3.1) and the PGM will deactivate only when the PGM Delay Timer has elapsed and will ignore the PGM Deactivation Event.

10.3.1 PGM Delay Timers

SECTIONS [250] TO [254]

To program the PGM Delay Timers, enter the section that corresponds to the desired PGM, where sections **[250]** to **[254]** represent PGM1 to PGM5 respectively, and enter a value from 001 to 255. The value entered is either in seconds or minutes as determined by the PGM Time Base Selection (see section 10.3.2).

10.3.2 PGM Time Base Selection

SECTION [503]: OPTIONS [1] TO [5]

The PGM Time Base Selection determines whether the Delays programmed in sections [250] to [254] are in minutes or seconds. Options **[1]** to **[5]** represent PGMs 1 to 5 respectively. Each PGM Delay Timer can be set to minutes or seconds by turning the options on or off in section **[503]**:

Option ON = Minutes
 Option OFF = Seconds

10.4 PGM1 Is Smoke Input

SECTION [502]: OPTION [7]

Enabling option **[7]** in section **[502]** will set PGM1 to act as a zone input for two-wire smoke detectors. When programming Zone Numbering (see section 4.1 on page 12), the control panel will recognize PGM1 as input number 255. For more information on how to connect two-wire smoke detectors, please refer to section 2.15.1 on page 7.

PGM Programming Table

***Note1:** 0 = All partitions enabled in the system (see section 12.5 on page 36)
 1 = Partition 1 3 = Partition 3
 2 = Partition 2 4 = Partition 4
 8 = Any partition enabled in the system (at least one)

First Digit	Event	Second Digit	Feature Select Programming								
			1	2	3	4	5	6	7	8	
0	PGM Disabled	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
1	Status 1	Note 1*	Any Arming Method	Force Arm	Stay Arm	Instant Arm	Strobe <small>(until alarm is cancelled)</small>	Silent Alarm <small>(until alarm is cancelled or bell is cut off)</small>	Audible Alarm <small>(until alarm is cancelled or bell is cut off)</small>	Fire Alarm <small>(until alarm is cancelled or bell is cut off)</small>	
2	Status 2	Note 1*	Ready Status	Exit Delay	Entry Delay	Trouble	Alarm Memory	Zones Bypassed <small>(armed or not)</small>	User or Installer Programming	Keypad Lockout	
3	Status 3	Note 1*	Intellizone Delay	Fire Delay	Auto-Arm Delay	Access	Any Zone Tamper	Zone Low Battery	Fire Loop	Zone Supervision	
4	Status 4	0	Chime Partition 1	Chime Partition 2	Chime Partition 3	Chime Partition 4	Siren Partition 1	Siren Partition 2	Siren Partition 3	Siren Partition 4	
		1	N/A	N/A	N/A	N/A	Smoke Reset	Ground Start	Kissoff	N/A	
		2	System Trouble	Comm. Trouble	Module Trouble	Combus Trouble	N/A	N/A	N/A	N/A	Clock Loss
		3	AC Fail	Battery Fail	Aux. Limit	Bell Limit	Bell Absent	ROM Error	N/A	N/A	N/A
		4	TLM	Fail to Com1	Fail to Com2	Fail to Com3	Fail to Com4	Fail to ComPC	N/A	N/A	N/A
		5	Module Tamper	Module ROM Error	Module TLM	Module Fail to Com Phone#	Printer Fault	Module AC Fail	Module Battery Fail	Module Aux. Fail	Module Aux. Fail
		6	Missing Keypad	Any Module Missing	N/A	N/A	N/A	Global Combus Failure	Combus Overload	Module Combus Com Fail	Module Combus Com Fail
7	At the Selected Time	0	00:00	00:15	00:30	00:45	01:00	01:15	01:30	01:45	
		1	02:00	02:15	02:30	02:45	03:00	03:15	03:30	03:45	
		2	04:00	04:15	04:30	04:45	05:00	05:15	05:30	05:45	
		3	06:00	06:15	06:30	06:45	07:00	07:15	07:30	07:45	
		4	08:00	08:15	08:30	08:45	09:00	09:15	09:30	09:45	
		5	10:00	10:15	10:30	10:45	11:00	11:15	11:30	11:45	
		6	12:00	12:15	12:30	12:45	13:00	13:15	13:30	13:45	
		7	14:00	14:15	14:30	14:45	15:00	15:15	15:30	15:45	
		8	16:00	16:15	16:30	16:45	17:00	17:15	17:30	17:45	
		9	18:00	18:15	18:30	18:45	19:00	19:15	19:30	19:45	
		A	20:00	20:15	20:30	20:45	21:00	21:15	21:30	21:45	
B	22:00	22:15	22:30	22:45	23:00	23:15	23:30	23:45			
8	Utility Keys	0	Utility Key 1	Utility Key 2	Utility Key 3	Utility Key 4	Utility Key 5	Utility Key 6	Utility Key 7	Utility Key 8	
		1	Utility Key 9	Utility Key 10	Utility Key 11	Utility Key 12	Utility Key 13	Utility Key 14	Utility Key 15	Utility Key 16	

First Digit	Event	Second Digit	Feature Select Programming								
			1	2	3	4	5	6	7	8	
9	Access Granted	0	Door 01	Door 02	Door 03	Door 04	Door 05	Door 06	Door 07	Door 08	
		1	Door 09	Door 10	Door 11	Door 12	Door 13	Door 14	Door 15	Door 16	
		2	Door 17	Door 18	Door 19	Door 20	Door 21	Door 22	Door 23	Door 24	
		3	Door 25	Door 26	Door 27	Door 28	Door 29	Door 30	Door 31	Door 32	
	User Code Entered	8	Code 01	Code 02	Code 03	Code 04	Code 05	Code 06	Code 07	Code 08	
		9	Code 09	Code 10	Code 11	Code 12	Code 13	Code 14	Code 15	Code 16	
		A	Code 17	Code 18	Code 19	Code 20	Code 21	Code 22	Code 23	Code 24	
		B	Code 25	Code 26	Code 27	Code 28	Code 29	Code 30	Code 31	Code 32	
		C	Code 33	Code 34	Code 35	Code 36	Code 37	Code 38	Code 39	Code 40	
		D	Code 41	Code 42	Code 43	Code 44	Code 45	Code 46	Code 47	Code 48	
		E	Code 49	Code 50	Code 51	Code 52	Code 53	Code 54	Code 55	Code 56	
		F	Code 57	Code 58	Code 59	Code 60	Code 61	Code 62	Code 63	Code 64	
	A	Arming	0	Code 01	Code 02	Code 03	Code 04	Code 05	Code 06	Code 07	Code 08
			1	Code 09	Code 10	Code 11	Code 12	Code 13	Code 14	Code 15	Code 16
2			Code 17	Code 18	Code 19	Code 20	Code 21	Code 22	Code 23	Code 24	
3			Code 25	Code 26	Code 27	Code 28	Code 29	Code 30	Code 31	Code 32	
4			Code 33	Code 34	Code 35	Code 36	Code 37	Code 38	Code 39	Code 40	
5			Code 41	Code 42	Code 43	Code 44	Code 45	Code 46	Code 47	Code 48	
6			Code 49	Code 50	Code 51	Code 52	Code 53	Code 54	Code 55	Code 56	
7			Code 57	Code 58	Code 59	Code 60	Code 61	Code 62	Code 63	Code 64	
Disarming		8	Code 01	Code 02	Code 03	Code 04	Code 05	Code 06	Code 07	Code 08	
		9	Code 09	Code 10	Code 11	Code 12	Code 13	Code 14	Code 15	Code 16	
		A	Code 17	Code 18	Code 19	Code 20	Code 21	Code 22	Code 23	Code 24	
		B	Code 25	Code 26	Code 27	Code 28	Code 29	Code 30	Code 31	Code 32	
		C	Code 33	Code 34	Code 35	Code 36	Code 37	Code 38	Code 39	Code 40	
		D	Code 41	Code 42	Code 43	Code 44	Code 45	Code 46	Code 47	Code 48	
	E	Code 49	Code 50	Code 51	Code 52	Code 53	Code 54	Code 55	Code 56		
	F	Code 57	Code 58	Code 59	Code 60	Code 61	Code 62	Code 63	Code 64		
B	Zone is OK	0	Zone 01	Zone 02	Zone 03	Zone 04	Zone 05	Zone 06	Zone 07	Zone 08	
		1	Zone 09	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16	
		2	Zone 17	Zone 18	Zone 19	Zone 20	Zone 21	Zone 22	Zone 23	Zone 24	
		3	Zone 25	Zone 26	Zone 27	Zone 28	Zone 29	Zone 30	Zone 31	Zone 32	
		4	Zone 33	Zone 34	Zone 35	Zone 36	Zone 37	Zone 38	Zone 39	Zone 40	
		5	Zone 41	Zone 42	Zone 43	Zone 44	Zone 45	Zone 46	Zone 47	Zone 48	
	Zone is Open	8	Zone 01	Zone 02	Zone 03	Zone 04	Zone 05	Zone 06	Zone 07	Zone 08	
		9	Zone 09	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16	
		A	Zone 17	Zone 18	Zone 19	Zone 20	Zone 21	Zone 22	Zone 23	Zone 24	
		B	Zone 25	Zone 26	Zone 27	Zone 28	Zone 29	Zone 30	Zone 31	Zone 32	
		C	Zone 33	Zone 34	Zone 35	Zone 36	Zone 37	Zone 38	Zone 39	Zone 40	
		D	Zone 41	Zone 42	Zone 43	Zone 44	Zone 45	Zone 46	Zone 47	Zone 48	

First Digit	Event	Second Digit	Feature Select Programming							
			1	2	3	4	5	6	7	8
C	Auto Zone Shutdown	0	Zone 01	Zone 02	Zone 03	Zone 04	Zone 05	Zone 06	Zone 07	Zone 08
		1	Zone 09	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16
		2	Zone 17	Zone 18	Zone 19	Zone 20	Zone 21	Zone 22	Zone 23	Zone 24
		3	Zone 25	Zone 26	Zone 27	Zone 28	Zone 29	Zone 30	Zone 31	Zone 32
		4	Zone 33	Zone 34	Zone 35	Zone 36	Zone 37	Zone 38	Zone 39	Zone 40
		5	Zone 41	Zone 42	Zone 43	Zone 44	Zone 45	Zone 46	Zone 47	Zone 48
	Zone Bypass (when system is armed)	8	Zone 01	Zone 02	Zone 03	Zone 04	Zone 05	Zone 06	Zone 07	Zone 08
		9	Zone 09	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16
		A	Zone 17	Zone 18	Zone 19	Zone 20	Zone 21	Zone 22	Zone 23	Zone 24
		B	Zone 25	Zone 26	Zone 27	Zone 28	Zone 29	Zone 30	Zone 31	Zone 32
		C	Zone 33	Zone 34	Zone 35	Zone 36	Zone 37	Zone 38	Zone 39	Zone 40
		D	Zone 41	Zone 42	Zone 43	Zone 44	Zone 45	Zone 46	Zone 47	Zone 48
D	Zone Fault (Tamper/Fire Loop)	0	Zone 01	Zone 02	Zone 03	Zone 04	Zone 05	Zone 06	Zone 07	Zone 08
		1	Zone 09	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16
		2	Zone 17	Zone 18	Zone 19	Zone 20	Zone 21	Zone 22	Zone 23	Zone 24
		3	Zone 25	Zone 26	Zone 27	Zone 28	Zone 29	Zone 30	Zone 31	Zone 32
		4	Zone 33	Zone 34	Zone 35	Zone 36	Zone 37	Zone 38	Zone 39	Zone 40
		5	Zone 41	Zone 42	Zone 43	Zone 44	Zone 45	Zone 46	Zone 47	Zone 48
	RF Zone Fault (Low Battery Supervision)	8	Zone 01	Zone 02	Zone 03	Zone 04	Zone 05	Zone 06	Zone 07	Zone 08
		9	Zone 09	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16
		A	Zone 17	Zone 18	Zone 19	Zone 20	Zone 21	Zone 22	Zone 23	Zone 24
		B	Zone 25	Zone 26	Zone 27	Zone 28	Zone 29	Zone 30	Zone 31	Zone 32
		C	Zone 33	Zone 34	Zone 35	Zone 36	Zone 37	Zone 38	Zone 39	Zone 40
		D	Zone 41	Zone 42	Zone 43	Zone 44	Zone 45	Zone 46	Zone 47	Zone 48
E	Fire or Burglar Alarms	0	Zone 01	Zone 02	Zone 03	Zone 04	Zone 05	Zone 06	Zone 07	Zone 08
		1	Zone 09	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16
		2	Zone 17	Zone 18	Zone 19	Zone 20	Zone 21	Zone 22	Zone 23	Zone 24
		3	Zone 25	Zone 26	Zone 27	Zone 28	Zone 29	Zone 30	Zone 31	Zone 32
		4	Zone 33	Zone 34	Zone 35	Zone 36	Zone 37	Zone 38	Zone 39	Zone 40
		5	Zone 41	Zone 42	Zone 43	Zone 44	Zone 45	Zone 46	Zone 47	Zone 48
	Fire or Burglar Restore	8	Zone 01	Zone 02	Zone 03	Zone 04	Zone 05	Zone 06	Zone 07	Zone 08
		9	Zone 09	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16
		A	Zone 17	Zone 18	Zone 19	Zone 20	Zone 21	Zone 22	Zone 23	Zone 24
		B	Zone 25	Zone 26	Zone 27	Zone 28	Zone 29	Zone 30	Zone 31	Zone 32
		C	Zone 33	Zone 34	Zone 35	Zone 36	Zone 37	Zone 38	Zone 39	Zone 40
		D	Zone 41	Zone 42	Zone 43	Zone 44	Zone 45	Zone 46	Zone 47	Zone 48
F	Module Troubles	0	Combus Fault	Module Tamper	ROM Error	Module TLM	Fail to Com	Printer Fault	AC Fail	Battery Fail
		1	Aux. Output Fail	N/A	N/A	N/A	N/A	N/A	N/A	N/A
		8	Combus Fault Restore	Module Tamper Restore	ROM Error Restore	Module TLM Restore	Fail to Com. Restore	Printer Fault Restore	AC Fail Restore	Battery Fail Restore
		9	Aux. Fail	N/A	N/A	N/A	N/A	N/A	N/A	N/A

Table 12: Utility Key Event Generation Table

Event Name	Using Keyswitch Definition 3	Using Keyswitch Definition 4	Using Keypad Buttons	Using Remote Controls
Utility Key 1	Keyswitch 001 opens	Keyswitch 001 opens	[1] + [2]	Utility Key 1 ‡
Utility Key 2	Keyswitch 002 opens	Keyswitch 001 closes	[4] + [5]	Utility Key 2 ‡
Utility Key 3	Keyswitch 003 opens	Keyswitch 002 opens	[7] + [8]	Utility Key 3 ‡
Utility Key 4	Keyswitch 004 opens	Keyswitch 002 closes	[CLEAR] + [0] or [*] + [0]	Utility Key 4 ‡
Utility Key 5	Keyswitch 005 opens	Keyswitch 003 opens	[2] + [3]+	Utility Key 5 ‡
Utility Key 6	Keyswitch 006 opens	Keyswitch 003 closes	[5] + [6]	----
Utility Key 7	Keyswitch 007 opens	Keyswitch 004 opens	[8] + [9]	----
Utility Key 8	Keyswitch 008 opens	Keyswitch 004 closes	[0] + [ENTER] or [0] + [#]	----
Utility Key 9	----	Keyswitch 005 opens	----	----
Utility Key 10	----	Keyswitch 005 closes	----	----
Utility Key 11	----	Keyswitch 006 opens	----	----
Utility Key 12	----	Keyswitch 006 closes	----	----
Utility Key 13	----	Keyswitch 007 opens	----	----
Utility Key 14	----	Keyswitch 007 closes	----	----
Utility Key 15	----	Keyswitch 008 opens	----	----
Utility Key 16	----	Keyswitch 008 closes	----	----

‡ You must program a remote control button with a Utility Key option.

System Settings & Commands

12.1 Hardware Reset

Performing a hardware reset will set all programmable sections from **[001]** to **[718]** to default values, including the Installer Code and System Master Code. Only the Panel ID, PC Password, PC Telephone Number and Event Buffer will not be reset.

- 1) Make sure the Installer Code Lock is disabled (see section 12.4 on page 36)
- 2) Remove the battery and AC power from the control panel.
- 3) Set the RESET jumper to on by placing a jumper on the reset pins of the control panel.
- 4) Re-connect the AC power and the battery to the control panel.
- 5) Wait 10 seconds and remove the jumper.

12.2 Software Reset

Performing a software reset will set certain parameters to default values or program certain sections with a set of pre-defined values.

To do so:

- 1) Make sure the RESET jumper on the control panel is on.
- 2) Enter *Panel Programming Mode* (see section 3.1 on page 9).
- 3) Enter the 3-digit **[SECTION]** corresponding to the software reset you wish to perform:

Section **[970]**

Entering this section will reset all programmable sections from **[001]** to **[896]** (except sections **[451]** to **[498]**, **[555]**, **[556]**, **[560]**, **[790]** to **[795]**, and **[800]**) to default values. The Zone Labels, Panel ID, PC Password, PC Telephone Number, Installer Code, System Master Code, Event Buffer, and Automatic Report Codes will not be reset.

Section **[974]**

Entering this section resets the following Access Control sections: **[301]** to **[332]**, **[340]** to **[355]**, **[361]** to **[375]**, **[381]** to **[392]**, and **[537]**.

Section **[975]**

Entering this section will reset all Zone and Keyswitch programming sections from **[001]** to **[056]**, and **[101]** to **[156]** to default values.

Section **[976]**

Entering this section will reset the following sections to default values: **[200]** to **[261]**, **[270]** to **[274]**, **[400]** to **[409]**, and **[440]** to **[442]**.

Section **[977]**

Entering this section will reset sections from **[500]** to **[522]** to default values.

Section **[978]**

Entering this section will reset the following communication sections to default values: **[521]** to **[536]**, **[550]** to **[554]**, **[561]** to **[564]**, and **[600]** to **[718]**.

Section **[979]**

Entering this section will reset all user code sections from **[801]** to **[896]** to default values.

12.3 Battery Charge Current

SECTION **[503]**: OPTION **[6]**

Option **[6]** ON = Battery Charge Current: 850mA (minimum 40VA transformer)

Option **[6]** OFF = Battery Charge Current: 350mA



A 40VA transformer is required when selecting the 850mA battery charge current. Using a 20VA transformer with a battery charge current of 850mA may damage the system.

12.4 Installer Code Lock

SECTION [990]

Enter 147 into section [990] to lock all programming. When 147 is programmed in section [990], performing a hardware reset as described in section 12.1 on page 35 will not affect the current panel settings. To remove the Installer Lock, enter 000 into section [990]. (Default: Unlocked)

12.5 Partitioning

SECTION [500]: OPTIONS [1] TO [4]

The Digiplex control panel can provide your system with up to four completely independent partitions. Most features and options in the Digiplex System can be independently set for each partition such as Event Reporting, Entry/Exit Delay, Bell Squawk, One-Touch arming, Panic Alarms and many more. All zones, keyswitch zones, user codes and system modules are assigned to specific partitions, making this a true partitioned system. In section [500], enable the option(s) that correspond to the desired partition(s). Where options [1] to [4] represent partitions 1 through 4.

12.5.1 Panel Partition Assignment

SECTION [440]

The control panel will report system events as originating from the partitions enabled in this section. The System Troubles (i.e. AC Failure, TLM Failure, etc.) can only be viewed through the partitions enabled in this section.

- 00 = All enabled partitions (see section [500])
- 01 = Control panel installed in Partition 1
- 02 = Control panel installed in Partition 2
- 03 = Control panel installed in Partition 3
- 04 = Control panel installed in Partition 4

12.6 Installer Function Keys

To access the installer functions, press and hold the [0] key, enter the [INSTALLER CODE], and then...

For LCD keypads: press the key indicated in the list below that corresponds to the function you wish to activate.

For Grafica keypads: press the center action key (Options), highlight the desired function and then press the center action key (Ok).

Test Report: [STAY]

Sends the *Test Report* report code programmed in section [717] to the monitoring station.

Call WinLoad: [FORCE]

Will dial the PC telephone number programmed in section [560] to communicate with a computer using WinLoad.

Answer WinLoad: [ARM]

Will force the control panel to answer a call made by the monitoring station that is using WinLoad.

Cancel Communication: [DISARM]

Pressing this function key cancels all communication with the monitoring station or WinLoad until the next reportable event.

Installer Test Mode: [MEM]

The Installer Test Mode will allow you to perform walk tests where the bell or siren will squawk to indicate opened zones. Press [MEM]

again to exit. Partitions cannot be armed if the Installer Test Mode is enabled.

Module Scan: [TRBL]

This feature instructs the control panel to verify the status of the modules connected to the combus. The control panel will fix any problems with the internal organization of the modules in the control panel. The keypads will display the serial number of each module that has been connected to the combus.

Combus Voltmeter: [ACC]

LCD keypads (DGP2-641BL) only.

To verify if the combus is supplying sufficient power, press and hold the [0] key, enter the [INSTALLER CODE] and press the [ACC] key on the LCD keypad. A reading of 9.2V indicates that the voltage is too low. The voltage may drop during the control panel battery test (see section 2.4.1 on page 2).

12.7 System Date & Time

SECTION [502]: OPTION [6]

The System Date and Time is programmed through the User Menu, please refer to *Clock Loss* in section 16.7 on page 47.

12.7.1 Daylight Savings Time

By enabling option [6] in section [502], the control panel will automatically adjust the system's clock (time) for daylight saving changes. At 2:00AM on the first Sunday of a full weekend in April, the control panel will add one hour to the programmed time (clock). At 2:00AM on the last Sunday of a full weekend in October, the control panel will subtract one hour from the programmed time (clock).

12.8 Shabbat Feature

SECTION [522]: OPTION [4]

With option [4] on, all addressable detection devices and keypads in the system will no longer display any system status through the LCD and/or LEDs between noon (12:00PM) Friday and midnight (12:00AM) Saturday. Therefore, normal operation will be re-instated Sunday morning at 12:00:01AM.

During the Shabbat period:

- the LCD keypads only display the date and time
- the backlight is disabled
- the LED indicators on all addressable detection devices and keypads in the system are disabled

If required, a user can access all the usual commands and features during the Shabbat period by pressing a key or, if Confidential Mode is enabled in the keypad, by entering their access code. When no actions have occurred for two minutes, the Shabbat Feature will re-activate.

12.9 Module Reset

SECTION [951]

To reset a module that is connected to the combus to its default values, key in the module's serial number into section [951].

12.10 Locate Module

SECTION [952]

If you wish to locate a specific module (e.g. detector, zone expansion module, etc.) connected to the combus, key in the module's serial number into section [952]. The green LOCATE LED

on the module will begin to flash until the serial number is re-entered into section [952] or the appropriate tamper or unlocate switch on the module is pressed.

12.11 Module Programming

SECTION [953]

All modules connected to the combus are programmed through the control panel. Therefore, if you wish to program a module, enter section [953] to enter *Module Programming Mode* (see section 3.2 on page 9) and key in the module's serial number. At this point, any sections entered will be those of the selected module. For details on how to program the modules, refer to the module's *Installer's Guide* or the module's *Programming Guide*. To exit this mode, press the [CLEAR] key on LCD keypads, or the right action key (Exit) on Grafica keypads, as many times as needed to return to the desired screen.

12.12 Module Broadcast

SECTION [954]

This feature allows you to copy the contents of all programming sections from one module to one or more of the same type of module.



The Module Broadcast feature will only work when a module is broadcasting its data to a module or to modules of the same type and model number. For example, an APR-PRT1 (Printer Module) cannot broadcast to an APR3-PRT1. Likewise, a DGP module cannot broadcast to a DGP2 module.

- 1) Press and hold the [0] key.
- 2) Enter the [INSTALLER CODE] (Default is 000000).
- 3) Enter [954].
- 4) Enter the source module's 8-digit [SERIAL NUMBER].
- 5) Enter the destination module's 8-digit [SERIAL NUMBER]. Repeat this step once for every additional module.
- 6) For LCD keypads, press [ACC]. For Grafica keypads, press the center action key (Start).

For example: Using an LCD keypad, you've completed the programming of a zone expansion module (sn#34540033) and you wish to program another two zone expansion modules (sn#34540075 and sn#34412100) with the same settings:

- 1) Press and hold the [0] key.
- 2) Enter the [INSTALLER CODE].
- 3) Enter [954].
- 4) Enter 34540033, 34540075, and 34412100.
- 5) Press [ACC].

The control panel will automatically copy the contents of 34540033 into the other two zone expansion modules.

12.13 Remove Module

SECTION [955]

After entering section [955], the control panel will scan all modules connected to the combus. If any missing modules are detected (i.e. detector removed from the combus) during this scan, the control panel will erase the module's serial number and remove the module from the control panel's memory.

12.14 Serial Number Viewing

SECTION [900]

This feature allows you to view the serial number of the control panel as well as the serial numbers of all modules connected to the combus.

For LCD keypads: After entering section [900], the keypad will display the 8-digit serial number of the control panel. Use the [▲] and [▼] keys to scroll through the serial number of each module connected to the combus.

For Grafica keypads: After entering section [900], the keypad will display the 8-digit serial number of the control panel. Press the center action key (Next) to scroll through the serial number of each module connected to the combus.

12.15 Power Save Mode

SECTION [504]: OPTIONS [4]

When the control panel is running on the backup battery (no AC), the control panel can set all keypads into a "sleep mode" or Power Save Mode. In Power Save Mode the keypad's backlight and LEDs will be disabled until a key is pressed, an alarm occurs or an Entry Delay is triggered.

12.16 Auto Trouble Shutdown

SECTION [218]

If, in a 24-hour period, a trouble has occurred more than the number of times programmed in section [218], the control panel will no longer report this trouble. Enter a value (001 to 015, 000 = disabled) into section [218]. Please note that each trouble has its own counter. This counter is reset every day at midnight or when a *Module Scan* is performed (see section 12.6 on page 36). Also, note that it cannot be set to more than 15.

12.17 No AC Fail Display

SECTION [503]: OPTION [7]

With option [7] in section [503] enabled, the control panel will not display the AC Failure as a trouble. This means that when an AC Failure occurs when this option is on:

- the AC LED will extinguish
- the trouble will not appear in the Trouble Display
- the keypad will not beep to indicate the trouble
- the AC Failure report code will be reported.

Access Codes

The DigiPlex control panel supports 95 user access codes, 1 System Master Code, and 1 Installer Code.

13.1 Installer Code

SECTION [800]

(Default: 000000) The Installer Code is used to enter the control panel's programming mode, which allows you to program all the features, options and commands of the control panel and any modules connected to the combus. **The Installer Code can program the User Code Options and the Partition Assignment, but cannot program the personal identification numbers.** The Installer Code is six digits in length where each digit can be any value from 0 to 9.

To change the Installer Code:

- 1) Press and hold [0].
- 2) Enter [INSTALLER CODE].
- 3) Enter section [800].
- 4) Enter new 6-digit [INSTALLER CODE].

13.2 Access Code Length

SECTION [504]: OPTIONS [2] AND [3]

Access codes can be between 1 and 6 digits in length. When programming access codes with less than 6 digits, press the [ENTER] key. When you change the user access code length from 4 digits to 6 digits, the control panel will automatically add the last 2 digits by using the first 2 digits. For example, if your access code is 1234 and you switch to 6 digits the code will become 123412. When you change the access code length from 6 digits to 4 digits, the control panel will automatically remove the last 2 digits.

[2]	[3]	Option
Off	Off	4-digit access codes
Off	On	6-digit access codes
On	Off	Same as On/On
On	On	Flexible access codes

13.3 System Master Code

(Default: 123456) With the System Master Code a user can use any of the available arming methods with access to all partitions and can program all user access codes, User Options, Partition Assignments, and Access Control Options.

Each digit in the System Master Code can be any value from 0 to 9. The length of the System Master Code is determined by the access code length feature (see section 13.2). The System Master Code cannot be set to less than 4 digits in length.

13.3.1 System Master Code Reset

SECTION [950]

To reset the System Master Code to its default (123456):

- Set the RESET jumper to on by placing a jumper on the reset pins of the control panel
- Use the Installer Code to enter section [950]



Do not remove the power from the control panel.

13.4 Programming Access Codes

Sections [801] to [896]


The instructions that follow detail how to program access codes when using an LCD keypad. For instructions on how to program users when using a Grafica keypad, refer to Grafica's User Manual. A complete Grafica user manual is available on our website at www.paradox.ca. In section [801] the installer can program the System Master Code with an Access Card's serial number and change the Access Card's arming method (see section 13.7 on page 39).

In sections [802] to [896], the Installer Code can program the User Code Options, Partition Assignment, and Access Control Options, but cannot program the user code for the System Master Code or the user access codes. To program the user access codes, refer the users to the appropriate manual: LCD Keypad System Manager's Manual and LED Keypads User Manual. If no partition assignment is selected, the user access code will **only** be able to activate PGMs.



To program user labels, refer to the LCD Keypad System Manager's Manual.

Figure 22: Programming User Access Codes

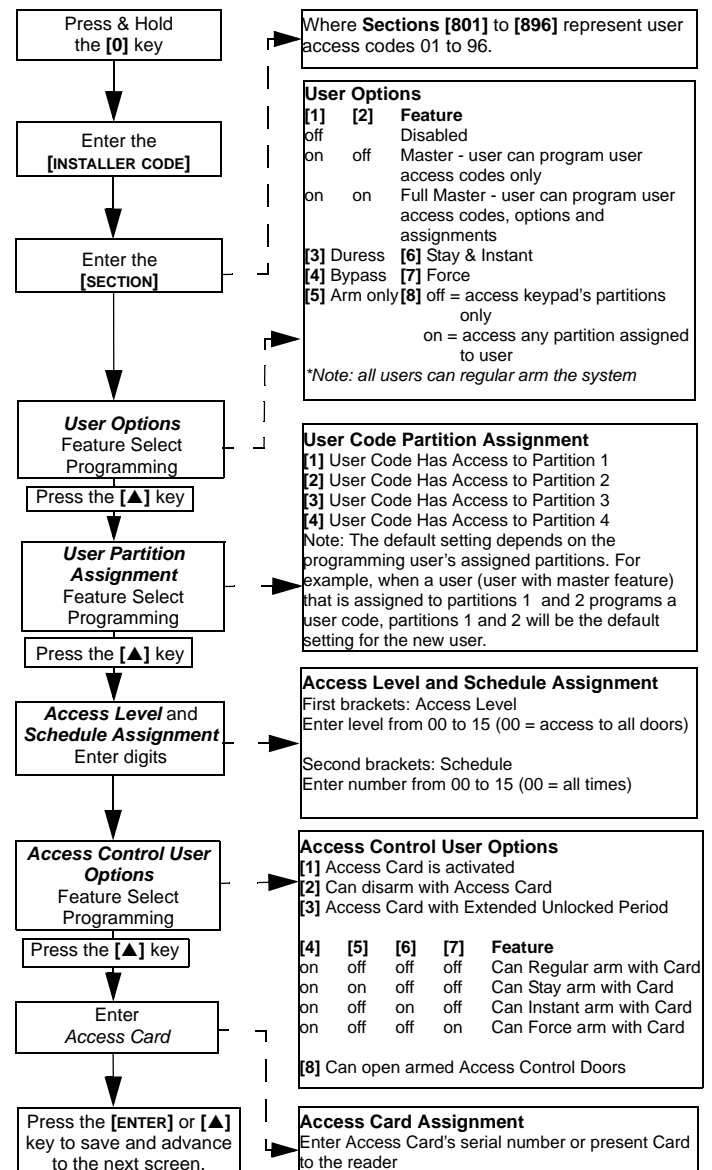

13.5 User Options

The User Options define how each user access code can arm or disarm the system. Regardless of these settings, all users can Regular arm (see section 16.1 on page 45) their assigned partitions and all users, except those with the *Arm Only* option (see section 13.5.4), can disarm an assigned partition. Select one or more of the options described in the following sub-sections for each user access code as shown in Figure 22 on page 38. The System Master Code or a user access code with the Master Feature enabled can also program the User Options using a different programming method. To program the user access codes, refer the users to the appropriate Manual: LCD Keypad System Manager's Manual or LED Keypad User Manual.

13.5.1 Master Feature

SECTIONS [802] TO [896]: OPTIONS [1] AND [2]

[1]	[2]	Option
Off	Off	Master Feature Disabled
Off	On	Master Feature Disabled
On	Off	Users can create or modify user access codes that have the same partition assignment.
On	On	User can create or modify user access codes and program the User Options, Partition Assignment (can assign only the partitions the Master Code has access to), Access Control Features, PINs and User Labels.

13.5.2 Duress

SECTIONS [802] TO [896]: OPTION [3]

When a user is forced to arm or disarm their system, entering a Duress enabled user access code (option [3] On) will arm or disarm the system and, if programmed, will immediately transmit a silent alarm to the monitoring station.

13.5.3 Bypass Programming

SECTIONS [802] TO [896]: OPTION [4]

The user access code with option [4] enabled can program bypass entries as described in section 16.2 on page 46.

13.5.4 Arm Only

SECTIONS [802] TO [896]: OPTION [5]

The user access code with option [5] enabled can arm assigned partitions, but cannot disarm any partitions. The type of arming is determined by the other User Options selected. Please note that with the Arm Only option, the user who just armed the system can cancel arming by re-entering the same user access code during the Exit Delay.

13.5.5 Stay & Instant Arming

SECTIONS [802] TO [896]: OPTION [6]

The user access code with option [6] enabled, can Stay arm or Instant arm (see section 16.1 on page 45) assigned partitions.

13.5.6 Force Arming

SECTIONS [802] TO [896]: OPTION [7]

The user access code with option [7] enabled will be able to Force arm assigned partitions (see section 16.1 on page 45).

13.5.7 User Menu Access Conditions

SECTIONS [802] TO [896]: OPTION [8]

This feature will govern which partitions users have access to when entering their access codes. With option [8] on, the control panel will grant access to all partitions assigned to the user access code. With option [8] off, the control panel will only grant access to

partitions that have been assigned to both the user access code and the keypad.

13.6 User Partition Assignment

SECTIONS [802] TO [896]: OPTIONS [1] TO [4]

Each of the 95 user access codes can be assigned to one or more partitions. A user can only arm, disarm and view status of the partitions assigned to their user access codes. Select one or more of the partitions for each user access code as shown in Figure 22 on page 38. If no partition assignment is selected, the user access code will **only** be able to activate PGMs. The System Master Code or a user with the Master Feature enabled can also program the User Partition Assignment using a different method of programming (see section 16.4 on page 46). The default setting depends on the programming user's assigned partitions. For example, when a user (user with master feature) that is assigned to partitions 1 and 2 programs a user code, partitions 1 and 2 will be the default setting for the new user.

13.7 Access Control

SECTIONS [801] TO [896]

In addition to the user access code options, the following options can be programmed when Access Control is enabled on the Digiplex system: Access Level, Schedule, Access User Options, and Access Card.



The System Master Code and user access codes with the Full Master feature enabled can also program the Access Level, Schedule, Access User Options, and Access Card on user access codes.



The System Master Code in section [801] has access to all doors all the time. Only the card's serial number and the choice of arming method can be changed. If the other options are changed, the System Master Code will revert to its original programming.

13.7.1 Access Level Assignment

SECTIONS [802] TO [896]: LEVEL & SCHEDULE SCREEN, FIRST BRACKETS

Enter the two-digit Access Level number (00 to 15) to be assigned to that user access code. Access Levels are defined in the sections [341] to [355] (see section 14.6 on page 42). An Access Level is a combination of Access Doors that a user access code assigned to that level will be able to open. Access Level [00] will permit access to all Access Doors (unrestricted Access Level).

13.7.2 Schedule Assignment

SECTIONS [802] TO [896]: LEVEL & SCHEDULE SCREEN, SECOND BRACKETS

Enter the two-digit Schedule number (00 to 15) to be assigned to that user access code. Schedules determine the hours, days, and holidays that a user access code will be allowed to open Access Doors. The Schedules are defined in the sections [361] to [375] (see section 14.7 on page 42). Schedule [00] will permit access at all times (unrestricted hours and days).

13.7.3 Activate Card for Access Control

SECTIONS [802] TO [896]: ACCESS OPTION SCREEN, OPTION [1]

Option [1] ON = The Access Card is activated and can be used when the Access Control is enabled.

Option [1] OFF = The user access code can be used with the Digiplex alarm system, but cannot use the

Access Control features. This can be used to disable a lost or stolen card **without** deleting the user access code.

13.7.4 Disarm with Access Card

SECTIONS [802] TO [896]: ACCESS OPTION SCREEN, OPTION [2]
When the partition assigned to an Access Door (see section 14.4 on page 41) is armed, it can be disarmed and unlocked upon presentation of a valid Access Card to the reader. For an Access Card to be valid, it must be presented during its assigned Schedule, within its assigned Access Level and be assigned to the access control module's assigned partitions depending on the Door Access Mode (see section 14.5 on page 41). Codes assigned with the "Arm Only" User Option will not be able to disarm with the card.

Option [2] ON = The Access Card can disarm partitions.
Option [2] OFF = The Access Card cannot disarm partitions.


13.7.5 Card with Extended Unlocked Period

SECTIONS [802] TO [896]: ACCESS OPTION SCREEN, OPTION [3]
Each Access Control Module is programmed with a Door Unlocked Period and a Door Unlocked Period Extension. The Door Unlocked Period is the time the door can remain unlatched after access is granted or after a Request for Exit is received. The Door Unlocked Period Extension is the amount of time added to the Door Unlocked Period. For more details refer to the appropriate *Digiplex Module Reference & Installation Manual*.

When Card with Extended Unlocked Period is enabled, the two time periods are added together to allow extra time for the user to open the Access Door, which may be useful for seniors and for the physically challenged. Access is only granted during the card's assigned Schedule and to doors programmed in its Access Level.

Option [3] ON = Extended Unlocked Period is enabled on card
Option [3] OFF = Extended Unlocked Period is disabled on card

Example:

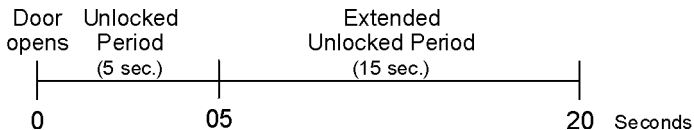

13.7.6 Arming with Access Card

SECTIONS [802] TO [896]: ACCESS OPTION SCREEN, OPTIONS [4], [5], [6], AND [7]

An Access Card can be programmed to arm the partition(s) assigned to the door when the valid card is presented to the reader twice within approximately 5 seconds while the door remains closed. For an Access Card to be valid, it must be presented during its assigned Schedule, within its assigned Access Level and be assigned to the keypad's assigned partitions depending on the Door Access Mode (see section 14.5 on page 41). The arming method is determined by turning ON or OFF one of the options from [5] to [7].

No Arming with Card

Option [4] OFF = Arming with Access Card is disabled.

Regular Arming with Card

Option [4] ON and Options [5], [6], & [7] OFF = The Access Card can Regular arm partitions (see section 16.1 on page 45).

Stay Arming with Card

Options [4] and [5] ON and Options [6] and [7] OFF = The Access Card can Stay arm the partitions (see section 16.1 on page 45).

Instant Arming with Card

Options [4] and [6] ON and Options [5] and [7] OFF = The Access Card can Instant arm the partitions (see section 16.1 on page 45).

Force Arming with Card

Options [4] and [7] ON and Options [5] and [6] OFF = The Access Card can Force arm the partitions (see section 16.1 on page 45).

13.7.7 Access to Armed Access Doors

SECTIONS [802] TO [896]: ACCESS OPTION SCREEN, OPTION [8]
An Access Door can be assigned to a zone in Digiplex so it can be protected by the security system as well (see section 14.4 on page 41). When a valid Access Card with this feature enabled is presented to an armed door, access will be granted and the Entry Delay will begin. When this option is enabled, extra security is provided since a user **must** enter a user access code to disarm the area. Access is only granted during the card's assigned Schedule and to doors programmed in its Access Level. For user access codes assigned with the "Arm Only" User Option, option [8] should remain off since they cannot disarm the partition(s).

For this feature to function properly, Option [2] Disarm with Access Card must be disabled. If option [2] is enabled, access will be granted and the partition(s) will be disarmed without entering the user access code.

Option [8] ON = Access to armed doors is granted
Option [8] OFF = Access to armed doors is denied

13.7.8 Access Card Assignment

SECTIONS [801] TO [896]: ACCESS CARD SCREEN
The Access Card is activated by assigning its serial number to the user access code. This system supports only the proximity cards by Position Technology. Either enter the serial number manually or present the Access Card to the reader and its serial number will register automatically.

13.8 Multiple Action Feature

SECTION [504]: OPTION [1]

By enabling option [1] in section [504], users will remain in the User Menu after entering their access code. This allows users to perform more than one action without having to re-enter their access code. With option [1] off in section [504], the control panel will exit the User Menu after every action.

Access Control

Access control is an industry term for a system that monitors and regulates the passage into and out of protected areas. With access control, you can identify who accesses a site and limit the days and times that specific people can enter and exit that site.

Each door in the access control system is equipped with a reader, an access control module, a request-for-exit motion detector, a door contact and an electronic door strike. These devices work together with the control panel to unlock the door only for authorized personnel at authorized periods of time.

Each person who is authorized to access the protected area is issued a card. The card is assigned to a user access code and programmed with an Access Level (see section 14.6 on page 42) and a Schedule (see section 14.7 on page 42). When a card is presented to the reader, the control panel will determine whether or not to unlock the door depending on if the card is allowed to open that door (Access Level) and if the card is permitted at that particular time and day (Schedule).

Access Control features can only be enabled and programmed through the an LCD Keypad (DGP2-641BL or DGP2-641RB) and setup through an Access Control Module (DGP2-ACM1P). The general Access Control options are programmed in the control panel. Specific options for each door are programmed through the LCD keypads (see the appropriate *Digiplex Module Reference & Installation Manual*).

In order to program the Access Control features in the Digiplex control panel, you must enter Panel Programming Mode:

- 1) Press and hold the **[0]** key.
- 2) Enter the **[INSTALLER CODE]** (by default 000000)
- 3) Panel Programming Mode: Enter desired 3-digit **[SECTION]**
- 4) Enter the required **[DATA]**.

14.1 Programming Access Control Overview

The following is the minimum required to program an Access Control system. Depending on the requirements of the installation, some of the other features explored in the this chapter may be necessary.

- 1) Enable Access Control in section **[537]** option **[1]**
- 2) Assign the modules to Doors in sections **[301]** to **[332]**
- 3) Create the Access Levels in sections **[341]** to **[355]**
- 4) Set the Holidays in sections **[381]** to **[392]**
- 5) Create the Schedules in sections **[361]** to **[375]**
- 6) Program user access code with Access Control Options in sections **[801]** to **[896]**

14.2 Common Access Control Terms

Access Alarm

An audible or silent warning generated by the reader to indicate that a protected door has not closed within the programmed time allowed or that a protected door was opened without an "Access Granted" or "Request for Exit" signal.

Access Card

A tag assigned to a user access code used to identify the user to the Access Control system. By presenting the tag to a reader, the system can verify whether the tag is valid.

Door Left Open

Each Access Door is programmed with a period of time it is allowed to remain open. Once the door has been open past this time limit, an Access Alarm will be triggered.

Forced Door

If a protected door was opened without an "Access Granted" or "Request for Exit" signal, a silent or audible Access Alarm can be triggered.

Reader

An Access Control device (CR-R880-BL) normally located near a protected door that serves to relay the information from an Access Card presented to it to the control panel.

Request for Exit

When a REX device (Paradoo 460) installed above an Access Door within a protected area detects movement, it sends a signal to the panel to permit a user to leave the protected area.

Valid Card

An Access Card presented to a reader during its assigned Schedule and within its assigned Access Level.

14.3 Enable Access Control

SECTION [537]: OPTION [1]

When Access Control is enabled, the control panel and the keypads must be programmed for the feature to function properly.

Option **[1]** ON = Access Control is enabled.

Option **[1]** OFF = Access Control feature is disabled. (default)

14.4 Assigning The Module To A Door

SECTIONS [301] TO [332]

Each door to be monitored and controlled requires an Access Control Module (DGP2-ACM1P). The module is assigned to the door through the module's serial number in these sections. You can assign up to 32 Access Control Modules in a Digiplex system. The Access Doors are then combined to determine the Access Levels. If you want the Access Doors also to be linked to the alarm system, assign the keypad zone input to a zone in the control panel (see section 4 on page 11).

14.5 Door Access Mode

SECTION [340]

Although the keypad can be programmed to display the status of various partitions, the Access Door can be assigned to one or more partition(s) in the alarm system. This means that the actions performed with the Access Card will be directly linked to the partition(s) assigned to that door. For more details refer to *Partition Assignment* and *Assigning Doors to Partitions* in the appropriate *Digiplex Module Reference & Installation Manual*.

Each door can be programmed to grant access only to cards assigned to **all** the door's assigned partitions ("AND" Door Access Mode) **or** to cards assigned to **at least one** of the door's partitions ("OR" Door Access Mode). For an "AND" Access Door to grant access or to arm all its assigned partitions, the Access Card must be assigned to all the door's assigned partitions. To access an "OR" Access Door, the Access Card must be assigned to at least

one partition assigned to the door. An "OR" door will arm or disarm only the partitions that it has in common with the card.

Section [340] consists of four screens of eight options each. Each option represents an Access Door. Enable the option corresponding to the door to be set in "OR" Door Access Mode. Options that remain disabled represent doors set in the "AND" Door Access Mode. For example, if option [2] in the Second Screen is enabled in section [340], Door 10 will use the "OR" Door Access Mode.

Option ON = "OR" Door Access Mode
Option OFF = "AND" Door Access Mode (default)

14.6 Access Levels

SECTIONS [341] TO [355]

Users will only be allowed access to the doors assigned in the Access Level programmed on their user access codes (see section 13.7.1 on page 39). Each Access Level is a combination of the Access Doors that were assigned in sections [301] to [332]. You can program up to 15 different Access Levels (from 01 to 15). Level 00 allows the user access to all the Access Doors. Using *Feature Select Programming*, enable or disable options representing the desired doors. For example, if the options representing doors 01, 02, and 03 are enabled in section [341], any user access code or Access Card assigned to Level 01 will only have access to doors 01, 02, and 03.

14.7 Schedules

SECTIONS [361] TO [375]

Schedules determine the hours, days, and holidays that users are permitted access. You can program up to 15 different Schedules (from 01 to 15). Schedule 00 allows the user access at all times. Each Schedule consists of two programmable time periods called Intervals that determine the time of day and which days the users will be granted access. When a schedule is programmed with "H", users will have access during the days programmed in the sections [381] to [392] (see section 14.8). Each user is assigned a Schedule through the user access code.

Program the Start Time and End Time according to the 24-hour clock within the same day. Use *Feature Select Programming* to set the options representing the Days.

Option	Day	Option	Day
[1]	Sunday (S)	[5]	Thursday (T)
[2]	Monday (M)	[6]	Friday (F)
[3]	Tuesday (T)	[7]	Saturday (S)
[4]	Wednesday (W)	[8]	Holidays (H)

For example, program Schedule 01 in section [361]:

- Interval A with Start time **07:00**, End time **16:00**, Days **M, T, W, T, and F**
- Interval B with Start time **10:00**, End time **17:00**, Days **S, S, and H**

Then, any user access code with this Schedule assigned will only be allowed access Monday to Friday from 7AM to 4PM and on Saturday, Sunday, and Holidays from 10AM to 5PM.

14.8 Holiday Programming

SECTIONS [381] TO [392]

Holiday Programming identifies the days that are considered holidays. When option [8] is enabled in sections [361] to [375], access is permitted during the programmed holidays.

Each section represents a month. Each section includes four groups of eight options that represent the days of the month. Use *Feature Select Programming* to enable the options representing the days to be designated as holidays. For example, if 1 and 2 are enabled in the fourth screen in section [392], then December 25 and 26 are designated as holidays. When [8] is enabled in sections [361] to [375], those users will have access according to their Schedule on December 25 and 26.

14.9 Logging Access Control Events

14.9.1 Log Request For Exit In Event Buffer

SECTION [537]: OPTION [2]

When the REX device registers movement at the door, a Request for Exit (REX) event is generated (see section 14.2 on page 41). The control panel can record the REX events generated from all the Access Doors in the system, but cannot report these events to the Monitoring Station. The events can be viewed through an LCD Keypad by entering the *Event Record Display* (see section 16.8 on page 48).

Option [2] ON = Record the REX events
Option [2] OFF = Do not record the REX events (default)



Since REX events can occur often, the Event Buffer may fill up quickly.

14.9.2 Log Door Left Open Restore In Event Buffer

SECTION [537]: OPTION [3]

The Door Left Open Interval is the time that a door can remain open after an Access Granted or a Request for Exit without generating an Access Alarm. If an Access Door is left open beyond its keypad's programmed Door Left Open Interval and then is closed, it can generate a Door Left Open Restore event in the Event Buffer. These events cannot be reported to the Monitoring Station, but they can be viewed through an LCD Keypad by entering the *Event Record Display* (see section 16.8 on page 48).

Option [3] ON = Record the Door Left Open Restore events
Option [3] OFF = Do not record the Door Left Open Restore events (default)

14.9.3 Log Door Forced Open Restore In Event Buffer

SECTION [537]: OPTION [4]

An Access Door is considered forced when its door contact is opened without the use of a valid Access Card or user access code or receiving a Request for Exit signal (see section 14.2 on page 41).

If an Access Door is forced open then closed, it can generate a Door Forced Open Restore event in the Event Buffer. This event cannot be reported to the Monitoring Station, but it can be viewed through an LCD Keypad (DGP2-641BL or DGP2-641RB) by entering the *Event Record Display* (see section 16.8 on page 48). To have the Door Forced Open Alarm reported to the Monitoring Station see section 14.10.1.

Option [4] ON = Record the Door Forced Open Restore events
Option [4] OFF = Do not record the Door Forced Open Restore events (default)

14.10 Global Access Door Features

14.10.1 Burglar Alarm On Forced Door

SECTION [537]: OPTION [5]

An Access Door can be assigned to a zone in the Digiplex security system to also be protected by the burglar alarm. If an armed Access Door is forced open (see section 14.2 on page 41), it can send a signal to the control panel to trigger a burglar alarm and to report to the Monitoring Station. The burglar alarm is generated instantly regardless of the zone's definition (i.e. entry delay is ignored).

For this feature to function, the following must be done:

- Install a door contact (see appropriate *Digiplex Module Reference & Installation Manual*)
- Assign the Access Door to a zone (see section 4 on page 11)
- Enable option [4] in section [537]: Log Door Forced Open Restore (optional) (see section 14.9 on page 42)
- Enable option [5] in section [537]: Burglar Alarm on Forced Door (see section 14.10.1)

Option [5] ON = Burglar Alarm on Forced Door enabled

Option [5] OFF = Burglar Alarm on Forced Door disabled (default)

14.10.2 Skip Exit Delay When Arming With Access Card

SECTION [537]: OPTION [6]

When an Access Card is presented to a reader twice within approximately 5 seconds with the door closed, some or all the partitions (see section 14.5 on page 41) assigned to the Access Door can arm with or without starting the Exit Delay. This feature is useful when the reader is outside the partition so the partition will be armed immediately.

Option [6] ON = The Exit Delay will not be triggered

Option [6] OFF = The Exit Delay will be triggered (default)

14.10.3 Burglar Alarm On Door Left Open

SECTION [537]: OPTION [7]

An Access Door can be assigned to a zone in the Digiplex security system to also be protected by the burglar alarm. Each Access Door is programmed with a period of time that it is allowed to remain open. Once the door has been open longer than the programmed time period, a signal can be sent to the control panel to trigger the burglar alarm and to report to the Monitoring Station.

For this feature to function, the following must be done:

- Install a door contact (see appropriate *Digiplex Module Reference & Installation Manual*)
- Assign the Access Door to a zone (see section 4 on page 11)
- Enable option [3] in section [537]: Log Door Left Open Restore In Event Buffer (optional) (see section 14.9 on page 42)
- Enable option [7] in section [537]: Burglar Alarm on Door Left Open (see section 14.10.3)

Option [7] ON = Burglar Alarm on Door Left Open enabled

Option [7] OFF = Burglar Alarm on Door Left Open disabled (default)

14.10.4 Door Access During Clock Loss

SECTION [537]: OPTION [8]

If the system registers a Clock Loss Trouble, the system will no longer be able to recognize the Schedules. Only the System

Master Code and user access codes with the Master feature enabled can reset the clock when option [8] is enabled. To avoid a Clock Loss Trouble, the Digiplex Time Module (DGP2-TM1) can be installed on the control panel. Until the Clock is reset, the Access Control system can be programmed to grant access to:

Option [8] ON = the System Master Code, User Access Codes with the Master feature or Schedule 00 (00=all times) enabled

Option [8] OFF = all users regardless of their programmed Schedule (default)

 **The Winload software is not verified by UL.**

15.1 Answering Machine Override

SECTION [441]

When using WinLoad to communicate remotely with an installation site that uses an answering machine or service, the Answering Machine Override must be programmed. Using WinLoad, call the installation site and on the second ring press the **[ENTER]** key on the keyboard to hang up or hang up manually. After hanging up, WinLoad will immediately call the installation site back or call the site back manually. The value (00 to 15 X 4 seconds) programmed in section **[441]** represents the delay period the control panel will wait between the first and second call. If the installation site is called back within the programmed delay period, the control panel will override the answering machine or service by picking-up the line on the first ring. To disable this option program 00 in section **[441]**. Also, see section 15.2.

*Example: A security installation is using an answering machine set to answer after three rings and section [441] has been programmed with 10 (10 x 4 = 40 seconds). When you call the installation site with WinLoad the first time, wait two rings and press **[ENTER]** on the keyboard. WinLoad will immediately call the installation site back. If the second call is made within 40 seconds, the control panel will pick-up the line on the first ring. If it takes more than 40 seconds, the control panel will not answer on the first ring and the answering machine will answer after three rings.*

15.2 Ring Counter

SECTION [442]

The value (01 to 15, 00 = disabled) programmed in section **[442]** represents the number of rings the control panel will wait before picking-up the line. If the line is not answered after the number of programmed rings, the control panel will answer the call. The control panel resets the Ring Counter every 10 seconds. Therefore, if there is more than 10 seconds between each ring, the control panel will reset the counter on the next call. Also, see section 15.1.

15.3 Panel Identifier

SECTION [555]

This four-digit code identifies the control panel to WinLoad before initiating upload or download. The control panel will verify if the panel identifier in WinLoad is the same. If the codes do not match, the control panel will not establish communication. Therefore, program the same Panel Identifier into both the DigiPlex Control Panel and WinLoad. To program the Panel Identifier, key in the desired 4-digit hexadecimal number into section **[555]**.

15.4 PC Password

SECTION [556]

This four-digit password identifies the computer running the WinLoad software to the panel before beginning the download process. Program the same PC Password into both the DigiPlex control panel and WinLoad. If the passwords do not match, WinLoad will not establish communication. To program the PC Password, enter the desired four-digit hexadecimal number into section **[556]**.

15.5 PC Telephone Number

SECTION [560]

The control panel will dial this number when trying to initiate communication with a computer using WinLoad. You can enter any digit from 0 to 9 and any special keys or functions (see Table 10, *Special Telephone Number Keys*, on page 27) up to a maximum of 32 digits into section **[560]**.



For North American installations using either SIA or Contact ID reporting formats (see section 8.5 on page 27), enter *70 and then either P (4-second pause) or W (wait for second dial tone) before the phone number to disable call-waiting.

15.6 Call WinLoad

Dial the PC Telephone Number programmed in section **[560]** in order to communicate with WinLoad. The control panel and WinLoad will verify that the Panel Identifier and the PC Password match before establishing communication.

For LCD keypads: press and hold the **[0]** key, enter the **[INSTALLER CODE]** and then press **[FORCE]**.

For Grafica keypads: press and hold the **[0]** key, enter the **[INSTALLER CODE]**, press the center action key (**Options**), highlight **Call Winload** and then press the left action key (**Select**).

15.7 Answer WinLoad

To perform on-site upload/downloading, connect your computer directly to the control panel using an ADP-1 line adapter. In WinLoad set *Dialing Condition* to *Blind Dial*. Program the panel telephone number in WinLoad and follow the ADP-1 Adapter's instructions. When the computer has dialed...

For LCD keypads: press and hold the **[0]** key, enter the **[INSTALLER CODE]** and press **[ARM]** to manually answer WinLoad from the panel. Press **[DISARM]** to hang up.

For Grafica keypads: press and hold the **[0]** key, enter the **[INSTALLER CODE]**, press the center action key (**Options**), highlight **Answer Winload** and then press the left action key (**Select**). To hang up, highlight **Cancel Communication** and then press the left action key (**Select**).

15.8 Event Buffer Transmission

SECTION [522]: OPTION [2]

If the Event Buffer contains 974 events since the last upload, the control panel will make two attempts to establish communication with a computer using WinLoad by calling the PC Telephone Number programmed in section **[560]**. WinLoad must be in *Wait To Dial* mode. When the system establishes communication, it will upload the contents of the Event Buffer to WinLoad. If communication is interrupted before completing transmission or if after two attempts, communication is not established, the system will wait until the Event Buffer attains another 974 events before attempting to re-communicate with the monitoring station. When the Event Buffer is full, each subsequent new event will erase the oldest event in the buffer. The Event Buffer can hold 1024 Events.

15.9 Call Back Feature

SECTION [522]: OPTION [1]

For additional security, when a computer using WinLoad attempts to communicate with the control panel, the control panel can hang

up and call the computer back to re-verify identification codes and re-establish communication. When the control panel hangs up, WinLoad automatically goes into *Wait For Call Mode*, ready to answer when the control panel calls back. Please note that the PC Telephone Number must be programmed in order to use the Call Back feature.

User Features

16.1 Arming and Disarming Features

Partitions can be armed using various arming methods. Refer to section 16.1.7 for information on how to arm.

16.1.1 Regular Arming

This method is used for the everyday arming of the system. All zones within the partition must be closed to arm the system. The system can also be Regular armed by using a One-Touch Feature (see section 6.8 on page 20) or a keyswitch (see section 5.4.6 on page 19). All users are able to Regular arm the partition(s) assigned to their user access codes.

16.1.2 Stay Arming

Stay arming will partially arm the partition to permit the user to remain in the protected area. The programmed *Stay Zones* (see section 4.4.3 on page 14) will not arm when Stay arming a partition. For example, the doors and windows can be armed without arming the motion detectors. The system can also be Stay armed by using a One-Touch Feature (see section 6.8 on page 20) or a keyswitch (see section 5.4.3 on page 18). Only user access codes with the *Stay and Instant Arm* option enabled can Stay arm a partition.

16.1.3 Stay Arming with Delay

Stay arming with Delay functions like Stay arming except armed zones can be programmed with an Entry Delay Timer (see section 4.2.9 on page 13). If these zones are accidentally triggered, the timer will start to allow the user time to disarm the partition(s).

16.1.4 Instant Arming

This feature is similar to Stay arming. Instant arming will partially arm the partition to permit the user to remain in the protected area, but all zones, including the entry/exit point, are changed to instant alarm zones. Therefore, if any armed zone is breached, the alarm will instantly be triggered. The system can also be Instant armed by using a One-Touch Feature (see section 6.8 on page 20) or a keyswitch (see section 5.4.5 on page 19). Only user access codes with the *Stay and Instant Arm* option enabled can Instant arm a partition.

16.1.5 Instant Arming with Delay

Instant arming with Delay functions like Instant arming except armed zones can be programmed with an *Entry Delay Timer* (see section 4.2.9 on page 13). If these zones are accidentally triggered, the timer will start to allow the user enough time to disarm the partition(s).

16.1.6 Force Arming

Force arming allows the user to arm a partition when Force zones are open (see section 4.4.4 on page 14). Once the open zone in an armed partition is closed, however, the system will then arm it as well. This feature is commonly used when a motion detector is protecting an area that is occupied by a keypad. For example, during Force arming the motion detector will remain unarmed until

the user exits the area that it protects. The system will then arm the motion detector. The system can also be Force armed by using a One-Touch Feature (see section 6.8 on page 20) or a keyswitch (see section 5.4.4 on page 18). Only user access codes with the *Force Arm* option enabled can Force arm a partition.

16.1.7 How to Arm

The following section details how to arm the system using an LCD or Grafica keypad.

For LCD keypads:

To arm, users:





- 1) Enter their [ACCESS CODE].
- 2) Press the key corresponding to the desired arming method (see Table 13). If the users have access to more than one partition, they can press the key corresponding to the desired partition or press [0] to arm all their assigned partitions.

For Grafica keypads:

To arm, users:

- 1) Enter their [ACCESS CODE].
- 2) Using the scroll keys, highlight the desired arming method (see Table 13) and then press the center action key (Ok). If you have access to more than one area, proceed to step 3.
- 3) Highlight either **Arm All Areas** or **Select Area(s)** and then press the center action key (Ok). If you selected the Select Area(s) method, follow steps 4 and 5.
- 4) Highlight an area you wish to arm and then press the left action key (Select). Repeat this step for any additional area.
- 5) Press the center action key (Arm)

Table 13: .Arming Methods

Arming Method	LCD	Grafica
Regular	[ARM]	 (Arm System)
Stay	[STAY]	 (Stay Arm)
Instant	[5]	 (Instant Arm)
Force	[FORCE]	 (Force Arm)

16.1.8 Disarming

Users can only disarm the partitions assigned to their user access codes. User access codes with the *Arm Only* option (see section 13.5.4 on page 39) enabled cannot disarm.

For LCD keypads:

To disarm, users:

- 1) Enter through a designated entry. The Entry Delay Timer will begin.
- 2) Enter their [ACCESS CODE].

- 3) Press the **[DISARM]** key. If the users have access to more than one partition, they can press the key corresponding to the desired partition or press **[0]** to disarm all their assigned partitions.

For Grafica keypads:

To disarm, users:

- 1) Enter through a designated entry. The Entry Delay Timer will begin.
- 2) Enter their **[ACCESS CODE]**.
- 3) Using the scroll keys, highlight **Disarm** and then press the center action key (**OK**). If you have access to more than one area, proceed to step 4.
- 4) Highlight either **Disarm All Areas** or **Select Area(s)** and then press the center action key (**OK**). If you selected the Select Area(s) method, follow steps 5 and 6.
- 5) Highlight the area you wish to disarm and then press the left action key (**Select**). Repeat this step for any additional area.
- 6) Press the center action key (**Disarm**).

16.2 Bypass Programming

Bypass Programming allows users to program the alarm system to ignore specified zones the next time the system is armed. For a user to bypass a zone, the zone must have the Bypass option enabled, the user access code must have the Bypass option enabled, and the zone must be within the user access code's partition assignment.

For LCD keypads:

To bypass, users:

- 1) Enter their **[ACCESS CODE]**.
- 2) Press the **[BYP]** key.
- 3) Enter the zones' 2-digit number.
- 4) Press **[ENTER]** key to exit.

For Grafica keypads:

To bypass, users:

- 1) Enter their **[ACCESS CODE]**.
- 2) Using the scroll keys, highlight **Bypass** and then press the center action key (**OK**).
- 3) Highlight the zone that you wish to bypass and then press the left action key (**Bypass**). Repeat this step for any additional zone.
- 4) Press the right action key (**Back**) to save the data.

Users can also activate *Bypass Recall*. Bypass Recall reinstates all the zones that were bypassed the last time the partition(s) assigned to the user access code were armed.

For LCD keypads:

To activate Bypass Recall, users:

- 1) Enter their **[ACCESS CODE]**.
- 2) Press the **[BYP]** key.
- 3) Press the **[MEM]** key.
- 4) Press **[ENTER]** key to exit.

For Grafica keypads:

To activate Bypass Recall, users:

- 1) Enter their **[ACCESS CODE]**.

- 2) Using the scroll keys, highlight **Bypass** and then press the center action key (**OK**).
- 3) Highlight **Bypass Recall** and then press the center action key (**OK**).

16.3 Chime Zones

The keypads can be programmed to emit rapid, intermittent beeps whenever designated zones within their assigned partitions are opened or when they are opened within a certain time period. These zones are Chime Zones. The instructions that follow are for LCD keypads. For Grafica keypads, a complete Grafica user manual is available on our website at www.paradox.ca.

For LCD keypads:

To program a Chime Zone, users:

- 1) Enter their **[ACCESS CODE]**.
- 2) Press the **[9]** key.
- 3) Press the **[1]** key.
- 4) Enter the zones' 2-digit number.
- 5) Press **[ENTER]** key to save.

To program a time period when the Chime Zones are activated, users:

- 1) Enter their **[ACCESS CODE]**.
- 2) Press the **[9]** key.
- 3) Press the **[2]** key.
- 4) Enter the time that keypads will **start** beeping when Chime Zones are opened according to the 24-hour clock (i.e. 9AM is 09:00 and 9PM is 21:00).
- 5) Enter the time that keypads will **stop** beeping when Chime Zones are opened according to the 24-hour clock (i.e. 9AM is 09:00 and 9PM is 21:00).
- 6) Press **[ENTER]** key to save.

16.4 Access Codes

Refer users to the appropriate manual: LCD Keypad System Manager's Manual or LED Keypad User Manual.

16.5 Normal and Confidential Modes

For LCD Keypads:

When no actions are being performed on the keypad, the keypad will remain in Normal Mode as shown in Figure 23 and will automatically display:

- The current status of the zones for every area the keypad is assigned
- The *Alarm Memory Display* if any alarms have occurred
- The *Trouble Display* if any troubles are occurring
- The current state of the *Indicator Lights*


In Confidential Mode:

- The zones and status messages will NOT be displayed
- The *Indicator Lights* will not illuminate

Depending on how the keypad was programmed, the user must press a key or enter a user access code to illuminate the *Indicator Lights* and activate *Normal Mode*.

Figure 23: Normal and Confidential Mode

 In Normal Mode, the LCD screen displays "Paradox Security" and the time & date, as well as scroll the system, zone and trouble status for every area assigned to the keypad.



In Confidential Mode, the LCD screen only displays "Confidential" and the time & date. Depending on how your keypad is programmed, Normal Mode only appears once a button is pressed or a user access code is entered.



16.5.1 Scroll Restart

In Normal mode the keypad will scroll through the status of the different parts of your system. Press the [CLEAR] key at any time during Normal Mode to return to the beginning of the sequence and view the status of the areas assigned to the keypad.

For LED Keypads:

When no actions are being performed on the keypad, the keypad remains in Normal Mode and the LED keypad will illuminate:

- The AC Light if power is present
- The Numerical Symbols representing any open zones
- The Area Symbols if any areas are armed
- The [MEM] Symbol if any alarms have occurred
- The [TRBL] Symbol if any troubles are occurring
- The [BYP] Symbol if zones are bypassed and shows the status of the STATUS LED.

In Confidential Mode all the LEDs are extinguished. Depending on how the keypad was programmed, the user must press a key or enter a *user access code* to illuminate the LEDs and activate *Normal Mode*.

For Grafica keypads:

If Confidential Mode is enabled and no actions are performed on the Grafica keypad for a specified period of time, Grafica will display the time and the date only, and all LEDs on the keypad will turn off until either a key is pressed or an access code is entered, depending on the configuration.

16.6 Keypad Settings


The keypad's setting can be modified to suit the user's needs. The instructions that follow are for LCD and LED keypads only. For Grafica keypads, a complete Grafica user manual is available on our website at www.paradox.ca.

For LCD Keypads:

- 1) **Scrolling Speed:** how long the messages will stay on the LCD screen before moving to the next message.
- 2) **Contrast:** how dark or pale characters will appear on the LCD screen
- 3) **Backlight:** the illumination behind the keys and the screen

Use the System Master Code to modify the settings as shown in Figure 24 on page 47.

Figure 24: LCD Keypad Settings

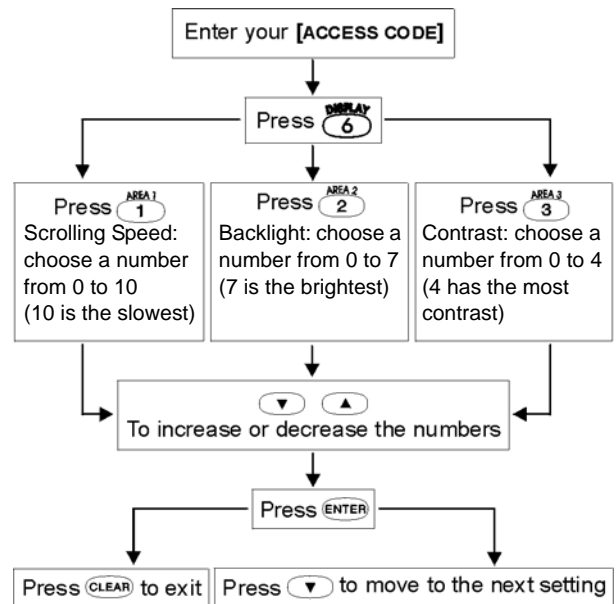

For LED Keypads:

Modify Backlight only:

- 1) Enter an [ACCESS CODE].
- 2) Press the [6] key.
- 3) Use the [▲] and [▼] keys to increase or decrease the illumination. The range is between zero and seven with seven as the brightest. ([10] LED = zero).

16.7 Trouble Display

When the system experiences problems or is tampered with, the Trouble Display will activate. In LED Keypads, the [TRBL] Symbol illuminates. In LCD Keypads, the Trouble Display will appear on the LCD screen. In Grafica keypads, the Trouble Icon will appear in the corresponding area window in the System Status Screen. Keypads will only display troubles that occur in their assigned area(s).

Potential troubles have been sorted into eight groups. The Group headings are listed below with a brief explanation of the potential troubles sorted within each group.

To view the Trouble Display on LCD or LED keypads:

- 1) Press the [TRBL] key.
- 2) **For LEDs:** Press the Numerical Symbol corresponding to the Group heading to view the specific trouble.
For LCDs: Press the number representing the trouble and use the [▲] and [▼] keys to view the specific trouble.

To view the Trouble Display on Grafica Keypads:

- 1) Enter your [ACCESS CODE].
- 2) Using the scroll keys, highlight **Trouble** and then press the center action key (**Ok**). The trouble(s) will appear by Trouble Group.
- 3) If more than one Trouble Group appears, highlight the desired group before pressing the center action key (**View**) to view the specific trouble.

Trouble	Description
GROUP [1]: SYSTEM	
[1] AC Failure	Power failure detected. The system is running on the backup battery.
[2] Battery Trouble	The backup battery is disconnected, needs to be recharged or replaced.
[3] AUX Current Limit	Devices connected to AUX have exceeded current limits (1.1A). The Auxiliary Output will shutdown until the trouble is corrected.
[4] Bell Current Limit	The bell or siren has exceeded current limits (3A). The Bell/Siren Output will shutdown until the trouble is corrected.
[5] Bell Absent	The bell or siren is not connected. When the bell output is not used, connect a 1kΩ resistor across the bell output.
[6] ROM Check Error	The control panel registers a data memory error. Contact distributor for replacement.
GROUP [2]: COMMUNICATOR	
[1] TLM1	The control panel is unable to access the main telephone line.
[2] Fail to Communicate 1 [3] Fail to Communicate 2 [4] Fail to Communicate 3 [5] Fail to Communicate 4	The control panel tried all assigned telephone numbers and failed to contact the monitoring station.
[6] Fail to Communicate PC	The control panel is unable to communicate with the WinLoad software.
GROUP [3]: MODULES	
[1] Module Tamper	A module's tamper switch was triggered
[2] ROM Check Error	A module is experiencing a data memory error. Contact distributor for replacement.
[3] TLM Trouble	A module is unable to access the telephone line.
[4] Fail to Communicate	A module failed to communicate with the monitoring station.
[5] Printer Trouble	The control panel registers a problem with a printer connected to a Printer Module. Check printer for problems (paper jam, no paper, no power, etc.).
[6] AC Failure	Module power failure.
[7] Battery Failure	Module's battery is disconnected, needs to be recharged or needs to be replaced.
[8] Supply Output	Module has exceeded current limits.
GROUP [4]: COMBUS	
[1] Missing Keypad	A keypad is no longer communicating with the control panel.
[2] Missing Module	A device is no longer communicating with the control panel.
[6] General Failure	No communication between the devices and the control panel.
[7] Combus Overload	Too many devices (over 95) are on the combus.
[8] Combus Comm. Error	The combus is having difficulty communicating between the devices and the control panel.
GROUP [5]: ZONE TAMPER	
Press [5] to display zone(s)	Zones displayed were tampered.
GROUP [6]: ZONE LOW BATTERY	
Press [6] to display zone(s)	Zone displayed indicates where a wireless device's battery needs to be replaced. Also, the device's yellow light will flash.

Trouble	Description
GROUP [7]: ZONE FAULT	
Press [7] to display zone(s)	A smoke detector is experiencing a wiring problem, needs to be cleaned, or a wireless device is no longer communicating with its receiver (supervision loss).
GROUP [8]: CLOCK LOSS	
Press [8] to re-program	The time and date were reset to default. 1) Press the [8] key 2) Set the hour and minutes according to the 24-hour clock (i.e. 9AM is 09:00 and 9PM is 21:00). 3) Enter the correct date according to yyyy/mm/dd. 4) Press [CLEAR] to exit.



If the Access Control feature is enabled in the system and the option *Door Access during Clock Loss* is ON (section [537] option [8]), only the System Master Code and user codes with the Master feature enabled will be able to program the clock. Enter the System Master or a Master Code, press [TRBL], then continue with the steps above.

16.8 Trouble Latch

SECTION [504]: OPTION [6]

(Default: OFF) With the *Trouble Latch* feature disabled, when a trouble occurs and is corrected, the trouble is automatically cleared and no longer displayed. With the *Trouble Latch* feature enabled, the trouble will remain displayed until it is manually cleared by the user. To clear the trouble, users must enter the keypad's trouble display (see section 16.7 on page 47) and then exit the trouble display. For LCD and LED keypads, press [CLEAR] to exit. For Grafica keypads, press the left action key (Back) to exit.



Only troubles that have been corrected can be cleared. If a trouble has not been corrected, it will continue to be displayed even if the user tries to clear the trouble by using the method described above.

16.9 Clear Bell Limit Trouble

SECTION [522]: OPTION [5]

(Default: OFF) When an activated bell output is shorted, a Bell Current Limit trouble is displayed and can be sent to the monitoring station. This feature determines how the Bell Current Limit trouble is cleared.

Option		Description
[5]	ON	When an activated bell output is shorted, the Bell Current Limit trouble will remain displayed until it is manually cleared by the user. The user must clear the trouble through the trouble display.
[5]	OFF	When an activated bell output is shorted, the Digiplex control panel will attempt to reactivate the bell output once every minute for as long as the bell is activated. The Bell Current Limit trouble is cleared automatically the first time the control panel does not detect a short when attempting to reactivate the bell.



UL Note: For UL installations, section [522] option [5] must be enabled (ON).

Only troubles that have been corrected can be cleared. If a trouble has not been corrected, it will continue to be displayed even if the user tries to clear the trouble through the trouble display.

16.10 Event Record Display

The Event Record Display can only be viewed through an LCD or Grafica keypad. The Event Record Display will record the user-initiated actions that occurred in the system as well as any alarms or troubles.

For example, when a valid code is entered, the user access code and the action taken (arm, disarm, etc.) is recorded.

You have the choice of viewing the events in all the partitions at once or by individual area. In either case the most recent event is displayed first Figure 25 on page 49.


For LCD keypads:

To view the events, users:

- 1) Enter their **[ACCESS CODE]**.
- 2) Press the **[7]** key.
- 3) Press the **[0]** key for all partitions.
Press the **[1]** key for Partition 1.
Press the **[2]** key for Partition 2.
Press the **[3]** key for Partition 3.
Press the **[4]** key for Partition 4.
- 4) Use the **[▼]** key to view subsequent events.
- 5) Press the **[CLEAR]** key to exit.

Once you have entered the Event Record Display, you can change the order that the Event Record screens (see Figure 25: Event Record screens) appear by pressing the **[7]** key. If you already know the number of the event you want to view, press the **[MEM]** key and then enter the event's number.

Figure 25: Event Record screens

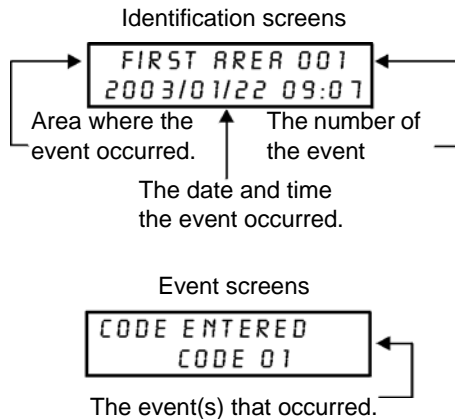

For Grafica keypads:

To view the events, users:


- 1) Enter their **[ACCESS CODE]**.
- 2) Using the scroll keys, highlight **View Status** and then press the center action key (**Ok**).
- 3) Highlight **View Events** and then press the center action key (**Ok**). If the event list appears on the screen go to step 6.
- 4) Highlight **View All Areas** or **Select Area(s)** and then press the center action key (**Ok**).
- 5) If you selected **Select Area(s)** in step 4, highlight the area you wish to view and then press the center action key (**Ok**).
- 6) Use the scroll keys to scroll through the events.

Appendix 1: DGP2-641BL/RB Installation Instructions

1.0 INSTALLATION

The DGP2-641BL/RB is connected to the control panel's combus in a star and/or daisy chain configuration. This 4-wire combus provides power and two-way communication between the control panel and all modules connected to it. Connect the four terminals labeled red, black, green and yellow of each keypad to the corresponding terminals on the control panel (refer to Figure 26 on page 50). Refer to the *DGP-848 Reference & Installation Manual* for the maximum allowable installation distance from the control panel.

See Figure 29 on page 51 for connection drawings for the REX device, locking device and door contact to the desired DGP2-641BL/RB keypad module. A typical installation is shown in Figure 27 on page 50.

 The door contact follows the control panel's EOL definition. When EOL is enabled and the door contact is not used, place a 1kΩ resistor across the keypad's Z1 and BLK input terminals. If EOL is not enabled, use a jumper. If the REX device is not used, place a jumper across the keypad's Z2 and BLK input terminals.

 **Please consider the following when installing the DGP2-641RB:**

- Maintain all DGP2-641RB wiring a minimum of 30cm (12") away from other wiring such as AC power, computer data wiring, telephone wiring, etc.
- Avoid installing within 1.1m (3.5ft.) of computer monitors or CRTs. The minimum distance will vary depending on the type of monitor or CRT.
- Avoid installing in proximity to sources of broad spectrum EMI noise such as motors, pumps, generators, DC to AC converters, uninterruptible power supplies, AC switching relays, light dimmers, computer monitors and CRTs.
- Avoid installing in proximity to potential sources of RF signal transmitters such as cellular phones, two-way radios, etc.

1.1 Mounting the DGP2-641RB on Metal

Although metal may decrease the read range of its built-in reader, the DGP2-641RB can be mounted on metal. However, do not box in or surround the DGP2-641RB with any kind of metal. If the keypad module must be installed in any kind of metal enclosure, ensure that the face of the DGP2-641RB is not covered and that there is at least 4cm (1.6") between the keypad module and the metal on all sides of the DGP2-641RB.

1.2 Connecting Keypad Zones

Each keypad has one traditional hardwired input terminal, allowing you to connect one detector or door contact directly to the keypad. For example, a door contact located at the entry point of an establishment can be wired directly to the input terminal of the entry point keypad instead of wiring the door contact all the way to the control panel.

Connect the device to the keypad's input terminal as shown in Figure 26 on page 50. In order to communicate its status to the control panel, devices connected to the keypad's input terminal must be assigned to a zone in the control panel and the zone's parameters must be defined. For more information on zone assignment, please refer to the section 4 on page 11. Please note that even with the ATZ (zone doubling) feature enabled, the keypad supports only one detection device.

Figure 26 : Connecting the Keypad and Keypad Zone

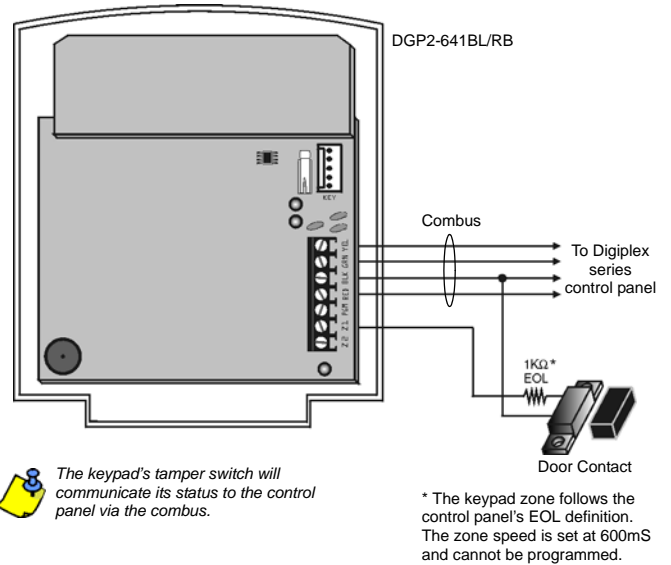


Figure 27 : Typical Access Control Installation

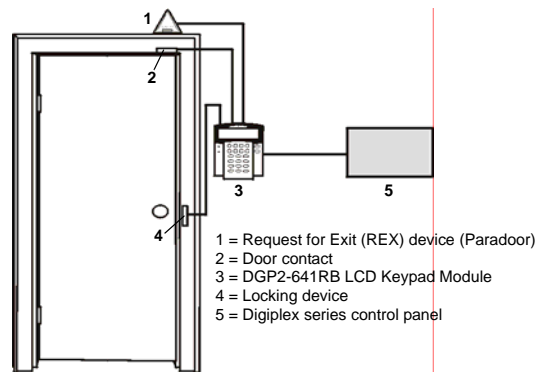


Figure 28 : Access Control Overview


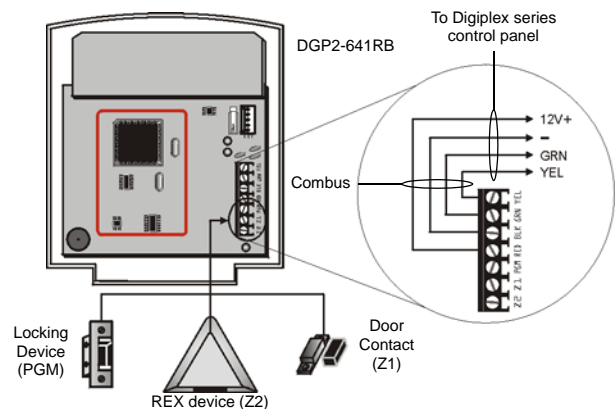


Figure 29 : Access Control Connections

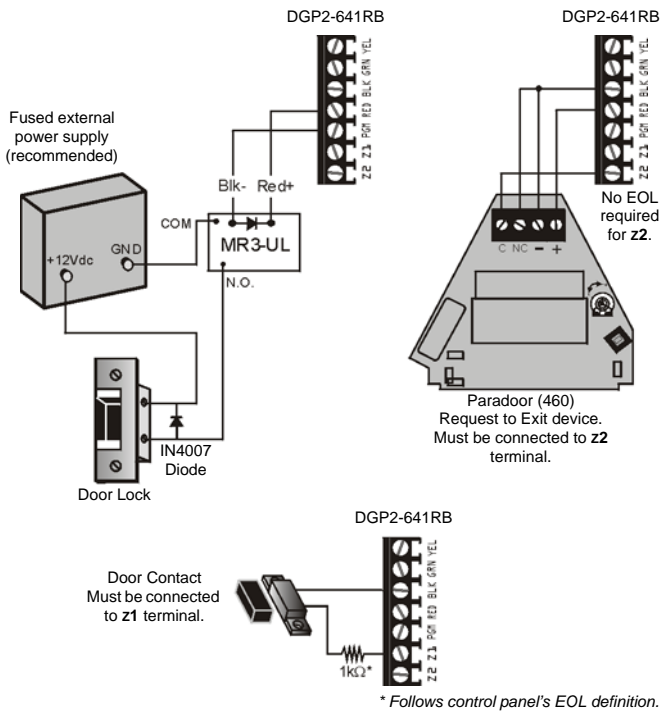

! If a door contact is not being used, install a jumper or a 1kΩ resistor across the BLK and z1 terminals depending on the control panel's EOL definition.
 If the REX (Request for Exit) device is not being used, place a jumper across the BLK and z2 terminals.

2.0 PROGRAMMING

Programming the DGP2-641BL/RB keypad module is simple. Enter Module Programming Mode, enter the desired section followed by the required data. When programming the keypad, use the keypad's programming sheets (found in the *Digiplex Series Modules' Programming Guide*) to keep track of which sections were programmed and how. We strongly recommend you read this entire manual before you begin programming.

This module can also be programmed using the WinLoad Installer Upload/Download Software. For more information, refer to the WinLoad instructions or visit our Web site at www.paradox.ca.

2.1 Entering Module Programming Mode

The keypad, like all other modules in the system, is programmed through the control panel. To do so, you must first enter Module Programming Mode:

- 1) From Normal Mode press and hold the **[0]** key.
- 2) Enter the **[INSTALLER CODE]** (by default 000000).
- 3) Enter section **[953]**.
- 4) Enter the keypad's 8-digit **[SERIAL NUMBER]**.
- 5) Enter the 3-digit **[SECTION]** you want to program.
- 6) Enter the required **[DATA]**.

The control panel will then redirect all programming to the selected keypad. Every time the **[CLEAR]** key is pressed it will revert to the preceding step, unless entering in data in which case it will erase the current data entry. Please note that the serial number is located on the keypad's PC board or enter section **[000]** in Step 3 to view the keypad's serial number.

2.2 Programming Methods

The following methods can be used when programming the keypad:

2.2.1 Feature Select Programming

Some sections are programmed by enabling or disabling options. Within the sections, numbers from **[1]** to **[8]** represent a specific keypad option. Press the key corresponding to the desired option and the digit will appear in the display. This means the option is enabled. Press the key again to remove the digit from the display thereby disabling the option. Press **[ENTER]** when options are set.

2.2.2 Decimal Programming

Some sections require that a decimal value be entered. In this method, any digit from 000 to 255 can be entered.

2.3 Module Broadcast

The control panel's Module Broadcast feature can be used to copy the contents of one keypad to one or many other keypads.

- 1) From Normal Mode press and hold the **[0]** key.
- 2) Enter **[INSTALLER CODE]** (default: 000000).
- 3) Enter section **[954]**.
- 4) Enter the **[SERIAL #]** of the source keypad. The *source* is the programmed keypad whose data you want to copy to other keypads.
- 5) Enter the **[SERIAL #]** of the destination keypads. The *destination* is the keypad(s) you want to program with the source's data. If you want to program more than one keypad with the source's data, enter the serial numbers of the keypads one at a time.
- 6) Once you have entered the serial numbers of the keypads you want to program, press the **[ACC]** key.

3.0 SYSTEM OPTIONS

3.1 Partition Assignment

SECTION [001]: OPTIONS [1] TO [4]

Keypads in the system can be assigned to one or more partitions. Options **[1]** to **[4]** represent partitions 1 through 4 respectively. To assign the keypad to a partition, enable the option that corresponds to the desired partition. *By default, partitions 1 to 4 are enabled.*

3.2 Display Access Code Entry

SECTION [003]: OPTION [1]

The digits of the User Access Codes can be displayed on the LCD screen when they are entered.

Option **[1] OFF**= Digits are replaced by a "****" (default)

Option **[1] ON** = Access Code digits will be displayed

3.3 Display Exit Delay Timer

SECTION [003]: OPTION [2]

Based on the user's needs, an Exit Delay Timer will be programmed to provide the user time to exit the partition before the system is armed. The Exit Delay Timer's countdown can be displayed on the LCD screen.

Option **[2] OFF**= Will not display Exit Delay timer (default)

Option **[2] ON** = LCD screen will display Exit Delay timer

3.4 Display Entry Delay Timer

SECTION [003]: OPTION [3]

The Entry Delay Timer will be programmed to provide the user time to enter their User Access Code before the alarm is triggered. The Entry Delay Timer's countdown can be displayed on the LCD screen.

Option [3] OFF= Will not display the Entry Delay Timer (default)

Option [3] ON = LCD screen will display Entry Delay Timer

3.5 Confidential Mode

SECTION [003]: OPTIONS [4] AND [5]

If Confidential Mode is enabled and no actions are performed on the keypad for a period of time, the LCD will appear as shown in Figure 30 (page 52) and the "AC" and "STATUS" LED will be OFF. The period of time in which no action is performed is defined by the Confidential Mode Timer (005-255 seconds; refer to section section 3.6 on page 52). Confidential Mode is activated by enabling option [4]. Option [5] regulates whether the LCD screen will be activated at the touch of a button or only when an access code is entered.

Once the LCD screen is activated (by code or button), Normal Mode will appear and display the date and time as shown in Figure 30 on page 52. The status of the areas, the open zones for every area the keypad is assigned, the Alarm Memory Display (if necessary) and the Trouble Display (if necessary. See *DGP-848 User Manual*) will also scroll on the LCD screen. *By default, options [4] and [5] are OFF.*

Section [003]:

Option [4] OFF= Normal Mode


Option [4] ON = Confidential Mode

Option [5] OFF= LCD screen activated by entering an access code

Option [5] ON = LCD screen activated by pressing a button

Figure 30 : LCD Screen

 Screen in Normal Mode:



PARADOX SECURITY
2004/06/25 09:07

Screen in Confidential Mode:



CONFIDENTIAL
2004/06/25 09:07

3.6 Confidential Mode Timer

SECTION [007]

Section [007] determines the amount of time without action before the keypad enters Confidential Mode. For more information on Confidential Mode, refer to *Confidential Mode* on page 52.. The Confidential Mode Timer can be set from 005 seconds to 255 seconds. *Default: 120 secs.*

3.7 Time Display Option

SECTION [003]: OPTION [8]

The LCD keypad comes with a time display option that can display the date as year/month/day or as day/month/year.

Option [8] OFF= Date displayed as yy/mm/dd (default)

Option [8] ON = Date displayed as dd/mm/yy

3.8 Muting

SECTION [004]: OPTION [1]

The keypad can be programmed **not** to emit audible sounds, including Chimed zones. During Muting, the keypad will **only** emit the Confirmation Beep, Rejection Beep, and beep when a button is pressed.

Option [1] OFF= Audible sounds (default)

Option [1] ON = Mute

3.9 Beep on Exit Delay

SECTION [004]: OPTION [2]

The keypad can beep once every second during the Exit Delay Timer. During the final 10 seconds, it will beep more rapidly to provide a final warning before the area is armed.

Option [2] OFF= Exit Delay beep disabled

Option [2] ON = Exit Delay beep enabled (default)

3.10 Chime on Zone Closure

SECTION [004]: OPTION [4]

During the Chime Zone Time Period that the user sets, the keypad can emit an intermittent beep whenever a zone with the Chime feature enabled closes (see *DGP-848 User Manual* for details on Chime Zones). If the user does not set the Chime Zone Time Period and this option is enabled, the Chime Zones will always beep upon closure.

Option [4] OFF= Chime on Zone Closure disabled (default)

Option [4] ON = Chime on Zone Closure enabled

3.11 Beep on Trouble

SECTION [005]: OPTIONS [1] TO [4]

Potential troubles have been sorted into groups. With these options enabled, the keypad will emit an intermittent beep tone whenever a trouble condition from the Trouble Groups occurs in the system. The intermittent beep will remain activated until the user enters the *Trouble Display* or if the trouble is resolved. For a list of the troubles, see the *DGP-848 Reference and Installation Manual*. The intermittent beep will be re-initialized whenever the trouble condition re-occurs.

Option [1] OFF= Beep disabled: System Troubles and Clock Loss

Option [1] ON = Beep enabled: System Troubles and Clock Loss

Option [2] OFF= Beep disabled: Communicator Troubles

Option [2] ON = Beep enabled: Communicator Troubles

Option [3] OFF= Beep disabled: Module and Combustion Troubles

Option [3] ON = Beep enabled: Module and Combustion Troubles

Option [4] OFF= Beep disabled: all Zone Troubles

Option [4] ON = Beep enabled: all Zone Troubles

3.12 Keypad Tamper Enable

SECTION [006]: OPTION [5]

With tamper enabled and the on-board tamper switch is triggered, a Tamper report will be sent to the control panel via the combus.

Option [5] OFF= Keypad's tamper is disabled (default)

Option [5] ON = Keypad's tamper is enabled

3.13 Time Format

SECTION [005]: OPTION [7]

This feature determines whether the time shown on the screen will be displayed using the International time format (24Hr. clock) or the US time format (AM/PM).

Option [7] OFF= Time uses the International time format (default).

Option [7] ON = Time uses the US time format.

3.14 Combustion Voltmeter

The combustion voltmeter displays the real-time voltage and verifies if the combustion is supplying sufficient power at the keypad module's location. Readings will appear on the LCD screen. A reading of 10.5V indicates that the voltage is too low. This may occur when too many modules are connected to the combustion, a module is installed too far from the panel or if the system is running on the

battery. In some cases adding an external power supply may correct the situation.

- 1) From Normal Mode press and hold the **[0]** key.
- 2) Enter the **[INSTALLER CODE]** (by default 000000).
- 3) Press **[ACC]**.



The voltage may drop during the control panel battery test.

4.0 PROGRAMMABLE OUTPUT OPTIONS (DGP2-641BL ONLY)

4.1 PGM State

SECTION **[006]**: OPTION **[1]**

The keypad's on-board PGM can be set as normally open or normally closed. When an open PGM is activated, it will close the circuit from ground and enable any devices connected to it. When a closed PGM is activated, it will open the circuit and disable any devices connected to it. When the PGM Activation Event occurs ((see section 4.6)), the PGM will switch to its opposite state (i.e. open to closed or closed to open).

Option [1] OFF =	PGM is Normally Open (default)
Option [1] ON =	PGM is Normally Closed



The PGM can provide 50mA to any device connected to it.

4.2 PGM Deactivation Mode

SECTION **[006]**: OPTION **[2]**

If the keypad is in PGM Timed Mode, the keypad's on-board PGM will be deactivated according to the PGM Timer ((see section 4.5) below) instead of the PGM Deactivation Event.

Option [2] OFF =	Deactivates on PGM Deactivation Event (default)
Option [2] ON =	PGM will deactivate according to the PGM Timer

4.3 PGM Base Time

SECTION **[006]**: OPTION **[3]**

If the keypad's on-board PGM is set in PGM Timed Mode ((see section 4.2) on page 53) you must define whether the value programmed in section **[008]** is in minutes or seconds.

Option [3] OFF =	PGM Base Time is 1 second (default)
Option [3] ON =	PGM Base Time is 1 minute

4.4 PGM Override

SECTION **[006]**: OPTION **[4]**

When the PGM override is enabled, the keypad's on-board PGM will ignore PGM Activation Events (section 4.6), PGM Deactivation Events (section 4.7), and PGM Timers (section 4.5). It will remain in its normal state until the PGM Override is disabled. This option may be used to test the PGM connections.

Option [4] OFF =	PGM Override disabled (default)
Option [4] ON =	PGM Override enabled

4.5 PGM Timer

SECTION **[008]**

If the keypad's on-board PGM is in PGM Timed Mode, the value programmed in section **[008]** represents how long the PGM will remain in its opposite state ((see section 4.1) on page 53) after being activated. To program the timer, enter a 3-digit decimal value (000 to 255) in section **[008]**. The 3-digit value will be multiplied by

the PGM Base Time of 1 second or 1 minute ((see section 4.3) above). Default: 5 seconds.

4.6 PGM Activation Event

SECTIONS **[009]** TO **[012]**

The PGM Activation Event determines which event will activate the keypad's on-board PGM output. The *Event Group* specifies the event, the *Feature Group* identifies the source, and the *Start #* and *End #* sets the range within the Feature Group. Use the PGM Programming Table in the *Digiplex Modules' Programming Guide* to program the keypad's PGM Activation Event.

Enter the sections that correspond to the Event Group, Feature Group, Start # and End # of the PGM and enter the required data.

	Event Group	Feature Group	Start #	End #
PGM	[009]	[010]	[011]	[012]

4.7 PGM Deactivation Event

SECTIONS **[013]** TO **[016]**

If the PGM Deactivation Option (section 4.2) is set to follow the PGM Deactivation event, the PGM will return to its normal state when the event programmed in sections **[013]** to **[016]** occurs. The *Event Group* specifies the event, the *Feature Group* identifies the source, and the *Start #* and *End #* sets the range within the Feature Group. Use the PGM Programming Table in the *Digiplex Modules' Programming Guide* to program the keypad's PGM Activation Event.

Enter the sections that correspond to the Event Group, Feature Group, Start # and End # of the PGM and enter the required data.

	Event Group	Feature Group	Start #	End #
PGM	[013]	[014]	[015]	[016]

5.0 ACCESS CONTROL OPTIONS (DGP2-641RB ONLY)

5.1 Assigning Doors To Partitions

SECTION **[002]**: OPTIONS **[1]** TO **[4]**

Although the keypad can be programmed to display the status of various partitions, the Access Control door can be assigned to one or more partition(s) in the alarm system. This means that the actions performed with the Access Control Card will be directly linked to the partition(s) assigned to that door. For example, the keypad is assigned to all four partitions ((see section 3.1) on page 51), but the door is assigned to Partition 2. When the user presents the Access Control Card to the door's reader to arm the partition, only Partition 2 will arm.

Option **[1]** ON = Door assigned to Partition 1 (default)
 Option **[2]** ON = Door assigned to Partition 2
 Option **[3]** ON = Door assigned to Partition 3
 Option **[4]** ON = Door assigned to Partition 4
 OFF = Access Control Cards will not be able to arm and/or disarm partitions from the door's reader

5.2 Door Lock Options

The Door Lock Options allow you to program the door lock to suit its environment or security requirements.

5.2.1 Unlock on REX (Request For Exit)

SECTION **[006]**: OPTION **[8]**

When the REX device detects movement, it can permit passage with or without turning the door handle. If this option is on, the door is

unlocked when the REX device detects movement and users on either side of the door will be able to open the door. If this option is off, the door will unlock once the handle is turned only on the REX device's side.

Option [8] OFF = Unlock on REX disabled (default)
 Option [8] ON = Unlock on REX enabled

5.2.2 Door Unlocked Period

SECTION [008]

The Door Unlocked Period is the time the door can remain unlatched after access is granted or after a Request for Exit is received. Enter any value between 001 and 255 to determine the seconds the door can remain unlatched. *Default = 5 secs.*

5.2.3 Door Unlocked Period Extension

SECTION [009]

The Door Unlocked Period Extension is the amount of time added to the Door Unlocked Period in section [008], which leaves the door unlatched longer. This will allow those with this feature enabled on their User Access Codes extra time to enter, which may be useful for the physically challenged or for seniors. Enter any value between 001 and 255 to determine the number of seconds to be added to the time programmed in section [008]. *Default = 15 secs.*

5.2.4 Relock Door

SECTION [006]: OPTION [6]

The locking device will remain unlatched during the Door Unlocked Period ((see section 5.2.2) on page 54), but once the door is opened it can be programmed to latch as soon as the door closes or latch immediately even if the door has not closed.

Option [6] OFF = Locking device latches immediately (default)
 Option [6] ON = Locking device latches when door closes

5.2.5 Door Unlocked Schedule

SECTION [017]

The Door Unlocked Schedule determines the hours, days, and holidays that the door will remain unlocked. Therefore, users will not have to present their Access Control Cards to the reader in order to gain access to an Access Control Door during the Door Unlocked Schedule. The schedule consists of two programmable time periods called "Intervals" that determine the time of day and which days the users will be granted access. When a schedule is programmed with "H", users will have access during the days programmed in the control panel (refer to the *DGP-848* or *Reference & Installation Manual*). Program the Start Time and End Time according to the 24-hour clock within the same day. Use *Feature Select Programming* to set the options representing the Days.

Option	Day	Option	Day
[1]	Sunday (S)	[5]	Thursday (T)
[2]	Monday (M)	[6]	Friday (F)
[3]	Tuesday (T)	[7]	Saturday (S)
[4]	Wednesday (W)	[8]	Holidays (H)

For example, program:

- Interval A: Start time **07:00**, End time **16:00**, Days **M, T, W, T, & F**
- Interval B: Start time **10:00**, End time **17:00**, Days **S, S, & H**

The door will stay unlocked on Monday, Tuesday, Wednesday, Thursday, and Friday between 7AM and 4PM and on Saturday,

Sunday, and Holidays between 10AM and 5PM. Therefore, users will not have to present their Access Control Cards during the Door Unlocked Schedule.

5.2.6 Card Activates Door Unlocked Schedule

SECTION [006]: OPTION [1]

When the *Door Unlocked Schedule* is programmed and this option is enabled, the door is locked until the first valid Access Control Card is presented. Once the door is unlocked, it will remain unlocked until the end of the schedule.

Example: The schedule is 7AM to 5PM Monday to Friday, option [1] is enabled, and a valid Access Control Card is presented to the reader at 8AM on Monday. Although the schedule started at 7AM, the door remained locked from 7AM to 8AM. Once access was granted at 8AM, the door remained unlocked until 5PM.

Option [1] OFF = The Schedule activates without Card
 Option [1] ON = Card activates Door Unlocked Schedule (default)

5.3 Door Left Open Options

The Door Left Open Options allow you to program how the system will react to an Access Control door left open.

5.3.1 Door Left Open Access Alarm

SECTION [006]: OPTION [2]

When an Access Control door is opened after an Access Granted or a Request for Exit, an Access Alarm can be generated if it is not closed within a certain period of time ((see section 5.3.2) on page 54). When the Door Left Open Alarm is disabled, the following sections are also disabled:

Section	
[004]	Option [3] Door Left Open Pre-alarm
	Option [5] Door Left Open Alarm
	Option [6] Door Left Open Alarm follows
[010]	Door Left Open Interval
[011]	Door Left Open Pre-alarm Timer
[012]	Beep Timer for Door Left Open Alarm

Option [2] OFF = Door Left Open Alarm won't be generated (default)

Option [2] ON = Door Left Open Alarm is enabled

5.3.2 Door Left Open Interval Before Access Alarm

SECTION [010]

The Door Left Open Interval is the time that a door can remain open after an Access Granted or a Request for Exit without generating an Access Alarm. Enter any value between 001 and 255 to determine the number of seconds the door may remain open before the Access Alarm is triggered. *Default = 60 secs.*

5.3.3 Door Left Open Pre-Alarm

SECTION [004]: OPTION [3]

If an Access Control door is programmed with a Door Left Open Interval ((see section 5.3.2) above), the Pre-Alarm will cause the reader to beep a certain time before the end of the Door Left Open Interval to alert users that the Access Control door was left open and will generate an Access Alarm if it is not closed. The Pre-Alarm beeps slower than the Door Left Open Alarm (about twice every second). Program the Pre-Alarm timer in section [011].


Option [3] OFF = The Pre-Alarm will not be generated
 Option [3] ON = Pre-Alarm is enabled (default)

5.3.4 Door Left Open Pre-Alarm Timer

SECTION [011]

This timer will trigger the Door Left Open Pre-Alarm before the end of the Door Left Open Interval ((see section 5.3.3) above). For example, if 60 seconds is programmed in section [010] and 15 seconds is programmed in section [011], the reader will start beeping after the door has been open for 45 seconds (60 - 15 = 45 seconds). Enter any value between 001 and 255 to determine the seconds before the expiry of the Door Left Open Interval that the reader will beep. *Default = 15 seconds.*

Figure 31 : Pre-Alarm example

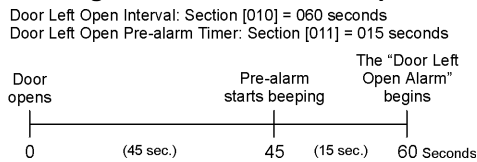

5.3.5 Door Left Open Alarm Feedback

SECTION [004]: OPTIONS [5] AND [6]

An Access Control door is programmed with a Door Left Open Interval ((see section 5.3.2) on page 54). Once this interval has expired, the Door Left Open Alarm can be either audible or silent and will either beep as long as the Access Alarm is occurring or follow the Beep Timer in section [012]. The sound of the Door Left Open Alarm resembles the rapid beep generated during the last ten seconds of the Exit Delay. When the door is closed during an Access Alarm, the Door Left Open Restore event can be logged in the Event Buffer.

Option [5] OFF = The Door Left Open Alarm is silent
Option [5] ON = The Door Left Open Alarm is audible (default)

If option [5] is enabled:

Option [6] OFF = Beep as long as the Door Left Open Alarm is occurring (default)

Option [6] ON = Door Left Open Alarm follows Beep Timer (section [012])

5.3.6 Beep Timer For Door Left Open Alarm

SECTION [012]

This beep timer determines the amount of time the Door Left Open Alarm will beep. Once the Door Left Open Interval ((see section 5.3.2) on page 54) has expired, the Door Left Open Alarm ((see section 5.3.5) on page 55) will be triggered. Enter any value between 001 and 255 to determine the number of seconds the Access Alarm will beep. *Default = 5 seconds.*

5.4 Door Forced Open Options

The Door Forced Open Options allow you to program how the system will react when an Access Control door is opened without a "Request for Exit" or "Access Granted" signal.

5.4.1 Door Forced Open Access Alarm

SECTION [006]: OPTION [3]

If an Access Control door is opened without an Access Control Card, a User Access Code or receiving a Request for Exit, an Access Alarm can be generated. A Burglar Alarm can also be generated. When the door is closed during an Access Alarm, the Door Forced Open Restore event can be logged in the Event Buffer. When the Door Forced Open Alarm is disabled, the following sections are also disabled:

Section	
[004]	Option [7] Door Forced Open Alarm
	Option [8] Door Forced Open Alarm follows
[013]	Beep Timer for Door Forced Open Alarm

Option [3] OFF = Door Forced Open Alarm is disabled (default)

Option [3] ON = Door Forced Open Alarm is enabled

5.4.2 Door Forced Open Feedback

SECTION [004]: OPTIONS [7] AND [8]

The Access Alarm can be either audible or silent and will either beep as long as the Access Alarm is occurring or follow the Beep Timer in section [013]. The sound of the Door Forced Open Alarm resembles the rapid beep generated during the last ten seconds of the Exit Delay.

Option [7] OFF = Door Forced Open Alarm is silent

Option [7] ON = Door Forced Open Alarm is audible (default)

If option [7] is enabled:

Option [8] OFF = Will beep as long as Door Forced Open Alarm is occurring (default)

Option [8] ON = Door Forced Open Alarm follows Beep Timer. (section [013])

5.4.3 Beep Timer For Door Forced Open Alarm

SECTION [013]

This Beep Timer determines the amount of time the Door Forced Open Alarm ((see section 5.4.2) above) will beep. Enter any value between 001 and 255 to determine the number of seconds the Door Forced Open Alarm will beep. *Default = 5 seconds.*

5.5 PIN Entry ON Keypad

SECTION [006]: OPTION [4]

If the *Card and Code Access* option is enabled in the DGP-NE96 control panel (refer to the *Access Control* section in the *DGP-NE96 Reference & Installation Manual*), users must present their access control card and then enter their PIN on the DGP2-641RB keypad to gain access. The PIN Entry on Keypad option cannot be turned ON and will always be OFF.

6.0 MESSAGE PROGRAMMING

SECTIONS [101] TO [396]

Each section from [101] to [396] contains one message with a maximum of 16 characters. For more details and to record any changes, use the *Digiplex Series Modules' Programming Guide*.

Section [101] to [148] = Zone 01 to Zone 48 respectively

Section [200] = Paradox Family

Section [201] to [204] = First, Second, Third, & Fourth Area (partition) respectively

Section [301] to [396] = Code 01 to Code 96 respectively

After entering the section corresponding to the desired message, the message can be re-programmed to suit your installation needs as detailed in Table 14: *Message Programming*. For example, section [101] "ZONE 01" can be changed to "FRONT DOOR"

Table 14: Message Programming

Key	Press Key Once	Press Key Twice	Press Key Three Times
[1]	A	B	C
[2]	D	E	F
[3]	G	H	I
[4]	J	K	L
[5]	M	N	O
[6]	P	Q	R
[7]	S	T	U
[8]	V	W	X
[9]	Y	Z	

Also, see special functions on the next page.

[STAY] - Insert Space

Pressing the **[STAY]** key inserts a blank space in the current cursor position.

[FORCE] - Delete

Pressing the **[FORCE]** key will delete the character or blank space found at the current cursor position.

[ARM] - Delete Until the End

Pressing the **[ARM]** key will delete all characters and spaces to the right of the cursor and at the cursor's position.

[DISARM] - Numeric Keys / Alphanumeric Keys

Every time the **[DISARM]** key is pressed it will toggle numeric keys to alphanumeric keys and vice versa. Numeric: Keys **[0]** to **[9]** represent numbers 0 to 9.

[BYP] - Lower Case / Upper Case

Every time the **[BYP]** key is pressed it will toggle the case setting from lower to upper case and vice versa.

[MEM] - Special Characters

After pressing the **[MEM]** key, the cursor will turn into a flashing black square. Using Table 7 on page 15, enter the 3-digit number that represents the desired symbol.

7.0 PROGRAMMING SECTIONS

△ = Default setting

SECTION [001]: Keypad Partition Assignment			
Option		OFF	ON
[1]	Partition 1	<input type="checkbox"/> Disabled	△ Enabled
[2]	Partition 2	<input type="checkbox"/> Disabled	△ Enabled
[3]	Partition 3	<input type="checkbox"/> Disabled	△ Enabled
[4]	Partition 4	<input type="checkbox"/> Disabled	△ Enabled
[5]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[6]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[7]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[8]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A

SECTION [002]: Assigning Doors to Partitions			
Option		OFF	ON
[1]	Door Assigned to Partition 1	<input type="checkbox"/> Disabled	△ Enabled
[2]	Door Assigned to Partition 2	△ Disabled	<input type="checkbox"/> Enabled
[3]	Door Assigned to Partition 3	△ Disabled	<input type="checkbox"/> Enabled
[4]	Door Assigned to Partition 4	△ Disabled	<input type="checkbox"/> Enabled
[5]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[6]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[7]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[8]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A

SECTION [005]: Beep on Trouble			
Option		OFF	ON
[1]	System & Clock Trouble Beep	△ Disabled	<input type="checkbox"/> Enabled
[2]	Communicator Trouble Beep	△ Disabled	<input type="checkbox"/> Enabled
[3]	Module & Combustion Trouble Beep	△ Disabled	<input type="checkbox"/> Enabled
[4]	All Zone Trouble Beep	△ Disabled	<input type="checkbox"/> Enabled
[5]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[6]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[7]	Time Format	△ 24Hr. clock	<input type="checkbox"/> 12Hr. clock
[8]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A

SECTION [006]: General Options 3 for the DGP2-641BL Only			
Option		OFF	ON
[1]	PGM Status	△ N.O.	<input type="checkbox"/> N.C.
[2]	PGM Deactivation Mode	△ Deactivation event	<input type="checkbox"/> PGM Timer
[3]	PGM Base Time	△ Seconds	<input type="checkbox"/> Minutes
[4]	PGM Override	△ Disabled	<input type="checkbox"/> Enabled
[5]	Keypad Tamper	△ Disabled	<input type="checkbox"/> Enabled
[6]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[7]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[8]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A

SECTION [006]: General Options 3 for the DGP2-641RB Only			
Option		OFF	ON
[1]	Card Activates Door Unlocked Schedule	<input type="checkbox"/> Disabled	△ Enabled
[2]	Door Left Open Alarm	△ Disabled	<input type="checkbox"/> Enabled
[3]	Door Forced Open Alarm	△ Disabled	<input type="checkbox"/> Enabled
[4]	PIN Entry On Keypad*	△ Enabled	
[5]	Keypad Tamper	△ Disabled	<input type="checkbox"/> Enabled
[6]	Relock Door	△ Disabled	<input type="checkbox"/> Enabled
[7]	Future use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[8]	Unlock on REX	△ Disabled	<input type="checkbox"/> Enabled

SECTION [004]: General Options 2			
Option		OFF	ON
[1]	Muting	△ Disabled	<input type="checkbox"/> Enabled
[2]	Exit Delay Beep	<input type="checkbox"/> Disabled	△ Enabled
[3]	Door Left Open Pre-Alarm	<input type="checkbox"/> Disabled	△ Enabled
[4]	Chime on Zone Closure	△ Disabled	<input type="checkbox"/> Enabled
[5]	Door Left Open Alarm Feedback	<input type="checkbox"/> Silent	△ Audible
[6]	Door Left Open Alarm Follows	△ Alarm restore	<input type="checkbox"/> Beep Timer
[7]	Door Forced Alarm	<input type="checkbox"/> Silent	△ Audible
[8]	Door Forced Alarm	△ Alarm restore	<input type="checkbox"/> Beep Timer



* This option cannot be turned ON and will always remain OFF.

Index

A

AC Power	2
Access Alarm	41
Access Card	41
Access Card Assignment	40
Access Control feature	39
Access Control Terms	41
Access Level	42
Access Level Assignment	39
Account Codes	27
Activate Card	39
Ademco Contact ID	27
Ademco Express	27
Advanced Technology Zoning (ATZ)	16
Alarm	
<i>On Door Left Open</i>	43
<i>On Forced Door</i>	43
Alarm Transmission Delay. See Delay Alarm Transmission	
Alarm Types	14
Alternate Backup Option	28
Always Force Arm When Regular Arming	21
AND Door Access Mode	41
Answer WinLoad	36
Arm Only	39
Armed Access Doors	40
Arming methods	45
Arming with Access Card	40
<i>Skip Exit Delay</i>	43
Assigning keyswitches to partitions	18
ATZ	16
Audible Alarm	
<i>Bell Cut-off Timer</i>	22
<i>Pulsed</i>	14
<i>Steady</i>	14
<i>Tamper Recognition</i>	23
<i>Wireless Transmitter Supervision</i>	22
Auto Zone Shutdown	13
<i>Limit</i>	13
Auto-Arming	
<i>No Movement</i>	20
<i>No Movement Timer</i>	20
<i>Timed</i>	19
<i>Timer</i>	19
Automatic Event Buffer Transmission	44
Auxiliary Power	2
<i>Auxiliary Output</i>	2
<i>Calculating power consumption</i>	4
<i>Power Limitations</i>	4
<i>Power Supply Connections</i>	5
<i>Troubles</i>	48
Away Arming. See Force Arming	
Away Zones. See Force Zones	

B

Backlight	47
Battery	2
<i>Battery Test</i>	2
Battery Charge Current	35
Bell	

<i>Bell terminals</i>	2
<i>Bell/siren Output</i>	2
<i>Bell/Siren Output During Fire Alarm</i>	13
<i>Sirens</i>	2
<i>Troubles</i>	47
Bell Current Limit Trouble, Clearing	48
Broadcast	37
Burglar Alarm	
<i>On Door Left Open</i>	43
<i>On Forced Door</i>	43
Burglary Zones	12
Buzzer Zones	12
Bypass Programming	46
Bypass Recall	46
Bypass Zones	14

C

Call Direction	27
Call WinLoad	36
Cancel Communication	36
Chime Zones	46
CleanMeTM	7
Clear Bell Current Limit Trouble	48
Clock Loss	
<i>Access during Clock Loss</i>	43
Closing Delinquency	29
Codes	
<i>Alarm Report Codes</i>	25
<i>Arming Report Codes</i>	25
<i>Disarming Report Codes</i>	25
<i>Special Alarm Report Codes</i>	25
<i>Special Arming Report Codes</i>	25
<i>Special Disarming Report Codes</i>	25
<i>Special Tamper Report Codes</i>	26
<i>System Trouble Codes</i>	26
<i>System Trouble Restore Codes</i>	26
<i>Zone Restore Report Codes</i>	25
<i>Zone Tamper Report Codes</i>	26
<i>Zone Tamper Restore Codes</i>	26

Connections

<i>Advanced Technology Zone (ATZ)</i>	16
<i>Bell/siren Output</i>	2
<i>Double Zone Connections</i>	7, 16
<i>in Noisy Environments</i>	6
<i>Keypad Zone Connections</i>	7
<i>Keyswitch Connections</i>	7
<i>Network Connections</i>	6
<i>PGM</i>	6
<i>Power</i>	2
<i>Single Zone Connections</i>	6
<i>Telephone Line Connections</i>	2

Contrast	47
Control Panel Programming Mode	9
Current setting for charging battery	35

D

Daylight Savings Time	36
Delay Alarm Transmission	14
Delay Alarm Transmission Timer	14
Delay Between Dialing Attempts	28
Delayed 24Hr Fire Zone	12
Digiplex Memory Key. See Paradox Memory Key	

Disabled	
<i>Wireless Transmitter Supervision</i>	22
Disarm with Access Card	40
Door Access Mode	41
Door Forced Open Restore event	42
Door Left Open	41
Door Left Open Restore event	42
Doors	
<i>Access During Clock Loss</i>	43
<i>Assigning The Keypad To A Door</i>	41
<i>Burglar Alarm On Door Left Open</i>	43
<i>Burglar Alarm On Forced Door</i>	43
Double Zone Connections	7
Duress	39
E	
Earth Ground	2
Enable Reporting	25
Entry Delay Timers	12
Entry Delay zones	12
EOL Zones	16
ESL CleanMeTM Installation	7
Event Buffer	
<i>Log Door Forced Open Restore In Event Buffer</i>	42
<i>Log Door Left Open Restore In Event Buffer</i>	42
<i>Log Request For Exit In Event Buffer</i>	42
Event Record Display	49
Everyday arming. See Regular Arming	
Exit Delay	20
Exit Delay cancelled on Remote Arm	20
Exit Delay Termination	20
Extended Unlocked Period	40
F	
Feature Select Programming	9
Fire Circuits	7
Fire Zone	7
Fire Zone, Delayed 24hr.	12
Fire Zone, Standard 24hr.	13
Follow zone	12
Force Arm When Regular Arming, Always	21
Force Arming	45
Force Zones	14
Forced Door	41
Function Keys, Installer	36
G	
Ground	2
H	
Hardware Reset	35
Holiday Programming	42
Hourly Test Transmission	28
I	
Identifier, Panel	44
Input Numbers	
<i>Keyswitch Numbering</i>	17
<i>Zone Numbering</i>	12
Input Speed	16
Installer Code	38
Installer Function Keys	36

Installer Lock	36
Installer Test Mode	36
Instant Arming	45
Instant Arming with Delay	45
Instant zone	12
Intellizone	14

K

Keypad connections. See Connections	
Keypad Lockout	20
Keypad Zone Connections	7
Keyswitch	
<i>Arm/Disarm</i>	18
<i>Connections</i>	7
<i>Definitions</i>	17, 18
<i>Disabled</i>	18
<i>Keyswitch Numbering</i>	17
<i>Maintained</i>	18
<i>Momentary</i>	18
<i>Options</i>	17, 18
<i>Partition Assignment</i>	17, 18
<i>Stay/Instant Disarm</i>	18

L

Labels, Zone	14
LCD Display	
<i>Confidential Mode</i>	46
<i>Keypad Settings</i>	47
<i>Shabbat Feature</i>	36
Locate Module	36
Location & Mounting	2
Logging Access Control Events	42

M

Master Feature	39
Maximum Dialing Attempts	28
Memory Key	10
Module Programming Mode	9
Module Scan	36
Multiple Action Feature	40

N

Network Connections	6
<i>in Noisy Environments</i>	6
No Bell Cut-Off on Fire Alarm	22
No Exit Delay on Remote Arm	20

O

One-touch Features	20
OR Door Access Mode	41

P

Pager Reporting Format	27
Panel Answer Options	44
Panel Identifier	44
Panel Partition Assignment	36
Panel Programming Mode	9
Panic Options	23
Paradox Memory Key	10
Partitioning	36
PCB Layout	3
PGM	6
<i>As a 2-wire smoke detector</i>	7

As a 4-wire smoke detector	8
Connections	6
PGM Activation Event	30
PGM Deactivation Event	31
PGM Delay Timers	31
PGM Programming Table	32–35
PGM Time Base Selection	31
Relay	6
Power Supply Connections	5
Problems. See Trouble Display	
Programmable Outputs. See PGM	
Programming	9
Decimal Programming	9
Feature Select Method	9
Hexadecimal Programming	9
Level Programming	10
Modules	9, 37
Panel Programming Mode	9
Paradox Memory Key	10
Zone Programming	11
Pulse formats. See Standard Pulse Formats	
Pulsed Audible Alarm	14
R	
Record REX events	42
Record the Door Forced Open Restore events	42
Record the Door Left Open Restore events	42
Record. See Event Record Display	
Recycle Alarm	22
Recycle Delay	22
Regular Arming	45
Report Only	14
Reporting Formats	27
Request for Exit (REX) event	42
Reset	
Hardware	35
Module	36
Software	35
System Master Code Reset	38
Restrict Arming on	
Power Failure	19
Supervision Loss	19
Tamper	19
Ring-back	21
S	
Schedule	42
Schedule Assignment	39
Scrolling Speed	47
Shabbat Feature	36
SIA FSK	27
Silent Alarm	14
Tamper Recognition	23
Sirens	2
Skip Exit Delay When Arming With Card	43
Smoke Detector	7
CleanMe™ feature	7
Special Characters	14
Special Telephone Number Keys	27
Standard 24Hr Fire Zone	13
Standard Pulse Formats	27
Stay Arming	45
Stay Arming with Delay	45

Stay Delay zone	13
Stay Zones	14
Supervision Bypass Options	22
Swinger Shutdown. See Auto Zone Shutdown	
System Master Code Reset	38
System Settings & Commands	35

T

Tamper	22
Tamper Bypass Options	23
Tamper Recognition	
Audible Alarm	23
Disabled	22
Follow Zone's Alarm Type	23
Trouble only	23
Telephone Line Connection	2
Test Report	36
TLM Fail Timer	29
Transformer	2
Trouble Display	47
Trouble Latch	48
Troubles	47

W

WinLoad	44
Answer WinLoad	36, 44
Call WinLoad	36, 44
Cancel Communication	36
Wireless Transmitter Supervision Options	22

Z

Zone Labels	14
Zones	
24Hr Burglary zone	12
24Hr Buzzer	12
Alarm Transmission Delay	14
Bypass	14
Clearing a Zone's Numbering	12
Connections	6
Definition	11, 12
Delayed 24Hr Fire Zone	12
Disabled	12
Doubling	16
Entry Delay	12
EOL	16
Follow	12
Force Zone	14
Generates a report only	14
Input Speed	16
Instant	12
Intellizone	14
Options	11
Partition Assignment	11, 13
Pulsed Audible Alarm	14
Silent Alarm	14
Standard 24Hr Fire Zone	13
Stay Delay zone	13
Stay Zone	14
Steady Audible Alarm	14
Zone Doubling (ATZ)	16
Zone Numbering	11, 12
Zone Options	13
Zone Parameters	11

Warnings

FCC Warnings

Important Information

This equipment complies with Part 68 of the FCC rules subpart D and CS-03. Inside the cover of this equipment is a label that contains, among other information, the FCC registration number of this equipment.

Notification To Telephone Company

Upon request, customer shall notify telephone company of particular line to which the connection will be made and provide the FCC registration number and the ringer equivalence of the protective circuit.

FCC REGISTRATION NUMBER: 5A7CAN-22633 - AL - E
RINGER EQUIVALENCE NUMBER: 0.1B (U.S. & CANADA)
USOC JACK: RJ31X (USA), CA31A (CANADA)

Telephone Connection Requirements

Except for telephone company provided ringers, all connections to the telephone network shall be made through standard plugs and telephone company provided jacks, or equivalent, in such a manner as to allow for easy, immediate disconnection of terminal equipment. Standard jacks shall be so arranged that, if plug connected thereto is withdrawn, no interference to operation of equipment at customer's premises which remains connected to telephone network shall occur by reason of such withdrawal.

Incidence Of Harm

Should terminal equipment/protective circuitry cause harm to telephone network, telephone company shall, where practicable, notify customer that temporary disconnection of service may be required; however, where prior notice is not practicable, the telephone company may temporarily discontinue service if action is deemed reasonable in circumstances. In case of temporary discontinuance, telephone company shall promptly notify customer and will be given opportunity to correct the situation.

Changes In Telephone Company Equipment Or Facilities

The telephone company may make changes in its communication facilities, equipment operations or procedures, where such actions are reasonably required and proper in its business. Should any such changes render customer's terminal equipment incompatible with the telephone company facilities, the customer shall be given adequate notice to effect the modifications to maintain uninterrupted service.

General

This equipment shall not be used on coin telephone lines. Connection to party line service is subject to state tariffs.

Ringer Equivalence Number (REN)

The REN is useful to determine the quantity of devices that you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, sum of the REN's of all devices connected to one line should not exceed five (5). To be certain of the number of devices that you may connect to your line, you may want to contact your local telephone company.

Equipment Maintenance Facility

If you experience trouble with this telephone equipment, please contact facility indicated below for information on obtaining service or repairs. The telephone company may ask that you disconnect this equipment from network until problem is corrected or until you are sure that the equipment is not malfunctioning.

FCC Part 15, Warnings: Information To User

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate

radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to equipment intermittently, the user is encouraged to try to correct the interference by one or more of the following measures: (1) reorient or relocate the receiving antenna; (2) increase the separation between the equipment and receiver; (3) connect the equipment to an outlet on a circuit other than the one to which the receiver is connected, or (4) consult the dealer or an experienced radio/tv technician for assistance.

Caution:

Changes or modifications not expressly approved by PARADOX SECURITY SYSTEMS could void the user's authority to operate the equipment.

CTR-21 Warnings

The equipment has been approved in accordance with Council Decision 98/482/EC for pan-European single terminal connection to the public switched telephone network (PSTN). However, due to differences between the individual PSTNs provided in different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN network termination point. In the event of problems, you should contact your equipment supplier in the first instance.

General Warning

This equipment must be installed and maintained by qualified service personnel only.

UL and C-UL Warnings

UL AND C-UL INSTALLATION NOTES

This equipment is UL listed in accordance with standard UL1023 (Household Burglar -- Alarm Systems Units), standard UL985 (Household Fire Warning Units) and standard CAN/C-UL S545 (Residential Fire Warning System Control Units). This equipment has the capability of being programmed with features not verified for use in UL installations. To stay within these standards, the installer should use the following guidelines when configuring the system:

- All components of the system should be UL listed for the intended application.
- If the system will be used for "Fire" detection, the installer should refer to NFPA Standards #72, Chapter 2. In addition, once installation is complete, the local fire authority must be notified of the installation.
- This equipment must be verified by a qualified technician once every three years.
- All keypads must use a tamper switch.
- Maximum allowed entry delay is 45 seconds.
- Maximum allowed exit delay is 60 seconds.
- Minimum 4 minutes for bell cut-off time.
- The following features do not comply with UL requirements: Bypass Recall, Shabbat, Auto Trouble Shutdown, and "No AC Fail" display.
- Do not connect the primary indicating device to a relay. The installer must use the bell output.
- The metallic enclosure that houses the Digiplex control panel must be grounded to the cold water pipe.
- Use a UL/C-UL listed Siren: Wheelock model# 46T-12.
- Use a UL/C-UL listed 12Vdc 7Ah rechargeable battery: YUASA model# NP7-12.
- Transformer requirements: UL listed transformer - 16VAC 40VA
UL listed universal transformer model #:UB1640W
- The AUX, PGM and Keypad's maximum current cannot exceed 200mA for UL installations.

All outputs are Class 2 or power-limited, except for the battery terminal. The Class 2 and power-limited fire alarm circuits shall be installed using CL3,

CL3R, CL3P, or substitute cable permitted by the National Electrical Code, ANSI/NFPA 70.

Warranty

Paradox Security Systems Ltd. ("Seller") warrants its products to be free from defects in materials and workmanship under normal use for a period of one year. Except as specifically stated herein, all express or implied warranties whatsoever, statutory or otherwise, including without limitation, any implied warranty of merchantability and fitness for a particular purpose, are expressly excluded. Because Seller does not install or connect the products and because the products may be used in conjunction with products not manufactured by Seller, Seller cannot guarantee the performance of the security system and shall not be responsible for circumstances resulting from the product's inability to operate. Seller obligation and liability under this warranty is expressly limited to repairing or replacing, at Seller's option, any product not meeting the specifications. Returns must include proof of purchase and be within the warranty period. In no event shall the Seller be liable to the buyer or any other person for any loss or damages whether direct or indirect or consequential or incidental, including without limitation, any damages for lost profits stolen goods, or claims by any other party, caused by defective goods or otherwise arising from the improper, incorrect or otherwise faulty installation or use of the merchandise sold.

Notwithstanding the preceding paragraph, the Seller's maximum liability will be strictly limited to the purchase price of the defective product. Your use of this product signifies your acceptance of this warranty.

BEWARE: Dealers, installers and/or others selling the product are not authorized to modify this warranty or make additional warranties that are binding on the Seller.

ATTACHMENT LIMITATION NOTICE

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all of the devices does not exceed 100. Industry Canada certification is only applicable to installation of devices which include transformers approved by the Canadian Standards Association (CSA).

© 2003-2004 Paradox Security Systems Ltd. All rights reserved. Specifications may change without prior notice. One or more of the following US patents may apply: 6215399, 6111256, 5751803, 5721542, 5287111, 5119069, 5077549, 5920259 and 5886632. Canadian and international patents may also apply.

Digiplex, Grafica, InTouch, Magellan and WinLoad are trademarks or registered trademarks of Paradox Security Systems Ltd. or its affiliates in Canada, the United States and/or other countries.

P ▲ R ▲ D O X[®]
S E C U R I T Y S Y S T E M S

780 Industriel Blvd., Saint-Eustache (Quebec) J7R 5V3 CANADA
Tel.: 450 491-7444 paradox.com Fax: 450 491-2313

Printed in Canada - 06/2006

DGP848-EI06